

**HR**

**UPUTE ZA UPORABU**

**EN**

**OWNER'S MANUAL**

**MIKROVALNE PEĆNICE  
MICROWAVE OVENS**



**M20BM  
M20IEG  
M20BEG**

**KONČAR**

## UPUTE ZA UPORABU

POŠTOVANI KUPCI! Najljepše vam zahvaljujemo na povjerenju koje ste nam ukazali kupnjom našeg proizvoda. **Nakon primitka proizvod raspakirajte, a ambalažni materijal (plastičnu foliju, stiropor, drvo...) stavite izvan dohvata djece kako se ne bi ozlijedila, progutala manje komade ili se ugušila plastičnom folijom.** Provjerite je li proizvod neoštećen, a ako je oštećen pri transportu, obavijestite o tome prodavača čije ćete podatke naći na dostavnici ili računu.

Za vaše lakše snalaženje pri uporabi proizvoda pripremili smo ove upute za uporabu. **PAŽLJIVO SAČUVAJTE OVE UPUTE.** Molimo vas da ih pomno pročitate jer ćete tako izbjeći greške, povećati uporabno trajanje proizvoda, štedjeti energiju i novac.

**U uputama za uporabu opisani su različiti tipovi aparata koji se međusobno razlikuju po opremljenosti i načinu rada, zbog čega su uključena i neka poglavlja koja za vaš aparat ne vrijede.**

## ZAŠTITA OKOLIŠA

Ambalaža je izrađena tako da ne ugrožava okoliš; ambalažni materijal je ekološki i može se preraditi, odnosno reciklirati. Recikliranjem ambalaže štedi se na sirovinama i smanjuje količina industrijskog i kućanskog otpada.



Sukladno Direktivi o otpadnoj električnoj i elektroničkoj opremi (WEEE) Europske unije, otpadna električna i elektronička oprema treba se odvojeno sakupljati i zbrinjavati. Simbol s lijeve strane znači da se električni i elektronički aparati na kraju njihova uporabnog vijeka ne smiju odbacivati zajedno s ostalim kućnim otpadom. Molimo da ovaj aparat predate lokalnoj tvrtki koja se bavi zbrinjavanjem otpada ili ga odnosi u reciklažno dvorište.

**Ovaj aparat je namijenjen isključivo za uporabu u domaćinstvu i nije namijenjen uporabi u profesionalne (komercijalne) svrhe ili namjene koje nadilaze uobičajenu uporabu u domaćinstvu.**

**Proizvođač ne snosi nikakvu odgovornost za ozljede ili oštećenja izazvana nepravilnim postavljanjem ili uporabom te ne priznaje pravo na jamstvo u slučaju ne pridržavanja gore navedenih uputa.**



**Proizvođač zadržava pravo promijeniti konstrukciju, mjere i težinu ako to smatra potrebnim radi poboljšanja kvalitete proizvoda, bez ugrožavanja osnovnih svojstava proizvoda.**

**Pridržavamo pravo izmjena i grešaka u uputama za uporabu.**

**Tehničke specifikacije i ovaj priručnik podložni su promjenama bez prethodne obavijesti ili najave.**

## **REKLAMACIJE**

**Ako do nekog kvara na aparatu dođe tijekom jamstvene dobi, nemojte ga popravljati sami.**



**Reklamaciju ODMAH prijavite na jedno od servisnih mjesta jer u suprotnom može doći do većeg oštećenja aparata, za što proizvođač neće preuzeti odgovornost.**

**Pri podnošenju reklamacije držite se teksta Jamstvenog lista. Bez predaje pravilno popunjenog Jamstvenog lista i priloženog računa za kupljeni aparat reklamacija je nevažeća.**

**Crteži djelova proizvoda samo su informativne naravi pa postoji mogućnost drugačijeg izgleda proizvoda u stvarnosti.**



**U uputama za uporabu opisani su različiti tipovi aparata koji se međusobno razlikuju po opremljenosti i načinu rada, zbog čega su uključena i neka poglavlja i dodaci koja za vaš aparat ne vrijede.**

## **MJERE OPREZA KAKO BI SE IZBJEGLO MOGUĆE IZLAGANJE PREKOMJERNOJ MIKROVALNOJ ENERGIJI**

**Ne pokušavajte uključiti pećnicu dok su vrata otvorena, jer to može dovesti do štetnog izlaganja mikrovalnoj energiji. Važno je ništa ne dirati na sigurnosnim uređajima za blokiranje vrata.**

**Ne stavljajte nikakve predmete između prednje stane pećnice i vrata i ne dopustite da se na površinama brtvi nakupi nečistoća ili ostaci sredstva za čišćenje.**



**Ako su vrata, brtve na vratima, šarniri ili sigurnosni uređaji (bravice) oštećene, pećnicu ne smijete uključivati.**

**Pećnicu smije popravljati samo stručno i kvalificirano servisno osoblje.**

**Ako se uređaj ne održava u čistom stanju, njegova se površina može oštetiti što utječe na životni vijek uređaja i dovodi do opasnih stanja.**

## Tehničke značajke

Model	M20BM	M20IEG	M20BEG
Nominalni napon frekvencija	230V ~ 50Hz	230V ~ 50Hz	230V ~ 50Hz
Nominalna mikrovalna ulazna snaga	1200W	1200W	1200W
Nominalna mikrovalna izlazna snaga	700W	700W	700W
Radna frekvencija	2,45GHz	2,45GHz	2,45GHz
Gril	NE	DA	DA
Nominalna ulazna snaga za gril	---	900W	900W
Kapacitet pećnice "kompaktno"	20litara	20litara	20litara
Dimenzije prostora za pečenje (ŠxVxD)	315x198x297 mm	315x198x297 mm	315x198x297 mm
Vanjske dimenzije aparata (ŠxVxD)	452x262x345 mm	452x262x330 mm	452x262x358 mm
Neto težina	pribl. 10,5 kg	pribl. 11,3 kg	pribl. 11 kg

## **VAŽNE SIGURNOSNE UPUTE I UPOZORENJA**

Da biste smanjili opasnost od požara, električnog udara, tjelesnih ozljeda i izlaganja prekomjernoj mikrovalnoj energiji prilikom korištenja pećnice, pridržavajte se mjera opreza koje uključuju sljedeće:

1. Prije uporabe aparata najprije pročitajte sve raspoložive upute.
2. Upotrebljavajte aparat samo za svrhe za koje je namijenjen, a koje su opisane u uputama za uporabu. Nemojte upotrebljavati korozivne kemikalije ili pare u ovom aparatu. Pećnica je posebno konstruirana za grijanje, kuhanje ili pečenje hrane. Nije konstruirana za industrijske ili laboratorijske primjene.
3. Nemojte uključivati pećnicu ako je prazna.
4. Upozorenje: Opasno je da bilo tko osim stručne osobe obavlja bilo kakvo servisiranje ili popravak koji uključuju skidanje pokrova koji štiti od izlaganja mikrovalnoj energiji.
5. Ovaj uređaj smiju koristiti djeca starija od 8 godina i osobe smanjene tjelesne, osjetilne ili duševne sposobnosti ili osobe koje ne posjeduju odgovarajuće znanje i iskustvo ali samo pod nadzorom ili ako su im dane upute o sigurnom korištenju uređaja i ako su svjesni opasnosti vezanih uz njegovo korištenje. Djeca se ne smiju igrati s ovim uređajem. Djeca ne smiju obavljati poslove čišćenja i održavanja ukoliko nisu starija od 8 godina i ako ih nitko pri tom ne nadzire.
6. Uređaj i njegov priključni vod čuvajte izvan dohvata djece mlađe od 8 godina.
7. Nemojte pržiti hranu u pećnici. Vruće ulje može oštetiti dijelove pećnice i posude i prouzročiti opekotine kože.
8. Koristite samo posuđe koje je prikladno za korištenje u mikrovalnim pećnicama.
9. Pročitajte i pridržavajte se uputa iz poglavlja „MJERE OPREZA DA BI SE IZBJEGLO MOGUĆE IZLAGANJE PREKOMJERNOJ MIKROVALNOJ ENERGIJI“.

10. Pećnicu treba redovito čistiti i otklanjati eventualne naslage hrane.
11. Kad hranu zagrijavate u plastičnim ili papirnatim posudama ili ambalaži, češće provjeravajte hranu jer se takve posude ili ambalaža mogu zapaliti.
12. Tekućine i druga hrana ne smiju se zagrijavati u hermetički zatvorenim posudama ili ambalaži jer se mogu raspuknuti. Ako iz pećnice izlazi dim, pećnicu ugasite ili isključite iz mreže i držite vrata zatvorena da biste ugušili eventualni plamen.
13. Nemojte hranu predugo kuhati.
14. Nemojte prostor unutar pećnice koristiti kao spremište. Ne odlažite stvari, kao što su kruh, keksi itd. unutar pećnice.
15. S papirnatih ili plastičnih posuda/vrećica skinite savitljive žičane vezice i metalne ručke prije nego što ih stavite u pećnicu.
16. Pećnicu instalirajte i smjestite isključivo u skladu s priloženim uputama o instalaciji.
17. Jaja u ljusci ili cijela tvrdo kuhana jaja nemojte zagrijavati u mikrovalnoj pećnici jer se mogu raspuknuti, čak i nakon što je završeno mikrovalno zagrijavanje.
18. Ovaj je uređaj namijenjen za korištenje u kućanstvima i sličnim okruženjima, kao što su:
  - priručne kuhinje za osoblje u trgovinama, uredima i drugim radnim okruženjima;
  - korištenje od strane gostiju u hotelima, motelima i drugim smještajnim prostorima;
  - gospodarske zgrade;
  - objekti koji nude usluge noćenja s doručkom.
19. Ako je priključni kabel oštećen, mora ga zamijeniti samo ovlašteni serviser ili slične stručne osobe da bi se izbjegla opasnost.
20. Aparat obvezatno mora biti uzemljen!
21. Nemojte ovaj uređaj pohranjivati ili koristiti na otvorenom prostoru.
22. Nemojte ovu pećnicu koristiti u blizini vode, u vlažnom podrumu ili u blizini bazena za plivanje.



23. Temperatura dostupnih površina može biti visoka dok pećnica radi. Te površine tijekom korištenja postaju vruće. Držite priključni kabel podalje od zagrijane površine i nemojte pokrivati ventilacijske otvore na pećnici.
24. Nemojte pustiti da priključni kabel visi preko ruba stola ili kuhinjskog elementa.
25. Neodržavanje pećnice u čistom stanju može dovesti do oštećenja površine što nepovoljno utječe na životni vijek pećnice i može dovesti do opasnog stanja.
26. Posuđe za kuhanje može postati vruće zbog prijenosa topline s hrane. Za rukovanjem vrućim posudama upotrijebiti zaštitne rukavice ili izolacijske krpe.
27. Sadržaj bočica za hranjenje djece ili staklenki s dječjom hranom promiješajte ili protresite i prije hranjenja provjerite temperaturu da ne bi došlo do opekline.
28. Prilikom zagrijavanja napitaka u mikrovalnoj pećnici može doći do zakašnjele reakcije i tekućina može prekipjeti; stoga budite oprezni prilikom rukovanja posudom u kojoj se nalazi upravo zagrijani napitak.
29. Uređaj nije predviđen za uporabu od strane osoba (uključujući djecu) smanjenih tjelesnih, osjetilnih ili duševnih sposobnosti ili kojima nedostaje iskustvo i znanje, osim ako to rade pod nadzorom ili ako im je osoba odgovorna za njihovu sigurnost dala upute o uporabi pećnice.
30. Djecu treba nadzirati kako bi se osiguralo da se ne igraju s ovim uređajem.
31. Ovi uređaji nisu predviđeni za upravljanje pomoću vanjskog sata ili zasebnog sustava za daljinsko upravljanje.
32. Ne smije se koristiti čistač na paru.
33. Koristite samo temperaturnu sondu koja se preporučuje za ovu pećnicu (kod pećnica koje imaju mogućnosti korištenja temperaturne sonde).
34. **UPOZORENJE:** Pećnica i njeni dostupni dijelovi postaju vrući tijekom uporabe. Pazite da ne dodirujete grijače. Djecu mlađu od 8 godina treba držati podalje od pećnice ukoliko nisu pod stalnim nadzorom.

35. OPASNOST OD OPEKLINA! Obratite pozornost prilikom otvaranja vrata pećnice tijekom ili na kraju pečenja - vruće pare iz pećnice mogu izazvati opekline.
36. OPASNOST OD POŽARA! Pregrijano ulje ili mast mogu se brzo zapaliti i uzrokovati požar. NIKADA ne pokušavajte gasiti požar vodom nego isključite aparat te ugasiite plamen tako da ga pokrijete vatrootpornim platnom.
37. Mikrovalnu pećnicu treba koristiti s otvorenim ukrasnim vratima (vrijedi za pećnice s ukrasnim vratima).
38. Stražnja površina uređaja mora biti okrenuta prema zidu.
39. Nikada nemojte ukloniti odstojnik na stražnjoj strani pećnice jer on osigurava minimalni razmak od aparata do zida, a time i sigurno strujanje zraka.
40. Mikrovalna pećnica ne smije se smjestiti u neki ormarić ukoliko nije ispitana u ormariću.
41. Ovaj proizvod pripada Grupi 2 Klasa B ISM proizvodima. Prema definiciji, Grupa 2 sadrži sve ISM (Industrial, Scientific and Medical - industrijski, znanstveni i medicinski) proizvode u kojima je energija radijske frekvencije hotimično izazvana i/ili korištena u obliku elektromagnetskog zračenja za tretiranje/obradu materijala te opremu erozijskog iskrenja. Prema definiciji, proizvod klase B je pogodan za uporabu u domaćinstvima i ustanovama direktno priključenima na mrežu niskog napona koja opskrbljuje građevine namijenjene stanovanju.
42. Ne stavljajte nikakve predmete između prednje stane pećnice i vrata i ne dopustite da se na površinama brtvi nakupi nečistoća ili ostaci sredstva za čišćenje.
43. Ne pokušavajte uključiti pećnicu dok su vrata otvorena, jer to može dovesti do štetnog izlaganja mikrovalnoj energiji. Važno je ništa ne dirati na sigurnosnim uređajima za blokiranje vrata. Ako su vrata, brtve na vratima, šarniri ili sigurnosni uređaji (bravice) oštećene, pećnicu ne smijete uključivati. Pećnicu smije popravljati samo stručno i kvalificirano servisno osoblje.

**PAŽLJIVO PROČITAJTE I SPREMITE ZA KASNIJU UPORABU.**

# PRIKLJUČENJE I NAPOMENE U SVEZI UZEMLJENJA



## **POZOR!**

**Pećnica obvezatno mora biti uzemljena!**

**Električna sigurnost pećnice zajamčena je jedino ako je ono ispravno spojeno na ispravnu električnu instalaciju s uzemljenjem.**

**Proizvađać ne preuzima odgovornost za štetu i ozljede nastale uslijed nepridrŹavanja uputa i upozorenja navedenih u ovim uputama za postavljanje i uporabu aparata.**

Nemojte uključivati pećnicu u utičnicu ako nije propisno instalirana i uzemljena. U slučaju kratkog spoja, uzemljenje smanjuje opasnost od strujnog udara pomoću voda za odvod napona.

Ovaj je uređaj opremljen priključnim kabelom koji ima vod za uzemljenje sa šuko utikačem.

Utikač se mora uključiti u utičnicu koja je propisno instalirana i uzemljena.

Ako niste potpuno razumjeli upute o uzemljenju ili ako dvojite oko toga je li uređaj propisno uzemljen, posavjetujte se s kvalificiranim električarom ili serviserom.

Ako je potrebno koristiti produžni kabel, koristite samo trožilni kabel.

1. Pećnica se isporučuje s kratkim priključnim kabelom da bi se smanjila opasnost od zapinjanja ili spoticanja preko dužeg kabela.

Vodovi u ugrađenom kabelu su označeni slijedećim bojama:

Fazni vodič L obično je crne ili smeđe boje.

Neutralni vodič N (nula) obično je plave boje.

Zaštitni vodič PE (uzemljenje) je žuto-zelene boje.

2. Ako se koristi duži komplet priključnog kabela ili produžni kabel:

1) Navedena nominalna vrijednost napona takvog kompleta ili produžnog kabela mora biti barem jednaka električnoj vrijednosti uređaja.

2) Produžni kabel mora biti trožilni kabel uzemljenog tipa.

3) Dugački priključni kabel treba položiti tako da ne visi preko radne površine ili površine stola kako ga djeca ne bi mogla nehotice povući ili se spotaknuti o njega.

## **RADIO SMETNJE**

Rad mikrovalne pećnice može prouzročiti smetnje vašem radio-prijamniku, TV ili sličnoj opremi. Ako se pojave smetnje, mogu se reducirati ili eliminirati poduzimanjem slijedećih mjera:

1. Očistite vrata i brtvene površine pećnice.
2. Preorijentirajte prijamnu antenu radioprijamnika ili televizora.
3. Premjestite mikrovalnu pećnicu u odnosu na prijamnik.
4. Udaljite mikrovalnu pećnicu od prijamnika.
5. Priključite mikrovalnu pećnicu na drugu utičnicu, tako da mikrovalna pećnica i prijamnik budu na različitim granama električne instalacije.

## **POSTAVLJANJE**

Skinite sav ambalažni materijal i izvadite pribor. Pregledajte ima li oštećenja na pećnici kao što su uleknuća ili napukla vrata, oštećene brtve i bravice, oštećenja prostora za pečenje i slično. Ako je proizvod oštećen pri transportu, obavijestite o tome prodavača čije ćete podatke naći na dostavnici ili računu.

Nemojte instalirati pećnicu ako je oštećena !

**Kućište:** Skinite svu zaštitu foliju s površine kućišta mikrovalne pećnice.

**Nemojte skidati svijetlosmeđi silikatni (mika, tinjac) pokrov koji je postavljen u unutrašnjosti pećnice radi zaštite magnetrona.**

1. Odaberite ravnu površinu na kojoj ima dovoljno prostora za ulazne i/ili izlazne ventilacijske otvore.
2. Minimalna visina za instalaciju je 85cm.
3. Stražnja površina pećnice mora biti okrenuta prema zidu i odmaknuta za 10cm.
4. Iznad pećnice ostavite slobodni prostor od najmanje 20 cm. Minimalni slobodni prostor između pećnice u susjednih zidova mora biti 5 cm.
5. Nemojte skidati nožice s dna pećnice.

6. Blokiranje ulaznih i/ili izlaznih otvora može oštetiti pećnicu.
7. Pećnicu postavite što je moguće dalje od radio i TV uređaja. Pećnica tijekom rada može izazvati smetnje u radio ili TV prijemu.
8. Uključite pećnicu u standardnu uzemljenu kućansku utičnicu. Provjerite jesu li napon i frekvencija isti kao napon i frekvencija navedeni na natpisnoj pločici.

**UPOZORENJE:** Nemojte pećnicu ugrađivati iznad štednjaka ili nekog drugog aparata koji proizvodi toplinu. Ugrađivanje u blizini ili iznad izvora topline može oštetiti pećnicu i gubitka jamstva.

**UPOZORENJE:** Nemojte upotrebljavati pećnicu bez staklene tave ili ako potpornji valjaka i vratilo nisu u odgovarajućim položajima.

**Dostupne površine  
mogu biti vruće dok  
pećnica radi.**



## **NAČELA MIKROVALNOG KUHANJA**

1. Pažljivo rasporedite hranu. Postavite najdeblje dijelove prema vanjskoj strani tanjura.
2. Pazite na vrijeme kuhanja. Kuhajte tijekom najkraćeg navedenog vremena pa ga produžite, ako je to potrebno. Znatno prekuhana hrana može se dimiti ili zapaliti.
3. Tijekom kuhanja pokrijte hranu. Poklopci sprječavaju prskanje hrane i pomažu da se ona jednoliko skuha.
4. Da biste ubrzali kuhanje, jednom tijekom mikrovalne obrade preokrenite hranu kao što su piletina i hamburgeri. Velike komade kao što su pečenke treba okrenuti najmanje jednom.
5. Na polovini vremena kuhanja prerasporedite hranu kao što su mesne kuglice s vrha nadolje i iz središta na obod posude.

## SMJERNICE U POGLEDU PRIBORA ZA KUHANJE

1. Idealan materijal za mikrovalno posuđe je transparentan za mikrovalove, on dopušta prolazak energije kroz posudu i zagrijavanje hrane.
2. Mikrovalovi ne mogu prodirati kroz metal, tako da se metalno posuđe ili tanjuri s metalnom obradom ne mogu upotrijebiti.
3. Za mikrovalno kuhanje nemojte upotrijebiti proizvode od recikliranog papira jer oni mogu sadržavati male komadiće metala. To može izazvati iskrenje i / ili vatru.
4. Preporučuju se okrugli / ovalni tanjuri kao bolji od kvadratnih / pravokutnih, jer hrana u kutovima ima tendenciju prekuhavanja.
5. Za sprječavanje prekuhavanja izloženih površina možete upotrijebiti uske trake aluminijske folije. Pri tome pazite da ih ne upotrijebite previše i da održavate razmak od cca 2,54 cm između rubova pećnice i folije.

Slijedeća tablica sadrži opće smjernice za pomoć u odabiru odgovarajućih posuda za kuhanje:

Posuđe za kuhanje	Mikrovalno kuhanje	Gril	Kombi. kuhanje
		Opcija se odnosi na modele sa grilom	
Vatrostalno staklo	Da	Da	Da
Staklo, neotporno na toplinu	Ne	Ne	Ne
Vatrostalna keramika	Da	Da	Da
Mikrovalno–siguran plastični tanjur	Da	Ne	Ne
Kuhinjski papir	Da	Ne	Ne
Metalna tava	Ne	Da	Ne
Metalna rešetka	Ne	Da	Ne
Aluminijska folija i posude od folije	Ne	Da	Ne

**Materijali koje možete koristiti u mikrovalnoj pećnici,  
ALI UZ NEKA OGRANIČENJA. DOBRO PRIPAZITI !**

Aluminijska folija	Samo za zaštitu. Mali glatki komadi folije mogu se koristiti za pokrivanje tankih odrezaka mesa da se ne bi prepekli. Ako je folija preblizu stjenki pećnice, može doći do preskakanja iskre. Folija treba biti udaljena od stjenki pećnice najmanje 2,5 cm.
Vatrostalno posuđe	Pridržavajte se uputa proizvođača. Dno vatrostalne posude mora biti najmanje 5 mm iznad okretnog pladnja. Nepravilno korištenje može prouzročiti pucanje okretnog pladnja.
Tanjuri	Samo oni prikladni za uporabu u mikrovalnoj pećnici. Pridržavajte se uputa proizvođača. Nemojte koristiti napuknuto ili okrhuto posuđe.
Staklenke	Uvijek skinite poklopac. Koristite samo za podgrijavanje hrane dok postane tek malo topla. Većina staklenki nije otporna na visoke temperature i mogu puknuti.
Stakleno posuđe	Samo stakleno posuđe otporno na visoke temperature. Uvjerite se da na posuđu nema metalnih elemenata. Nemojte koristiti napukle ili okrhute posude.
Vrećice za pečenje mesa u pećnici	Pridržavajte se uputa proizvođača. Nemojte ih zatvarati metalnom vezicom. Na vrećici napravite proreze za izlazak pare.
Papirnati tanjuri i čaše	Koristite samo za kratkotrajno kuhanje/podgrijavanje. Nemojte ostavljati pećnicu bez nadzora dok pripremate hranu.
Papirnati ubrusi	Koristite ih samo za pokrivanje hrane prilikom podgrijavanja i za upijanje masnoće. Koristite ih samo za kratkotrajno kuhanje uz stalni nadzor.
Pergament papir	Koristite ga samo za pokrivanje da biste spriječili prskanje ili kao omot za pripremu hrane u pari.

Plastika	Koristite samo specijalno plastično posuđe za mikrovalnu pećnicu. Pridrđavajte se uputa proizvođača. Na posuđu mora biti etiketa s natpisom „Prikladno za mikrovalnu pećnicu“. Neke plastične posude omekšaju kad hrana u njima postane vruća. "Vrećice za kuhanje" i čvrsto zatvorene plastične vrećice treba zarezati, probušiti ili ostaviti na njima mali otvor prema uputama na pakiranju.
Plastična prozirna folija	Samo ona koja je prikladna za mikrovalnu pećnicu. Koristite za pokrivanje hrane tijekom kuhanja da bi zadržala vlagu. Nemojte dopustiti da plastična folija dodiruje hranu.
Termometri	Samo oni koji su prikladni za korištenje u mikrovalnoj pećnici
Voštani papir	Koristite samo za pokrivanje protiv prskanja i za zadržavanje vlage.

## **Materijali koje treba izbjegavati u mikrovalnoj pećnici**

Aluminijska posuda ili posuda od Al folije	Može izazvati preskakanje iskre. Prebacite hranu u posuđe prikladno za uporabu u mikrovalnoj pećnici.
Kartonska kutija za hranu s metalnom ručkom	Može izazvati preskakanje iskre. Prebacite hranu u posuđe prikladno za uporabu u mikrovalnoj pećnici.
Metalno posuđe ili posuđe s metalnim elementima	Metal priječi djelovanje mikrovalne energije na hranu. Metalni elementi mogu izazvati preskakanje iskre.
Metalne savitljive vezice	Mogu izazvati preskakanje iskre i vatru u pećnici
Papirnatte vrećice	Mogu izazvati vatru u pećnici
Stiropor	Stiropor se na visokoj temperaturi može rastopiti i kontaminirati hranu.
Drvo	Drvo se u mikrovalnoj pećnici isušuje i može puknuti.



## MOGUĆI PROBLEMI I NJIHOVO OTKLANJANJE

Ukoliko Vaš aparat ne radi ispravno, uzrok bi mogla biti neka sitnica. Kako biste uštedijeli vrijeme i novac prije pozivanja servisera, provjerite sljedeće:

<b>Normalne smetnje</b>	
Mikrovalna pećnica ometa TV prijem	Mikrovalna pećnica može ometati prijem radio i TV signala dok je uključena. To je slično smetnjama koje stvaraju mali električni aparati poput miksera, usisavača prašine i električnog ventilatora.
Prigušeno svjetlo pećnice	Kod korištenja pri maloj snazi, svjetlo u pećnici može postati prigušeno. To je normalna pojava.
Nakupljanje pare na vratima, izlazak vrućeg zraka kroz ventilacijske otvore	Prilikom kuhanja, iz hrane može izlaziti para. Veći dio će izaći kroz ventilacijske otvore. Međutim, dio pare može se nakupiti na hladnim mjestima, poput vrata pećnice. To je normalna pojava.
Nehotično uključivanje pećnice kad u njoj nema hrane.	Zabranjeno je držati pećnicu uključenu dok u njoj nema hrane. To je veoma opasno.

<b>Problem</b>	<b>Mogući uzrok</b>	<b>Otklanjanje problema</b>
Pećnica se ne može uključiti u rad.	Priključni vod nije dobro utaknut	Izvučite utikač. Zatim ga ponovno uključite nakon 10 sekundi.
	Pregorio osigurač ili se aktivirao prekidač strujnog kruga	Zamijenite osigurač ili resetirajte prekidač kruga
	Problem s utičnicom	Provjerite utičnicu pomoću drugih električnih aparata
	Problemi s timerom	Provjeriti postavke timera
Pećnica se ne zagrijava.	Vrata nisu dobro zatvorena	Dobro zatvorite vrata.
Stakleni okretni tanjur stvara buku dok mikrovalna pećnica radi.	Nečistoća u sjedištu valjka i na dnu pećnice	Pročitajte upute o čišćenju uprljanih dijelova u poglavlju „Održavanje mikrovalne pećnice.“
Osvjetljenje pećnice ne radi	Pregorila žarulja	Obratite se ovlaštenom servisu.


**AKO NIŠTA OD OPISANOG NE RJEŠAVA PROBLEM, STUPITE U KONTAKT S OVLAŠTENIM SERVISOM.**

**KVAROVE NEMOJTE POPRAVLJATI SAMI !**

KVAR ODMAH prijavite na jedno od servisnih mjesta jer u suprotnom može doći do većeg oštećenja aparata, za što proizvođač neće preuzeti odgovornost.


# UPUTE ZA UPORABU MIKROVALNE PEĆNICE

## Nazivi dijelova pećnice i pribora

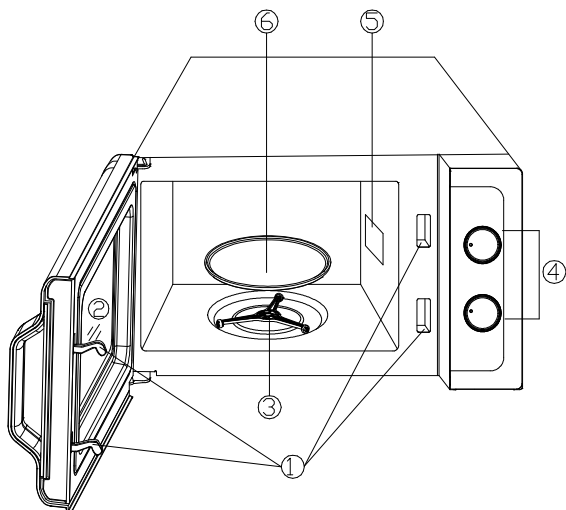

### M20BM


- 1 - Sustav za sigurnosno blokiranje vrata
- 2 - Staklo vrata
- 3 - Sklop prstena i valjaka za okretni tanjur
- 4 - Upravljačka ploča
- 5 - Pokrov valovoda
- 6 - Stakleni okretni tanjur

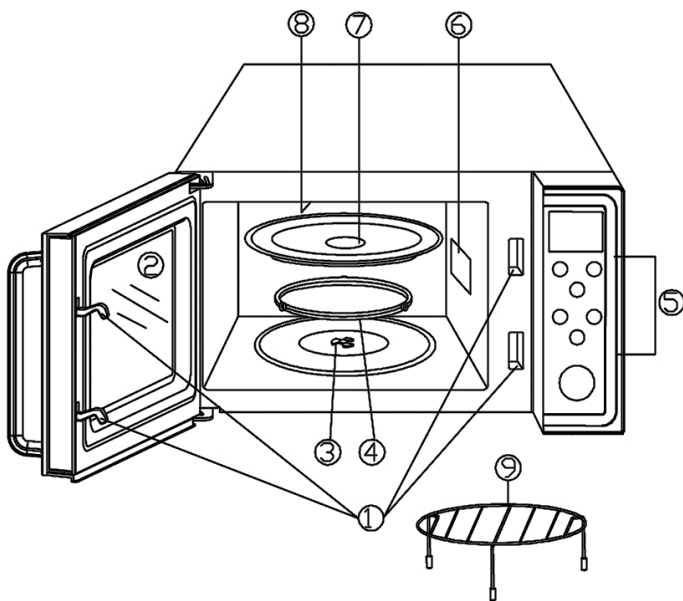

### M20BEG

- 1 - Sustav za sigurnosno blokiranje vrata
- 2 - Staklo vrata
- 3 i 4 - Sklop prstena i valjaka za okretni tanjur
- 5 - Upravljačka ploča
- 6 - Pokrov valovoda ne skidati)
- 7 - Stakleni okretni tanjur
- 8 - Gril grijač
- 9 - Stalak roštilja

(koristi se samo za funkciju grila i stavlja na stakleni tanjur)

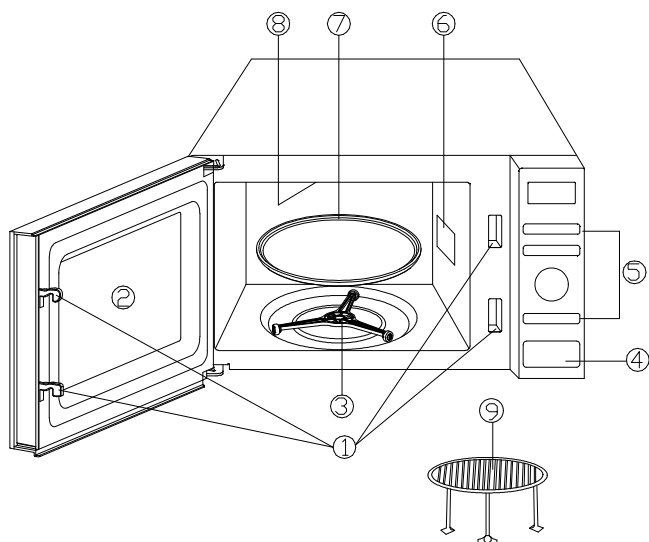

## M20IEG

- 1 - Sustav za sigurnosno blokiranje vrata
- 2 - Staklo vrata
- 3 - Sklop prstena i valjaka za okretni tanjur
- 4 - Pritisno dugme za otvaranje vrata
- 5 - Upravljačka ploča
- 6 - Pokrov valovoda

7 - Stakleni okretni tanjur

8 - Gril grijač

9 - Stalak roštilja (koristi se samo za funkciju grila i stavlja na stakleni tanjur)


Nikad ne stavljajte stakleni tanjur okrenut naopako. Stakleni tanjur se ne smije ograničavati.

I okretni tanjur i njegov sklop uvijek se moraju koristiti za kuhanje.

Sve posude s hranom uvijek stavite na stakleni tanjur.


Ako stakleni tanjur ili prsten okretnog tanjura napukne, obratite se najbližem ovlaštenom servisnom centru.

# Upravljačka ploča i svojstva M20BM

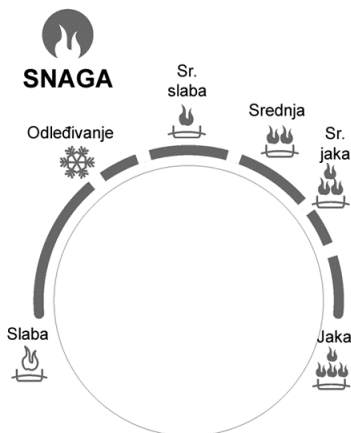

Snaga - Snagu kuhanja podesite okretanjem drška, za biranje snage, na željenu jačinu. Kuhanje je isključivo mikrovalno te postoji 6 nivoa jakosti koja ovisi o Vašim potrebama kuhanja.

Opis	Izlazna snaga
Jaka	100%
Srednje jaka	88%
Srednja	73%
Srednje slaba	52%
Odleđivanje	42%
Slaba	20%

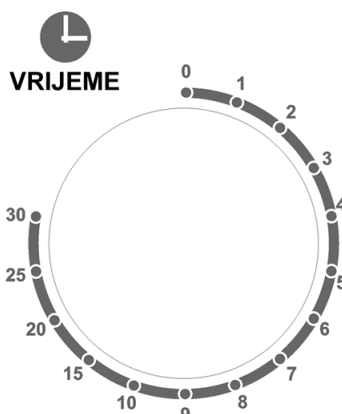


Vrijeme - Za podešavanje vremena kuhanja okrenite držak mehaničkog sata na željeno vrijeme, do max. 30 minuta.

Postavite hranu na okretni tanjur i zatvorite vrata. Podesite snagu te vrijeme kuhanja, a mikrovalna će pećnica odmah započeti s radom. Ako želite podesiti vrijeme manje od 2 minute, tada okrenite držak do 3 minute te ga vratite na željeno vrijeme. Po isteku podešenog vremena kuhanja uređaj se zaustavlja uz zvučni signal.

**UPOZORENJE: UVIJEK VRATITE DRŽAK U POLOŽAJ NULA,** ako je hrana izvađena iz pećnice prije nego isteče postavljeno vrijeme kuhanja ili kad pećnica nije u uporabi. Kako biste zaustavili pećnicu tijekom procesa kuhanja, pritisnite tipku za otvaranje vrata ili ručkom otvorite vrata.

## Upravljačka ploča i svojstva M20BEG

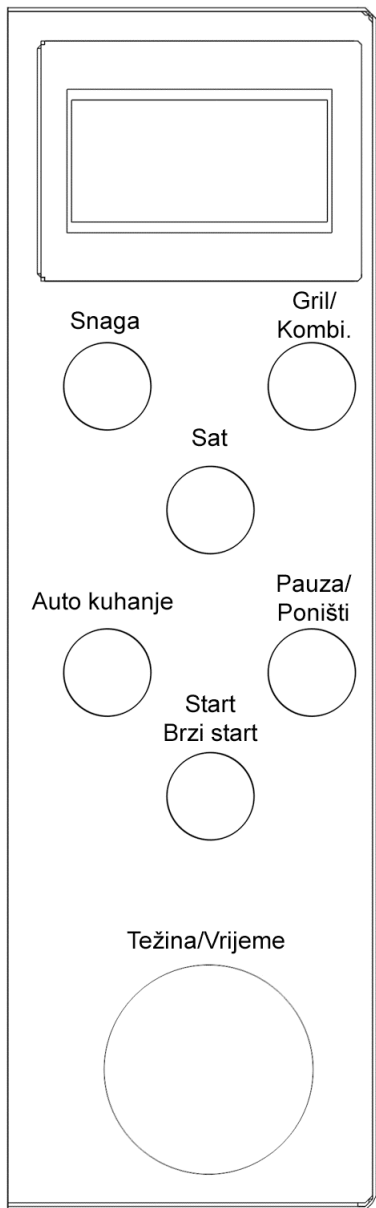

### Ekran prikaza (display)

Prikazuje vrijeme kuhanja, snagu, indikatore i tekuće vrijeme dana.

### Tipka "Snaga"

Služi za postavljanje razine snage. Kako biste provjerili snagu tijekom vremena kuhanja, pritisnite tu tipku.

### Tipka "Sat"

Pritisnite ovu tipku kako biste namjestili digitalni sat. Također služi i za postavljanje programa kuhanja u točno određeno vrijeme.

### Tipka "Gril/Kombi."

Pritisnite ovu tipku kako biste odabrali gril ili kombinirano kuhanje.

### Tipka "Start/Brzi start"

Pritisnite tipku za pokretanje programa kuhanja.

Jednostavno pritisnite tipku nekoliko puta kako biste postavili trajanje kuhanja, a pećnica će odmah kuhati punom snagom.

### Tipka "Pauza/Poništi"

Pritisnite kako biste poništili postojeće postavke ili resetirali pećnicu, a prije izbora programa kuhanja.

Pritisnite jednom za privremeno zaustavljanje kuhanja ili dvaput, za

potpuno poništavanje programa kuhanja.

### Držak "Težina/Vrijeme"

Okrenite držak kako biste namjestili vrijeme na satu pećnice ili željeno vrijeme kuhanja, te željenu težinu hrane.

### Tipka "Auto kuhanje"

Pritisnite ovu tipku onoliko puta, koliko je potrebno da dosegnete brzu postavku za kuhanje popularne hrane (automatsko kuhanje).

### Kontrola rada i podešavanje pećnice

Svaki puta kad pritisnete neku tipku, oglasit će se zvučni signal "bip" kao potvrda pritiska tipke, ako se pritisne pogrešna tipka, zvučni signal oglasiti će se dva puta.

Kada se pećnica prvi puta priključi na struju, na pokazivaču će se pojaviti "1:01" i "🔌".

Ako se tijekom podešavanja ne učini ništa, tada će se pećnica, nakon 25 sekundi, prebaciti u mod čekanja.

Ako se tijekom kuhanja pritisne "Pauza/Poništi", program će se pauzirati, a ponovnim pritiskom će se nastaviti. Ako se tipka "Pauza/Poništi" pritisne dva puta tada će se program prekinuti.

Na kraju kuhanja, display će prikazati "End" uz zvučni signal svake dvije minute, sve dok se ne pritisne bilo koja tipka ili se otvore vrata. Nakon kuhanja dužeg od 2 minute, ventilator u pećnici će raditi 2 minute kako bi ohladio pećnicu.

### Podešavanje vremena na digitalnom satu

Ugrađen je digitalni sat koji pokazuje vrijeme u formatu 12 ili 24 sata. Kako biste tijekom kuhanja vidjeli vrijeme, pritisnite tipku "Sat" čime će na displayu biti prikazano tekuće vrijeme.

1. Jednom ili dvaput pritisnite tipku "Sat", kako biste postavili digitalni sat u format 12 ili 24 sata.

2. Držak "Težina/Vrijeme" okrenite tako da namjestite znamenke za sate (npr. 18).

3. Pritisnite tipku "Sat" kako biste potvrdili namještenu vrijednost.

4. Držak "Težina/Vrijeme" okrenite tako da namjestite znamenke za minute (npr. 47).

5. Ponovno pritisnite tipku "Sat" kako biste potvrdili namještenu vrijednost. Na displayu će biti prikazano dnevno vrijeme, npr. 18:47.

### Brzo kuhanje

Pećnica će kuhati hranu na najvišoj snazi (100%) za brzi start programa za kuhanje.

Pritisnite tipku "Start/Brzi Start" onoliko puta, koliko je potrebno da namjestite vrijeme kuhanja. Pećnica će odmah započeti s kuhanjem uz punu snagu. Maksimalno vrijeme kuhanja koje se može postaviti je 10 minuta.

### Mikrovalno kuhanje

Kako biste kuhali uz uporabu samo mikrovalne snage, pritisnite tipku "Snaga" više puta, da namjestite razinu snage kuhanja.

Pritisnite tipku "Snaga"	Snaga kuhanja	Display
jednom	100%	100
dva puta	80%	80
3 puta	60%	60
4 puta	40%	40
5 puta	20%	20
6 puta (namještanje sata)	0	00

Zatim drškom "Vrijeme/Težina" namjestite željeno vrijeme kuhanja. Najduže vrijeme kuhanja može biti do 95 minuta. Pećnica će započeti s radom nakon pritiska na tipku "Start/Brzi Start". Npr. pretpostavimo da želite kuhati 11 minuta uz 60% mikrovalne snage.

1. Pritisnite tipku "Snaga" 3 puta.
2. Okrenite držak "Vrijeme/Težina" na 11:00.
3. Pritisnite tipku "Start/Brzi Start".

### Gril

Najduže vrijeme grilanja može biti do 95 minuta. Pretpostavimo da želite rad grila tijekom 20 minuta.

1. Pritisnite tipku "Gril/Kombi" jednom.
2. Okrenite držak "Vrijeme/Težina" na 20:00.
3. Pritisnite tipku "Start/Brzi Start".



### Kombinirano kuhanje - Kombinacija 1

Najduže vrijeme kuhanja može biti do 95 minuta.

30% vremena za mikrovalno kuhanje, 70% vremena za gril.

Upotrijebite za ribu ili gratin.

Npr. pretpostavimo da želite kuhanje od 12 min s Kombinacijom 1.

1. Pritisnite tipku "Gril/Kombi" dva puta.
2. Okrenite držak "Vrijeme/Težina" na 12:00.
3. Pritisnite tipku "Start/Brzi Start".

### Kombinirano kuhanje - Kombinacija 2

Najduže vrijeme kuhanja može biti do 95 minuta.

55% vremena za mikrovalno kuhanje, 45% vremena za gril.

Upotrijebite za pudinge, omlete, pečeni krumpir i perad.

Npr. pretpostavimo da želite kuhanje od 25 min s Kombinacijom 2.

1. Pritisnite tipku "Gril/Kombi" tri puta.
2. Okrenite držak "Vrijeme/Težina" na 25:00.
3. Pritisnite tipku "Start/Brzi Start".

### Funkcija programskog sata

Ova funkcija omogućuje početak kuhanja u zadano vrijeme.

Npr. pretpostavimo da je trenutno vrijeme 9:00 sati i da želite program kuhanja započeti u 11:30.

1. Odaberite program kuhanja (osim auto odležavanja, auto menia i brzog starta)
2. Pritisnite tipku "Sat".
3. Okrenite držak "Vrijeme/Težina" kako bi podesili sate - dok se na displayu ne pojavi 11:00.
4. Pritisnite tipku "Sat".
5. Okrenite držak "Vrijeme/Težina" kako bi podesili minute - dok se na displayu ne pojavi 11:30.
6. Pritisnite tipku "Sat" za potvrdu.

NAPOMENA: Prije programiranja uvjerite se da sat pokazuje točno dnevno vrijeme. Podešeno vrijeme početka kuhanja može se provjeriti pritiskom na tipku "Sat", a ako se tada pritisne "Pauza/Poništi", tada je funkcija poništena.

## Automatsko odležavanje

Pećnica omogućuje odležavanje hrane na temelju njene težine, a koju unosi korisnik. Vrijeme odležavanja i snaga određuju se automatski prema kategoriji hrane i njene težine koja se programira. Težina zaleđene hrane može biti od 100 do 1800 grama.

Npr. pretpostavimo da želite odmrznuti 600 g škampa.

1. Uzastopno pritisnite tipku "Auto kuhanje" dok se "A-12", "❄❄" i "AUTO" ne pojave na displayu.

2. Okrenite držak "Vrijeme/Težina" kako bi podesili težinu hrane.

3. Pritisnite tipku "Start/Brzi Start".

NAPOMENA: Pećnica će zaustaviti rad tijekom odležavanja kako bi korisnik mogao okrenuti hranu glede ravnomjernog odležavanja, a nakon toga treba pritisnuti tipku "Start/Brzi Start" za nastavak.

## Roditeljsko zaključavanje (blokiranje pristupa djeci)

Služi za sprječavanje djece u nenadziranoj uporabi pećnice. Na ekranu prikaza pojavit će se indikator CHILD LOCK i neće se moći raditi s pećnicom, sve dok je postavljena blokada CHILD LOCK.

Postavljanje blokade: Ako se u modu mirovanja ne pritisne niti jedna tipka - pećnica će automatski postaviti roditeljsko zaključavanje, zasvijetliti će indikator, a sve tipke biti će blokirane.

Poništenje blokade: Otvoriti ili zatvoriti vrata pećnice.

## Auto kuhanje (automatsko kuhanje)

U ovom načinu kuhanja ne treba programirati vrijeme i snagu kuhanja. Dovoljno je naznačiti tip i težinu hrane koju želite kuhati.

1. Pritisnite tipku "Auto kuhanje" više puta, kako biste odabrali brojevi kod hrane koju želite kuhati.

2. Okrenite držak "Vrijeme/Težina" kako bi podesili težinu hrane koju treba kuhati.


3. Pritisnite tipku "Start/Brzi Start" čime pećnica započinje s kuhanjem.

U donjoj se tablici opisani kodovi i napomene u svezi automatskog kuhanja.

Kod	Hrana	Napomena
A-1	Paradajz (230g po komadu)	Za paradajz će biti prikazan broj komada, a ne težina, prilikom okretanja drška "Vrijeme/Težina".  Za hranu pod kodom 8-11, a zbog boljih rezultata kuhanja, pećnica će se zaustaviti kako bi korisnik mogao okrenuti hranu.
A-2	Povrće (g)	
A-3	Kokice (100g)	
A-4	Auto podgrijavanje(g)	
A-5	Špageti (g)	
A-6	Pica (g)	
A-7	Riba (g)	
A-8	Piletina (g)	
A-9	Govedina/Janjetina (g)	
A-10	Meso za roštilj (g)	
A-11	Šunka za gril (g)	

Rezultat automatskog kuhanja ovisi o faktorima kao što su fluktuacija napona mreže, oblik i veličina hrane, vaše osobne sklonosti dodavanja određenih sastojaka, čak i kako dobro ste uspjeli smjestiti hranu u pećnicu. Ako ste ustanovili da rezultat uz bilo koju brzinu nije sasvim zadovoljavajući, molimo vrijeme kuhanja malo prilagodite postignutom rezultatu.

## Upravljačka ploča i svojstva M20IEG

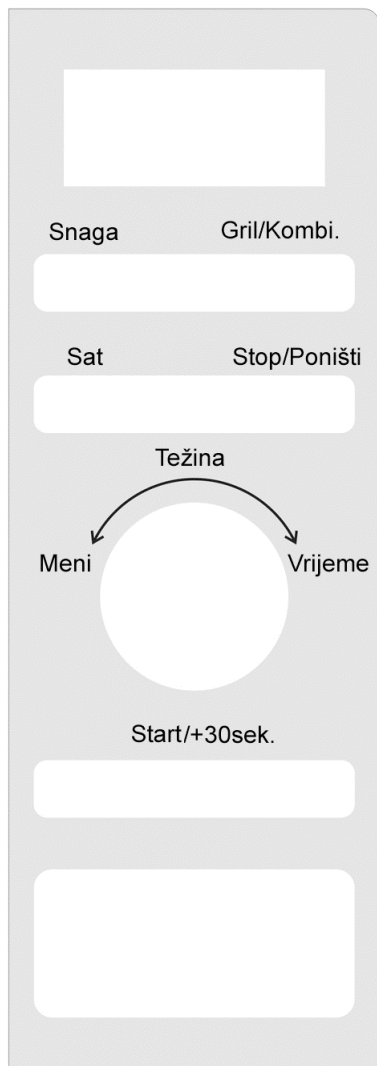

### Ekran prikaza (display)

Prikazuje vrijeme kuhanja, snagu, indikatore i tekuće vrijeme dana.

### Tipka "Snaga"

Služi za postavljanje razine snage. Kako biste provjerili snagu tijekom vremena kuhanja, pritisnite tu tipku.

### Tipka "Sat"

Pritisnite ovu tipku kako biste namjestili digitalni sat. Također služi i za postavljanje programa kuhanja u točno određeno vrijeme.

### Tipka "Gril/Kombi."

Pritisnite ovu tipku kako biste odabrali gril ili kombinirano kuhanje.

### Tipka "Stop/Poništi"

Pritisnite kako biste poništili postojeće postavke ili resetirali pećnicu, a prije izbora programa kuhanja.

Pritisnite jednom za privremeno zaustavljanje kuhanja ili dvaput, za potpuno poništavanje programa kuhanja.

Također služi za namještanje roditeljskog zaključavanja.

### Držak "Težina/Vrijeme/Meni"

Okrenite držak kako biste namjestili vrijeme.

Pritisnite kako biste namjestili željenu težinu hrane ili broj obroka.

Okrenite držak kako biste odabrali meni za automatsko kuhanje.

### Tipka "Start/+30sek."

Pritisnite jednom kako biste započeli program kuhanja.

Pritisnite onoliko puta kako biste namjestili vrijeme kuhanja, te odmah započeti kuhanje pri najvećoj snazi.

### Kontrola rada i podešavanje pećnice

Svaki puta kad pritisnete neku tipku, oglasit će se zvučni signal "bip" kao potvrda pritiska tipke.

Kada se pećnica prvi puta priključi na struju, na pokazivaču će se pojaviti "1:01" i "🕒".

Ako se tijekom podešavanja ne učini ništa, tada će se pećnica, nakon 25 sekundi, prebaciti u mod čekanja.

Ako se tijekom kuhanja pritisne "Stop/Poništi" ili se otvore vrata, program će se pauzirati, a pritiskom na tipku "Start/+30sek." će se nastaviti. Ako se tipka "Stop/Poništi" pritisne dva puta tada će se program prekinuti.

Na kraju kuhanja, display će prikazati "End" uz zvučni signal svake dvije minute, sve dok se ne pritisne tipka "Stop/Poništi" ili se otvore vrata.

### Podešavanje vremena na digitalnom satu

Ugrađen je digitalni sat koji pokazuje vrijeme u formatu 12 ili 24 sata. Kako biste tijekom kuhanja vidjeli vrijeme, pritisnite tipku "Sat" čime će na displayu biti prikazano tekuće vrijeme.

1. Jednom ili dvaput pritisnite tipku "Sat", kako biste postavili digitalni sat u format 12 ili 24 sata.

2. Držak "Težina/Vrijeme/Meni" okrenite tako da namjestite znamenke za sate (npr. 18).

3. Pritisnite tipku "Sat" kako biste potvrdili namještenu vrijednost.

4. Držak "Težina/Vrijeme/Meni" okrenite tako da namjestite znamenke za minute (npr. 47).

5. Ponovno pritisnite tipku "Sat" kako biste potvrdili namještenu vrijednost.

Na displayu će biti prikazano dnevno vrijeme, npr. 18:47.

### Brzi start

Pećnica će kuhati hranu na najvišoj snazi (100%) za brzi start programa za kuhanje.

Pritisnite tipku "Start/+30sek" onoliko puta, koliko je potrebno da namjestite vrijeme kuhanja. Pećnica će odmah započeti s kuhanjem uz punu snagu. Maksimalno vrijeme kuhanja koje se može postaviti je 10 minuta.

### Mikrovalno kuhanje

Kako biste kuhali uz uporabu samo mikrovalne snage, pritisnite tipku "Snaga" više puta, da namjestite razinu snage kuhanja.

Pritisnite tipku "Snaga"	Snaga kuhanja
jednom	100%
dva puta	80%
3 puta	60%
4 puta	40%
5 puta	20%
6 puta (namještanje sata)	0

Zatim drškom "Vrijeme/Težina/Meni" namjestite željeno vrijeme kuhanja. Najduže vrijeme kuhanja može biti do 95 minuta. Pećnica će započeti s radom nakon pritiska na tipku "Start/+30sek".

Npr. pretpostavimo da želite kuhati 10 minuta uz 60% mikrovalne snage.

1. Pritisnite tipku "Snaga" 3 puta.
2. Okrenite držak "Vrijeme/Težina/Meni" na 10:00.
3. Pritisnite tipku "Start/+30sek."

### Gril

Najduže vrijeme grilanja može biti do 95 minuta.

Pretpostavimo da želite rad grila tijekom 20 minuta.

1. Pritisnite tipku "Gril/Kombi" jednom.
2. Okrenite držak "Vrijeme/Težina/Meni" na 20:00.
3. Pritisnite tipku "Start/+30sek."

### Kombinirano kuhanje - Kombinacija 1

Najduže vrijeme kuhanja može biti do 95 minuta.

30% vremena za mikrovalno kuhanje, 70% vremena za gril.

Upotrijebite za ribu ili gratin.

Npr. pretpostavimo da želite kuhanje od 12 min s Kombinacijom 1.

1. Pritisnite tipku "Gril/Kombi" dva puta.
2. Okrenite držak "Vrijeme/Težina/Meni" na 12:00.
3. Pritisnite tipku "Start/+30sek."

### Kombinirano kuhanje - Kombinacija 2

Najduže vrijeme kuhanja može biti do 95 minuta.

55% vremena za mikrovalno kuhanje, 45% vremena za gril.

Upotrijebite za pudinge, omlete, pečeni krumpir i perad.

Npr. pretpostavimo da želite kuhanje od 25 min s Kombinacijom 2.

1. Pritisnite tipku "Gril/Kombi" tri puta.
2. Okrenite držak "Vrijeme/Težina/Meni" na 25:00.
3. Pritisnite tipku "Start/+30sek."

### Funkcija programskog sata

Ova funkcija omogućuje početak kuhanja u zadano vrijeme.

Npr. pretpostavimo da je trenutno vrijeme 9:00 sati i da želite program kuhanja započeti u 11:30.

1. Odaberite program kuhanja (osim auto odleđivanja, auto menia i brzog starta)
2. Pritisnite tipku "Sat".
3. Okrenite držak "Vrijeme/Težina/Meni" kako bi podesili sate - dok se na displayu ne pojavi 11:00.
4. Pritisnite tipku "Sat".
5. Okrenite držak "Vrijeme/Težina/Meni" kako bi podesili minute - dok se na displayu ne pojavi 11:30.
6. Pritisnite tipku "Sat" za potvrdu.

NAPOMENA: Prije programiranja uvjerite se da sat pokazuje točno dnevno vrijeme. Podešeno vrijeme početka kuhanja može se provjeriti pritiskom na tipku "Sat", a ako se tada pritisne "Stop/Poništi", tada je funkcija poništena.

### Automatsko odleđivanje

Pećnica omogućuje odleđivanje hrane na temelju njene težine, a koju unosi korisnik. Vrijeme odleđivanja i snaga određuju se automatski prema kategoriji hrane i njene težine koja se programira. Težina zaleđene hrane može biti od 100 do 1800 grama.

Npr. pretpostavimo da želite odmrznuti 600 g škampa.

1. Okrenite držak "Vrijeme/Težina/Meni" u smjeru suprotno od kazaljke na satu, dok se "12", "☀️" i "AUTO" ne pojave na displayu.

2. Pritisnite tipku "Start/+30sek." za potvrdu.

3. Okrenite držak "Vrijeme/Težina/Meni" kako bi podesili težinu hrane.

4. Pritisnite tipku "Start/+30sek."

NAPOMENA: Pećnica će zaustaviti rad tijekom odleđivanja kako bi korisnik mogao okrenuti hranu glede ravnomjernog odleđivanja, a nakon toga treba pritisnuti tipku "Start/+30sek." za nastavak.

### Roditeljsko zaključavanje (blokiranje pristupa djeci)

Služi za sprječavanje djece u nenadziranoj uporabi pećnice. Na ekranu prikaza pojavit će se indikator CHILD LOCK i neće se moći raditi s pećnicom, sve dok je postavljena blokada CHILD LOCK. Postavljanje blokade: Pritisnite i držite tipku "Stop/Poništi" oko 3 sekunde. Oglasit će se zvučni znak i svijetlit će indikator LOCK. Poništenje blokade: Pritisnite i držite tipku "Stop/Poništi" oko 3 sekunde, tako da se indikator LOCK ugasi.

### Auto kuhanje (automatsko kuhanje)

U ovom načinu kuhanja ne treba programirati vrijeme i snagu kuhanja. Dovoljno je naznačiti tip i težinu hrane koju želite kuhati. Pećnica započinje s radom nakon pritiska na tipku "Start/+30sek."

1. Okrenite držak "Vrijeme/Težina/Meni" u smjeru suprotno od kazaljke na satu, kako biste odabrali brojevi kod hrane koju želite kuhati.

2. Pritisnite tipku "Start/+30sek." za potvrdu.

3. Okrenite držak "Vrijeme/Težina/Meni" kako bi podesili težinu hrane koju treba kuhati.

4. Pritisnite tipku "Start/+30sek."



U donjoj se tablici opisani kodovi i napomene u svezi automatskog kuhanja.

Kod	Hrana	Napomena
1	Špageti (g)	Za paradajz će, a displayu, biti prikazan broj komada, a ne težina.
2	Paradajz (230g po komadu)	
3	Auto podgrijavanje(g)	
4	Kokice (100g)	
5	Riba (g)	Za hranu pod kodom 8-11, a zbog boljih rezultata kuhanja, pećnica će se zaustaviti kako bi korisnik mogao okrenuti hranu, a nakon toga pritisnite tipku "Start/+30sek."
6	Pica (g)	
7	Povrće (g)	
8	Piletina (g)	
9	Govedina/Janjetina (g)	
10	Meso za roštilj (g)	
11	Šunka za gril (g)	


Rezultat automatskog kuhanja ovisi o faktorima kao što su fluktuacija napona mreže, oblik i veličina hrane, vaše osobne sklonosti dodavanja određenih sastojaka, čak i kako dobro ste uspjeli smjestiti hranu u pećnicu. Ako ste ustanovili da rezultat uz bilo koju brzinu nije sasvim zadovoljavajući, molimo vrijeme kuhanja malo prilagodite postignutom rezultatu.

# ČIŠĆENJE I ODRŽAVANJE


**OBVEZATNO isključite pećnicu i izvadite utikač iz zidne utičnice !**

**Aparat se ne smije čistiti visokotlačnim parnim aparatom za čišćenje jer može doći do kratkog spoja i oštećenja.**

1. Unutrašnjost pećnice održavajte čistom. Kad hrana poprska, ili prolivena tekućina prione uz stijenke pećnice, obrišite ih vlažnom krpom. Ako su stijenke jako prljave, možete upotrijebiti blagi deterdžent. Izbjegavajte uporabu sredstva za čišćenje koja se raspršuju i drugačija gruba sredstva, jer ona mogu zamrljati, izbrazdati i izblijediti površinu vrata.
2. Vanjske površine valja čistiti vlažnom krpom. Da bi se spriječilo oštećivanje radnih dijelova unutar pećnice, ne smijete dopustiti prodiranje vode u ventilacijske otvore.
3. Mokrom krpom često brišite vrata i prozor s obje strane, te brtvila vrata i susjedne dijelove, tako da odstranite bilo kakve tragove prskanja ili naslage. Nemojte rabiti abrazivna sredstva za čišćenje.
4. Nemojte koristiti gruba abrazivna sredstva za čišćenje ili metalne strugače da biste očistili staklo na vratima pećnice, jer možete zagrepsti površinu zbog čega se staklo može rasprsnuti.
5. Nemojte dopustiti da upravljačka ploča bude mokra. Čistite je mekom, vlažnom krpom. Kad čistite upravljačku ploču, ostavite otvorena vrata pećnice, tako da spriječite njeno slučajno uključivanje.
6. Pećnicu treba redovito čistiti i odstranjivati bilo kakve naslage hrane u njoj. Propust u održavanju čistoće pećnice može dovesti do izobličavanja površine, time loše utjecati na uporabni vijek aparata i dovesti do rizične situacije u uporabi.
7. Ako se para nataloži unutar ili oko vanjske strane vrata, obrišite je mekom krpom. Do toga može doći kad mikrovalna pećnica radi u uvjetima velike okolne vlažnosti i to je normalna pojava.

8. Prsten s valjcima i pod pećnice trebaju se redovito čistiti, kako bi se izbjegla pretjerana buka u radu. Donju površinu jednostavno obrišite blagim deterdžentom. Prsten s valjcima može se prati u blago nasapunatoj vodi. Kod skidanja prstena s valjcima, upamtite njegov položaj na dnu pećnice tako da ga možete sigurno vratiti u odgovarajući položaj.
9. Povremeno zbog čišćenja, treba izvaditi staklenu tavu. Operite tavu u vodi sa sapunom, ili u stroju za pranje posuđa.
10. Odstranite miris iz vaše pećnice, tako da kombinirate šalicu vode sa sokom i korom jednog limuna u dubokoj mikrovalnoj posudi, pa mikrovalno kuhajte 5 minuta. Temeljito obrišite i osušite mekom krpom.
11. Za zamjenu žarulje u pećnici, molimo tražite usluge servisa.
12. Pećnicu treba redovito čistiti i odstranjivati bilo kakve naslage hrane u njoj. Propust u održavanju čistoće pećnice može dovesti do izobličavanja površine, time loše utjecati na uporabni vijek aparata i dovesti do rizične situacije u uporabi.
13. Simbol  označava da se električni i elektronski aparati na kraju njihovog uporabnog vijeka ne smiju odbacivati zajedno s ostalim kućnim otpadom. Molimo da ovaj aparat predate lokalnoj tvrtki koja se bavi zbrinjavanjem otpada ili ga odnosi u reciklažno dvorište.
14. Tijekom prve uporabe grila, pećnica će proizviđiti dim i neugodne mirise (zbog raznih sredstava koji se koriste tijekom proizvodnje) što je normalna pojava. Nakon nekog vremena ta će pojava nestati.

# **MICROWAVE OVEN**

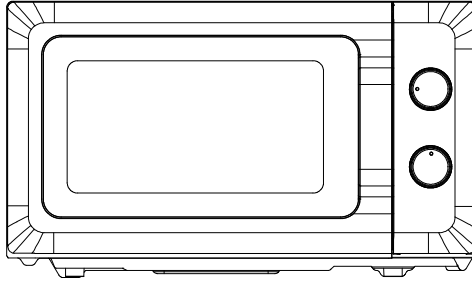

Model: M20BM

## ***Owner's Manual***

Please read these instructions carefully before installing and operating the oven.

## **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - a. Door (bent),
  - b. Hinges and latches (broken or loosened),
  - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## **CONTENT**

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....	1
IMPORTANT SAFETY INSTRUCTIONS .....	2
SPECIFICATIONS .....	4
INSTALLATION .....	4
RADIO INTERFERENCE.....	4
MICROWAVE COOKING PRINCIPLES .....	5
GROUNDING INSTRUCTIONS.....	5
BEFORE YOU CALL FOR SERVICE .....	5
UTENSILS GUIDE .....	6
PART NAMES .....	6
CONTROL PANEL .....	7
Power/Action Selector.....	7
Timer Knob.....	7
Microwave Cooking .....	7
OPERATION .....	8
CLEANING AND CARE .....	8

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. To reduce the risk of fire in the oven cavity:
  - ✧ When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
  - ✧ Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - ✧ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - ✧ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
7. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
8. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
9. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
10. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
11. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
12. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
13. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
14. Utensils should be checked to ensure that they are suitable for use in microwave oven.
15. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
16. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or

- lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
  19. The microwave oven is only used in freestanding.
  20. **WARNING:** Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid .
  21. The accessible surface may be hot during operation.
  22. The microwave oven shall not be placed in a cabinet.
  23. The door or the outer surface may get hot when the appliance is operating.
  24. The temperature of accessible surfaces may be high when the appliance is operating.
  25. The appliance shall be placed against a wall .
  26. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
  27. Children being supervised not to play with appliance
  28. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person
  29. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
  30. The microwave oven is for household use only and not for commercial use.
  31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
  32. Please secure the turn table before you move the appliance to avoid damages.
  33. **Caution:** It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
  34. The microwave oven is intended for defrosting, cooking and steaming of food only.
  35. Use gloves if you remove any heated food.
  36. **Caution!** Steam will escape, when opening lids or wrapping foil.
  37. This appliance can be used by children aged from 8 years and above and persons with reduced physical , sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance shall not be made by children unless they are aged from 8 years and above and supervised.
  38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle.

## SPECIFICATIONS

Power Consumption:	230V/50Hz, 1200W(Microwave)
Rated microwave power output:	700W
Operation Frequency:	2450MHz
Outside Dimensions:	262mm(H)×452mm(W)×345mm(D)
Oven Cavity Dimensions:	198mm(H)×315mm(W)×297mm(D)
Oven Capacity:	Compact 20Litres
Cooking Uniformity:	Turntable System
Net Weight:	Approx.10.5 kg

## INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

## RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.



## MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING** Improper use of the grounding plug can result in a risk of electric shock.

**Note:**

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH  
Blue = NEUTRAL  
Brown = LIVE

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.


## UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.


COOKWARE	MICROWAVE
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminum Foil & Foil Containers	No

## PART NAMES

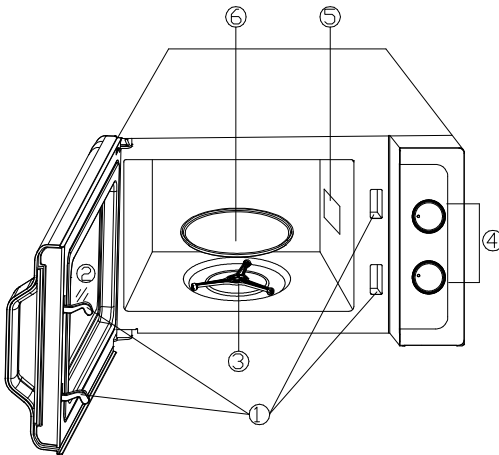

1. Door Safety Lock System
2. Oven Window
3. Turntable Support
4. Control Panel
5. Wave Guide
6. Glass Tray

# CONTROL PANEL

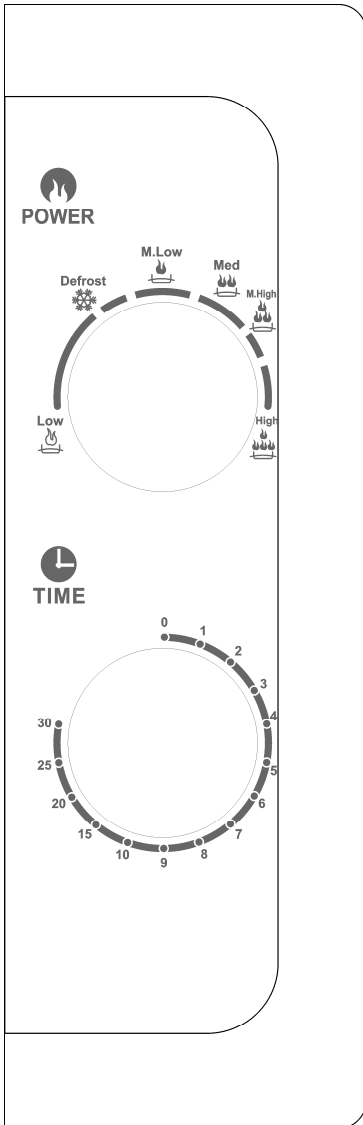

The control panel consists of two function operators. One is a timer knob, and another a power knob.

## ***POWER/ACTION SELECTOR***

Use this operator knob to choose a cooking power level. It is the first step to start a cooking session.

## ***TIMER KNOB***

It offers visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

## ***MICROWAVE COOKING***

For pure microwave cooking, there are six power levels from which to choose one as best fit to do the job at hand.

Power level increases with the knob turning clockwise. The power levels can be classified as the following:

Power Output	Description
100%	HIGH
88%	M.HIGH
73%	MED
52%	M.LOW
42%	DEFROST
20%	LOW

## OPERATION

To start a cooking session,

1. Place food in oven and close the door.
2. Turn Power Selector to select a power level.
3. Use Timer knob to set a cooking time.

### NOTE:

As soon as the timer is turned, oven starts cooking.

When selecting time for less than 2 minutes,


turn timer past 2 minutes and then return to the correct time.

**CAUTION:** ALWAYS RETURN TIMER BACK TO ZERO POSITION if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, push the door release button or open the door by the handle.

## CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous.
12. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

# Microwave Oven Instructions

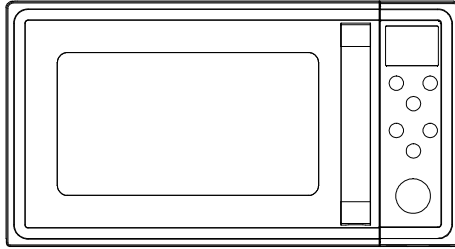

Model: GBH207QLH-PA0C1G

Please read these instructions carefully before installing and operating the oven.

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
  - a) Door (including any bents),
  - b) Hinges and latches (broken or loosened),
  - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

## Content

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....	1
Content .....	1
IMPORTANT SAFETY INSTRUCTIONS .....	2
Installation Guide .....	4
GROUNDING INSTRUCTIONS .....	4
Radio Interference .....	5
Before Calling For Service .....	5
Cooking Techniques .....	5
Cooking Utensils Guide .....	5
Specifications .....	7
Product Diagram .....	7
Control Panel .....	8
Operation Instructions .....	9
Setting clock time .....	9
Microwave cooking .....	9
Express cooking .....	10
Grill .....	10
Combination .....	10
Auto defrost .....	10
Preset .....	10
Child lock .....	11
Auto cook .....	11
Cleaning and Care .....	12

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:  
**WARNING!**--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **WARNING!**--When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated
7. To reduce the risk of fire in the oven cavity:
  - When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
  - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
  - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
8. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.

16. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This Microwave complies with EN 55011/CISPR 11, in this standard it belong to Class B Group 2 classification. Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of electromagnetic energy. Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid .
22. The microwave oven shall not be placed in a cabinet.
23. The door or the outer surface may get hot when the appliance is operating.
24. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting, cooking and steaming of food only.
35. Use gloves if you remove any heated food.
36. Caution! Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been



given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

## Installation Guide

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING!**--Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

**Green and Yellow = EARTH**

**Blue = NEUTRAL**

**Brown = LIVE**

## Radio Interference

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## Before Calling For Service

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

**IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.**

## Cooking Techniques

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

## Cooking Utensils Guide

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking.

This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.

2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.


COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No

# Specifications


Power Consumption:	230-240V/50Hz, 1200W(Microwave)
	900W (Grill)
Rated Microwave Power Output:	700W
Operation Frequency:	2450MHz
Outside Dimensions:	262mm(H)×452mm(W)×358mm(D)
Oven Cavity Dimensions:	198mm(H)×315mm(W)×297mm(D)
Oven Capacity:	20Litres
Net Weight:	Approx.11kg

# Product Diagram

1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Roller Ring
5. Control Panel
6. Wave Guide (Please do not remove the mica plate covering the wave guide)
7. Glass Tray
8. Grill Heater
9. Metal Rack

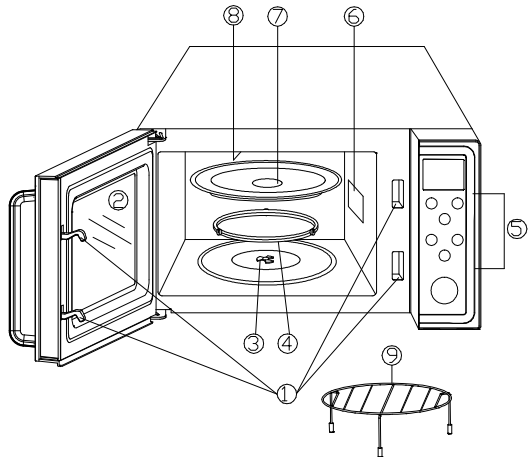

# Control Panel

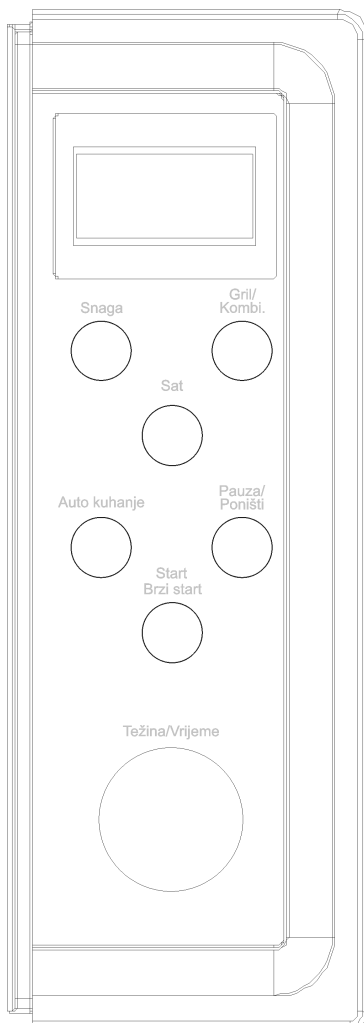

- **MENU ACTION SCREEN**

Cooking time, power, action indicators are displayed.

- **POWER(SNAGA)**

Press this pad a number of times to set microwave cooking power level.

- **GRILL/COMBI.(GRIL/KOMBI.)**

Press to set grill program.

Press to set combination program.

- **CLOCK/PRESET(SAT)**

Use to set clock time.

Use to set the oven to start-up at a later time.

- **AUTO COOK(AUTO KUHANJE)**

Instant settings to cook popular foods.

- **PAUSE/CANCEL(PAUZA/PONIŠTI)**

Press to cancel setting or reset the oven before setting a cooking program.

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

- **START/QUICK START(START/BRZI START)**

Press once to start a cooking program.


Simply press it a number of times to set cooking time and cook immediately at full power level.

- **WEIGHT/TIME(TEŽINA/VRIJEME)(knob)**

Turn to enter time or food weight.

Turn to enter food weight or shares.

# Operation Instructions

- When the oven first plugged in, beep will sound and the display will show "1:01", "".
- In the process of cooking set, broke about 25 seconds the oven will return to standby mode.
- During cooking, if press PAUSE/CANCEL pad once, the program will be paused, then press START/QUICK START pad to resume, but if press PAUSE/CANCEL pad twice, the program will be canceled.
- After ending cooking, the screen will display End with sound every two minutes until user press any pad or open the door.
- In the process of operation, press a valid button, the buzzer rings once, but if press a invalid button, the buzzer rings twice.
- The electronically controlling system of the microwave oven has the feature of cooling. As for any cooking mode which cooking time above 2 minutes, after cooking end, cooking program is paused or stopping state, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life of the oven.

## SETTING CLOCK TIME

This is a 24 and 12 hour clock. you can choose to set the clock time in 24 or 12 hour cycle by pressing the CLOCK/PRESET button in standby mode.

1. In standby mode, press CLOCK/PRESET pad once or twice to choose 24 hour or 12 hour clock.
2. Turn WEIGHT/TIME knob to set hour digit.
3. Press CLOCK/PRESET button once.
4. Turn WEIGHT/TIME knob to set minute digit.
5. Press CLOCK/PRESET button once to confirm.

**NOTE:** During cooking, you can check the current time of the clock by touching CLOCK/PRESET pad.

## MICROWAVE COOKING

1. In standby mode, press POWER pad a number of times to select power level.
2. Turn WEIGHT/TIME knob to enter cooking time. The longest cooking time is 95 minutes.
3. Press START/QUICK START to confirm.

**Press the POWER pad to select power level:**

Press POWER pad	Cooking Power(Display)
Once	100%(100)
Twice	80%(80)
3 times	60%(60)
4 times	40%(40)
5 times	20%(20)
6 times	0%(00)

**NOTE:** During cooking you can check the cooking power level by touching POWER pad. If you want to set 100% power level, you can omit the step 1 given above.

## **EXPRESS COOKING**

---

The oven will cook food quickly at HIGH power (100% power output) for quick start cooking program. In standby mode, just press the START/QUICK START a number of times to set cooking time, the oven starts working automatically. The maximum cooking time you can enter is 10 minutes.

**NOTE:** During cooking, you can also add the cooking time by touching START/QUICK START pad.

## **GRILL**

---

1. In standby mode, press GRILL/COMBI. pad once.
2. Turn WEIGHT/TIME knob clockwise to enter cook time. The longest cooking time is 95 minutes.
3. Press START/QUICK START to confirm.

## **COMBINATION**


---

1. In standby mode, press GRILL/COMBI. pad twice or thrice to select combination 1 or combination 2.
2. Turn WEIGHT/TIME knob clockwise to enter cook time. The longest cooking time is 95 minutes.
3. Press START/QUICK START pad to confirm.

## **AUTO DEFROST**

---

The defrosting time and power level are automatically set once the food weight is programmed. The frozen food weight ranges from 100g to 1800g.

1. In standby mode, press AUTO COOK pad repeatedly until the display shows "A-12", "AUTO", "".
2. Turn WEIGHT/TIME knob to select weight of food to be defrosted.
3. Press START/QUICK START to confirm.

**NOTE:** During defrosting program, the system will pause and sound to remind user to turn food over, and then press START/QUICK START pad to resume.

## **PRESET**

---

This function allows you to set the oven to start a cooking program in a later time.

1. Open the door and place the food into the oven, close it.
2. Enter the desired cook program (except express cooking and auto defrost).
3. Press CLOCK/PRESET pad once.
4. Turn WEIGHT/TIME knob to set hour digit.
5. Press CLOCK/PRESET pad once.
6. Turn WEIGHT/TIME knob to set minute digit.
7. Press CLOCK/PRESET to confirm.

### **NOTE:**

- When CLOCK/PRESET is pressed, the time you have preset will be displayed, at this moment you can cancel the program by pressing PAUSE/CANCEL button.
- You can check the preset time by pressing CLOCK/PRESET button.

## CHILD LOCK

Use to prevent unsupervised operation of the oven by little children.

- To set the child lock: In standby mode, without any operation within one minute, the oven will auto enter child lock mode and the lock indicator light will turn on. In the lock state, all buttons are disabled.
- To cancel the child lock: In child lock mode, open or close the oven door can cancel the program.

## AUTO COOK

For food or the following cooking mode, it is not necessary to program the time and the cooking power. It is sufficient to indicate the type of food that you want to cook as well as the weight or shares of this food.

1. In standby mode, press AUTO COOK pad repeatedly to select food code.
2. Turn WEIGHT/TIME knob to indicate the desired weight or shares.
3. Press START/QUICK START pad to start.

### Auto cook menus:

Code	Food	
A-1	Potato(230g/share)	
A-2	Vegetables(g)	
A-3	Popcorn(100g)	
A-4	Auto Reheat(g)	
A-5	Spaghetti(g)	
A-6	Pizza(g)	
A-7	Fish(g)	
A-8	Chicken(g)	
A-9	Beef/Mutton(g)	
A-10	Skewered Meat(g)	
A-11	Grilled Ham(g)	

1. For items 8~11, the oven will pause during cooking to remind user to turn food over for uniform cooking and then press START/QUICK START to finish the remaining time.

2. The result of auto cooking depends on factors such as voltage fluctuation, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.



## Cleaning and Care

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

# **MICROWAVE OVEN**



MODEL: M20IEG

## **Owner's Manual**

Please read these instructions carefully before installing and operating the oven.

## **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - a. Door (bent),
  - b. Hinges and latches (broken or loosened),
  - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## **CONTENTS**

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....	1
IMPORTANT SAFETY INSTRUCTIONS .....	2
SPECIFICATIONS .....	4
INSTALLATION .....	4
RADIO INTERFERENCE .....	4
GROUNDING INSTRUCTIONS .....	5
MICROWAVE COOKING PRINCIPLES .....	5
BEFORE YOU CALL FOR SERVICE .....	5
UTENSILS GUIDE .....	6
PART NAMES .....	6
CONTROL PANEL .....	7
HOW TO SET THE OVEN CONTROLS .....	8
Setting clock time.....	8
Quick Start .....	8
Microwave Cooking.....	8
Grill Cooking .....	9
Combination Cooking.....	9
Preset Function.....	9
Weight Defrost .....	9
Child Lock .....	10
Auto Cook .....	10
CLEANING AND CARE .....	11

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
6. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
7. To reduce the risk of fire in the oven cavity:
  - a. When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
  - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
8. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic

purpose.

18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed could be damaged and the warranty would be void .
22. The accessible surface may be hot during operation.
23. The microwave oven shall not be placed in a cabinet.
24. The door or the outer surface may get hot when the appliance is operating.
25. The temperature of accessible surfaces may be high when the appliance is operating.
26. The appliance shall be placed against a wall.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
28. Children being supervised not to play with appliance
29. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person
30. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
31. The microwave oven is for household use only and not for commercial use.
32. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
33. Please secure the turn table before you move the appliance to avoid damages.
34. **Caution:** It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
35. The microwave oven is intended for defrosting, cooking and steaming of food only.
36. Use gloves if you remove any heated food.
37. **Caution!** Steam will escape, when opening lids or wrapping foil.
38. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
39. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle.

## SPECIFICATIONS

Power Consumption:	230V/50Hz
	1200W(Microwave)
	900(Grill)
Microwave Power Output:	700W
Operation Frequency:	2450MHz
Outside Dimensions:	262mm(H)×452mm(W)×330mm(D)
Oven Cavity Dimensions:	198mm(H)×315mm(W)×297mm(D)
Oven Capacity:	Compact 20Litres
Net Weight:	Approx.11.3 kg

## INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

## RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING** Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

**Green and Yellow = EARTH**

**Blue = NEUTRAL**

**Brown = LIVE**

## MICROWAVE COOKING PRINCIPLES

3. Arrange food carefully. Place thickest areas towards outside of dish.
4. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
5. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
6. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
7. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.


## UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave can not penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No


## PART NAMES

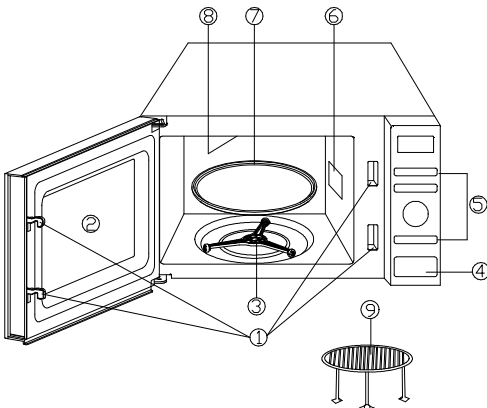

1. Door Safety Lock System
2. Oven Window
3. Turntable Roller
4. Door Release Button
5. Control Panel
6. Wave Guide
7. Glass Tray
8. Grill Heater
9. Metal Rack



## CONTROL PANEL

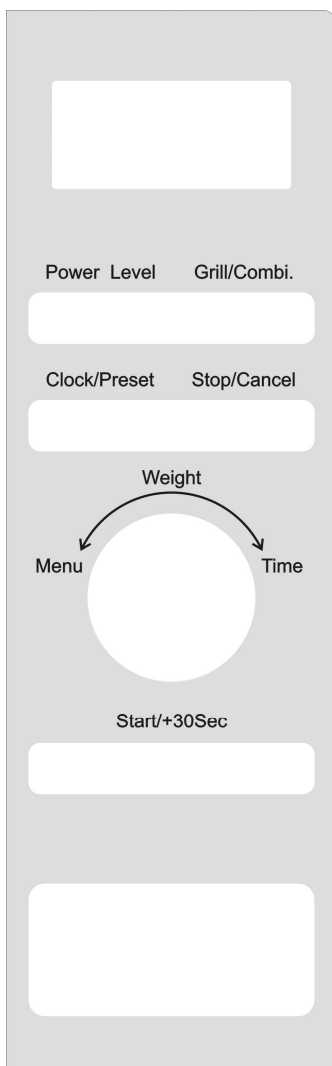

- **MENU ACTION SCREEN**

Cooking time, power, action indicators, and clock time are displayed.

- **POWER LEVEL**

▶ Press this button a number of times to set microwave cooking power level.

- **CLOCK/PRESET**

▶ Press this button to set oven clock.  
▶ Press to program a cooking program which starts at an appoint time automatically.

- **GRILL/COMBI.**

▶ Press to set grill program or combination program.

- **STOP/CANCEL**

▶ Press to cancel setting or reset the oven before setting a cooking program.  
▶ Press once to temporarily stop cooking, or twice to cancel cooking altogether.  
▶ It is also used for setting child lock.


- **TIME/WEIGHT/MENU(KNOB)**

▶ Turn the knob to enter time.  
▶ Press to specify food weights or number of servings.  
▶ Turn the knob to select an auto-cooking menu.

- **START/+30SEC**

▶ Press once to start a cooking program  
▶ Simply press it a number of times to set cooking time and cook immediately at full power level.

# HOW TO SET THE OVEN CONTROLS

- When the oven is first plugged in, the display will show “1:01”, 
- During the setting mode, the system will return to waiting mode if there is not any operation within 25 seconds.
- During cooking, if press STOP/CANCEL pad once or open the door, the program will be paused, then press START/+30SEC pad to resume, but if press STOP/CANCEL pad twice, the program will be canceled.
- After ending cooking, the screen will display End with sound every two minutes until user press STOP/CANCEL pad or open the door.

## SETTING CLOCK TIME

This is 12 or 24-hour cycle clock. To check the time while the oven is operating, press the CLOCK/PRESET button, then the time will be displayed for a while on the display screen.

FOR EXAMPLE: Suppose you want to set the oven clock time to 8:30.

1. Press CLOCK/PRESET button once or twice to choose 12 or 24 hour cycle.
2. Turn TIME/WEIGHT/MENU knob to set hour digit 8.
3. Press CLOCK/PRESET button once to confirm the hour setting.
4. Turn TIME/WEIGHT/MENU to set minute digit 30.
5. Press CLOCK/PRESET button once to confirm the setting.

## QUICK START

The oven will cook food quickly at HIGH power (100% power output) for quick start cooking program. Just press the START/+30SEC a number of times to set cooking time, the oven starts working automatically at full power. The maximum cooking time you can enter is 10 minutes.

## MICROWAVE COOKING

For microwave cooking, just press the POWER LEVEL button a number of times to select a cooking power level, and then use the TIME/WEIGHT/MENU knob to set a desired cooking time. The longest cooking time is 95 minutes. The oven will start cooking after you press START/+30SEC button.

For example, suppose you want to cook for 10 minute at 60% of microwave power.

1. Press POWER LEVEL button a number of times to set 60%.

Press POWER LEVEL button	COOKING POWER
once	100%
twice	80%
3 times	60%
4 times	40%
5 times	20%
6 times	0%

2. Turn TIME/WEIGHT/MENU knob to 10:00.
3. Press START/+30SEC.

**NOTE:** During cooking, you can check the power level by touching POWER LEVEL pad.



## GRILL COOKING

---

Suppose you want to grill for 40 minutes.

1. Press GRILL/COMBI. pad once.
2. Turn TIME/WEIGHT/MENU knob to 40:00.
3. Press START/+30SEC pad.

**NOTE:** The longest cooking time is 95 minutes.

## COMBINATION COOKING

---

### COMBINATION 1

30% time for microwave cooking, 70% time for grill cooking. Use for fish or au gratin.

Suppose you want to set the oven to cook with COMBINATION 1 for 12 minutes.

1. Touch GRILL/COMBI. pad twice.
2. Turn TIME/WEIGHT/MENU knob to 12:00.
3. Press START/+30SEC pad.

**NOTE:** The longest cooking time is 95 minutes.

### COMBINATION 2

55% time for microwave cooking, 45% time for grill cooking. Use for pudding omelets, baked potatoes, and poultry.

Suppose you want to set the oven to cook with COMBINATION 2 for 25 minutes.

1. Touch GRILL/COMBI. Pad thrice.
2. Turn TIME/WEIGHT/MENU knob to 25:00.
3. Press START/+30SEC pad.

**NOTE:** The longest cooking time is 95 minutes.

## PRESET FUNCTION

---

This function allows you to program a cooking program to start at an appointed time.

For example: Suppose the present time is 9:00, and you want the oven to start a cooking program at 11:30.

1. Enter a desired cooking program (except Quick start and Defrost program).
1. Press CLOCK/PRESET button once.
2. Turn TIME/WEIGHT/MENU knob to set hour digit 11:00.
3. Press CLOCK/PRESET button once.
4. Turn TIME/WEIGHT/MENU knob to set minute to show 11:30.
5. Press CLOCK/PRESET to confirm.

**NOTE:** Before using the function, please confirm the oven clock time is correct. In preset mode, the preset time can be seen by pressing CLOCK/PRESET pad, if press STOP/CANCEL pad when the display shows the time, the function is cancelled.

## WEIGHT DEFROST

---

The oven allows you to defrost food based on the weight entered by user. The defrosting time and power level are automatically set once the food category and the weight are programmed. The frozen

food weight ranges from 100g to 1800g.

FOR EXAMPLE: Suppose you want to defrost 600g of shrimp.

1. Turn TIME/WEIGHT/MENU knob anti-clockwise until "12", "6:30" and "AUTO" display on the screen.
2. Press START/+30SEC to confirm.
3. Turn TIME/WEIGHT/MENU knob to select weight of food to be defrosted.
4. Press START/+30SEC.

**NOTE:** The oven stops during defrosting to let the user to turn food over for uniform defrosting and then press START/+30SEC to defrost for the remaining time.

## CHILD LOCK

Use to prevent unsupervised operation of the oven by little children. The CHILD LOCK indicator will show up on display screen, and the oven cannot be operated while the CHILD LOCK is set.

To set the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds, a beep sounds and lock indicator lights.

To cancel the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds until lock indicator on display turns off.

## AUTO COOK

For the following foods or cooking operation, you do not need to input cooking power and time. Try to focus on telling the oven what you want to cook and how much the food weighs. The oven starts to work after you pressing the START/+30SEC.

For example:

1. In waiting mode, turn the TIME/WEIGHT/MENU dial anti-clockwise to select food code to specify the food to be cooked.
2. Press START/+30SEC button to confirm.
3. Turn the TIME/WEIGHT/MENU dial to indicate the desired weight.
4. Press START/+30SEC button.

Auto cooking menu

Code	Food	
1	Spaghetti (g)	
2	Potatoes (each 230g)	1. For potato, the screen will show the number of serving instead of food weight.
3	Auto Reheat (g)	2. The result of auto cooking depends on factors such as voltage fluctuation, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
4	Popcorn (100g)	
5	Fish (g)	
6	Pizza(g)	
7	Vegetables(g)	
8	Chicken(g)	3. For items 8~11, the oven will pause to remind user to turn food over for better cook, and then press START/+30SEC pad to continue.
9	Beef/Mutton(g)	
10	Skewered Meat(g)	
11	Grill Ham(g)	

## CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the both sides of the door and window, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
13. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.



**KONČAR - KUĆANSKI APARATI d.d.**

Slavonska avenija 16 , 10001 Zagreb , Hrvatska

tel : ++ 385 1/2484 555

fax : ++ 385 1/2404 102

[www.koncar-ka.hr](http://www.koncar-ka.hr)