

HR

UPUTE ZA UPORABU

EN

OWNER'S MANUAL

**UGRADBENA PEĆNICA
BUILT-IN OVEN**

UPP7214TM

KONČAR

SADRŽAJ







SIGURNOSNE UPUTE	02
TEHNIČKI PODACI	06
PREGLED PROIZVODA	07
VODIĆ ZA BRZI POCETAK	09
UGRADNJA PROIZVODA	10
UPUTE ZA RAD	15
ČIŠĆENJE I ODRŽAVANJE	23
RJEŠAVANJE PROBLEMA	25
ODLAGANJE I RECIKLIRANJE	26

SIGURNOSNE UPUTE

Namjena

Slijedeće smjernice namijenjene su kako bi spriječile nepredviđene rizike ili štetu od nesigurnog ili neispravnog rada uređaja. Molimo provjerite pakiranje i uređaj pri dolasku kako biste se uvjerali da je sve netaknuto kako bi se osigurao siguran rad. Ako pronađete bilo kakvo oštećenje, molimo kontaktirajte trgovca. Molimo imajte na umu da izmjene ili zamjene na uređaju nisu dozvoljene zbog vaše sigurnosti. Nenamjenska uporaba može rezultirati opasnostima i gubitkom potraživanja vezanih uz jamstvo.

Objašnjenje simbola

	Opasnost Ovaj simbol pokazuje da postoje opasnosti po život i zdravlje osoba zbog izuzetno zapaljivih plinova i požara.
	Upozorenje na visoki napon Ovaj simbol pokazuje da postoji opasnost po život i zdravlje osoba zbog visokog napona.
	Upozorenje Signalna riječ pokazuje opasnost sa srednjom razinom rizika koji, ako se ne izbjegne, može dovesti do smrti ili ozbiljne ozljede.
	Oprez Signalna riječ pokazuje opasnost s niskim stupnjem rizika koji, ako se ne izbjegne, može dovesti do manje ili srednje ozljede.
	Pozornost Signalna riječ ukazuje na važne informacije (primjerice oštećenje imovine) ali ne na opasnost.
	Proučite upute Ovaj simbol pokazuje da bi servisni tehničar trebao raditi popravke i ostale radnje sukladno uputama za rad.

Pozorno pročitajte ove upute za rad prije uporabe/ puštanja u pogon jedinice i držite ih u neposrednoj blizini mjesta postavljanja ili jedinice za kasniju uporabu!

▲ UPOZORENJE

- Uređaj i njegovi dostupni dijelovi postaju vrući tijekom uporabe. Treba paziti da ne dodirnete grijaće elemente.
Djecu mlađu od 8 godina treba držati podalje osim ako nisu pod stalnim nadzorom.
- Ovaj uređaj mogu koristiti djeca starija od 8 godina i osobe sa smanjenim fizičkim, osjetilnim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja ako su pod nadzorom ili su ih podučili u vezi s korištenjem uređaja na siguran način i ako razumiju uključene opasnosti. Djeca se ne smiju igrati s uređajem. Čišćenje i korisničko održavanje ne smiju obavljati djeca bez nadzora.
- Ako je površina napuknuta, isključite uređaj kako biste izbjegli mogućnost strujnog udara.

ZABRANJENO

- Ne koristite oštra abrazivna sredstva za čišćenje ili oštre metalne strugače za čišćenje stakla na vratima pećnice jer mogu ogrebat površinu, što može dovesti do pucanja stakla.
- Ne smije se koristiti parni čistač.
- Uređaj nije namijenjen za upravljanje pomoću vanjskog mjerača vremena ili zasebnog sustava daljinskog upravljanja.
- Ne koristite pećnicu osim ako ne nosite nešto na nogama.
Ne dirajte pećnicu mokrim ili vlažnim rukama ili nogama.
- Kada su vrata ili ladica pećnice otvoreni, ne ostavljajte ništa na njima jer biste mogli dovesti do poremećaja ravnoteže uređaja ili lomljenja vrata.
- Ne dopustite djeci da se približavaju pećnici dok radi, posebno kada je roštilj uključen.
- Pazite na kućne ljubimce i držite ih pod nadzorom.

- Koristite proizvod u zatvorenim i prozračenim prostorima.
- Tijekom uporabe uređaj postaje jako vruć. Treba paziti da ne dodirujete grijaće elemente unutar pećnice.
- Uvjerite se da je uređaj isključen prije zamjene žarulje u pećnici kako biste izbjegli mogućnost električnog udara.
- Sredstvo za odspajanje mora biti ugrađeno u fiksno ožičenje u skladu sa specifikacijama ožičenja.
- Djecu treba nadzirati kako bi se osiguralo da se ne igraju s uređajem.
- Ovaj uređaj nije namijenjen za korištenje od strane osoba (uključujući djecu) sa smanjenim fizičkim, osjetilnim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja, osim ako nisu pod nadzorom ili su dobili upute o korištenju uređaja od strane osobe odgovorne za njihovu sigurnost.
- Dostupni dijelovi mogu postati vrući tijekom uporabe. Malu djecu treba držati podalje.
- Sklopka za isključivanje svih polova mora biti ugrađeno u fiksno ožičenje u skladu s pravilima ožičenja.
- Ako je kabel za napajanje oštećen, mora ga zamijeniti proizvođač, njegov serviser ili slično kvalificirana osoba kako bi se izbjegla opasnost.

- Kada se pećnica prvi put uključi, može se osjećati neugodan miris. To je zbog vezivnog sredstva koje se koristi za izolacijske ploče unutar pećnice. Pustite novi prazan proizvod s konvencionalnom funkcijom kuhanja, 250°C, 30 minuta kako biste očistili nečistoće ulja unutar šupljine. **PROZRAČIVATI PROSTORIJU !**
- Tijekom prve uporabe sasvim je normalno da će se pojaviti blagi dim. Ako se ipak dogodi, pričekajte da miris nestane prije nego stavite hranu u pećnicu.
- Koristite samo temperaturnu sondu preporučenu za ovu pećnicu.
- Tijekom pečenja ne smijete često otvarati vrata pećnice.
- Aparat mora instalirati ovlašteni tehničar i staviti ga u uporabu. Proizvođač nije odgovoran za bilo kakvu štetu nastalu zbog neispravnog postavljanja i instalacije od strane neovlaštenog osoblja.
- Kada su vrata ili ladica pećnice otvoreni, ne ostavljajte ništa na njima jer biste mogli dovesti do poremećaja ravnoteže uređaja ili lomljenja vrata.
- Neki dijelovi uređaja mogu dugo zadržati toplinu; potrebno je pričekati da se ohladi prije izravnog dodirivanja točaka koje su izložene toplini.
- Ako nećete koristiti uređaj dulje vrijeme, savjetuje se da ga isključite iz struje.


TEHNIČKI PODACI

Model	UPP7214TM
Napon	220-240V~ , 50Hz-60Hz
Snaga	3.2kW
Snaga osvjetljenja	25*2W
Volumen pećnice	72L

PREGLED PROIZVODA

Pećnica

Prilikom vađenja hrane nosite termoizolacijske rukavice kako biste spriječili opekline!
Obratite pažnju na vrući zrak kada otvarate vrata pećnice.

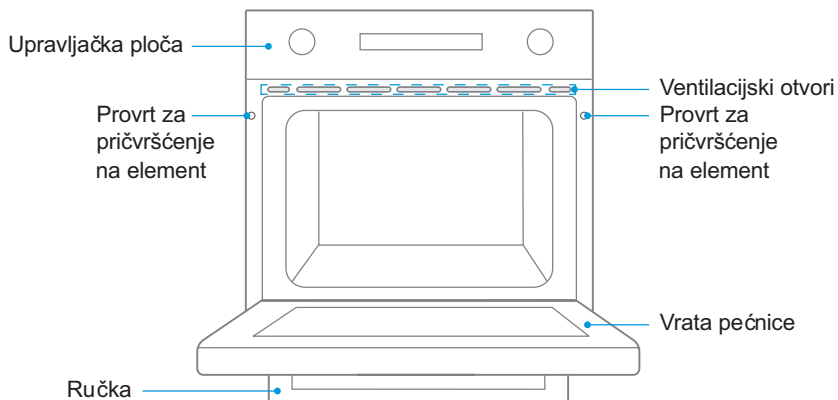


Pribor (MOŽE VARIRATI - OVISNO O MODELU)




Žičana rešetka x1

 Pecite hranu na roštilju ili stavite posude za kuhanje otporne na toplinu




Tava x1

 Kuhanje hrane ili primanje ostataka hrane



Klizna vodilica x2

 Samo za neke modele




Košarica za prženje na zraku x1
Specifična funkcija prženja na zraku



Sonda x1

 
Samo za neke modele




Mali gril nosač x1

Spremajte male porcije hrane
Samo za neke modele


Pribor (MOŽE VARIRATI - OVISNO O MODELU)

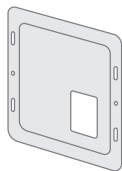

 
Zaštitna ploča
Blokira ostatke hrane
Samo za neke modele



 Nož za pizzu
Za rezanje pizze
Samo za neke modele




Okrugla tava za pizzu
Poseban pribor za funkciju
pravljenja pizze
Samo za neke modele

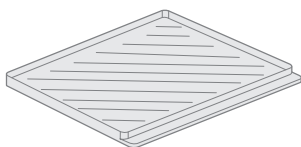

Posuda za prženje
Zagrijana mesna hrana
(Mogu se koristiti i prednja
i stražnja strana)
Samo za neke modele





 
Štapić za roštilj
Za nizanje mesa i povrća
Samo za neke modele



Rotirajući ražanj za roštilj
Roštilj, poput piletine i
puretine.
Samo za neke modele

Upotreba pribora


Kako bi pećnica ispravno radila, rešetku za roštilj i tavu za roštilj trebate postaviti samo između prve i pete razine. Kada se koriste zajedno, stavite posudu za roštilj ispod rešetke za roštilj.

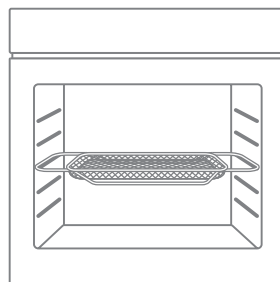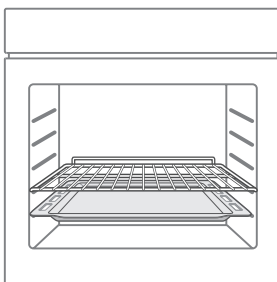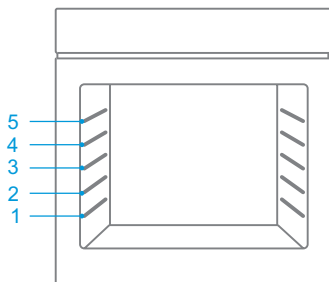

Samo za neke modele

VODIČ ZA BRZI POČETAK


Upravljačka ploča pećnice

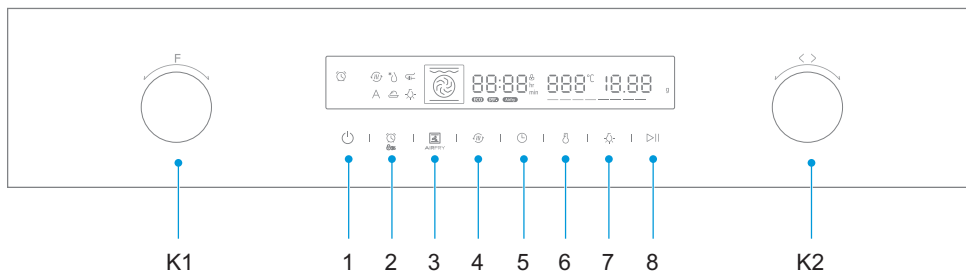

ikona	Uvod
1	Poništite trenutnu postavku i vratite se u stanje pripravnosti.
2	Pritisnite kratko za ulazak u postavku funkcije podsjetnika. Pritisnite i držite 3 sekunde za ulazak ili izlazak iz stanja zaključavanja za djecu.
3	Omogućuje brzu i ravnomjernu raspodjelu topline, vrući zrak također oduzima vlagu s površine hrane, stvarajući hrskavo prženje. (Prženje na vrućem zraku)
4	Prethodno zagrijte šupljinu kako biste osigurali okus hrane.
5	Unesite stanje postavke vremena.
6	Uđite u stanje podešavanja temperature.
7	Pritisnite ovu tipku za uključivanje ili isključivanje svjetiljke.
8	Pokrenite ili pauzirajte kuhanje.
K1	Odaberite funkciju kuhanja.
K2	Podesite vrijeme ili temperaturu.



UGRADNJA PROIZVODA

Dijagram elementa (visoki element na zidu)

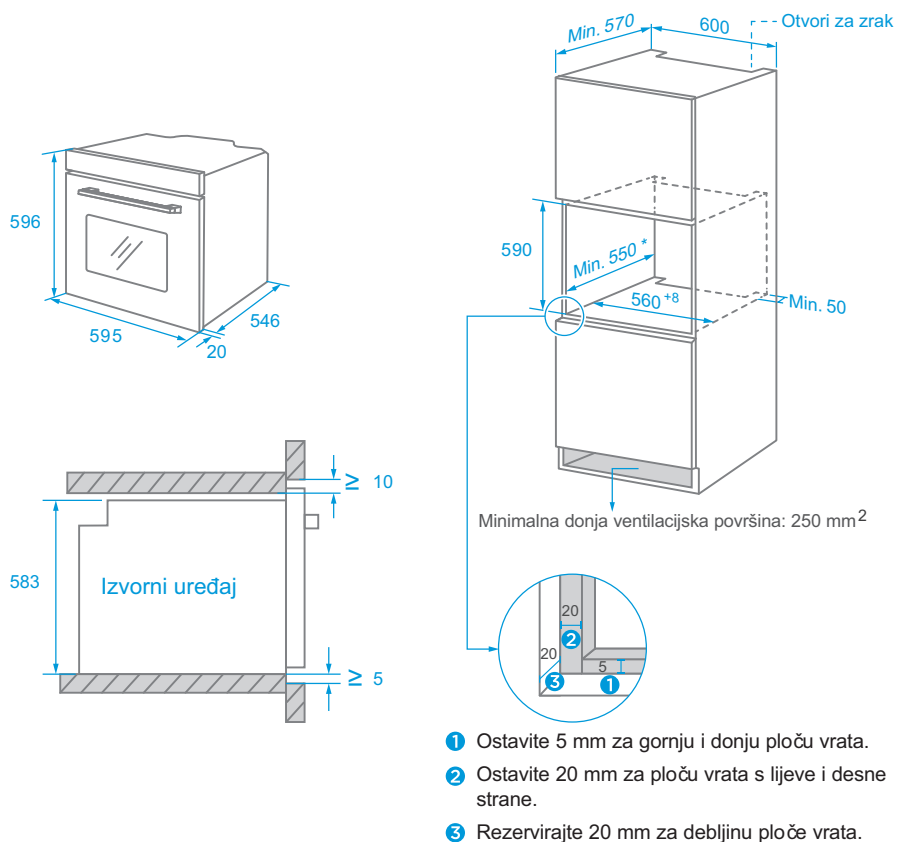


1. Debljina daske ormara je 20 mm.
2. Ako je utičnica instalirana na stražnjoj strani uređaja, dubina otvora ormarića mora se povećati s minimalno 590 mm na 620 mm.
3. Dimenzije na slikama su u mm.


Dijagram elementa (element s radnom pločom)

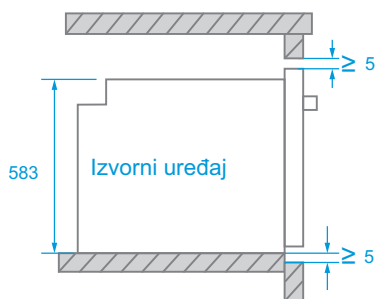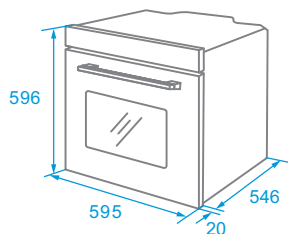

Bez ploče za kuhanje

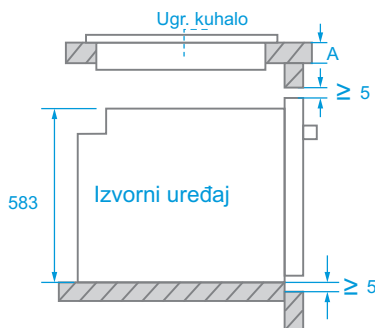

Sa pločom za kuhanje

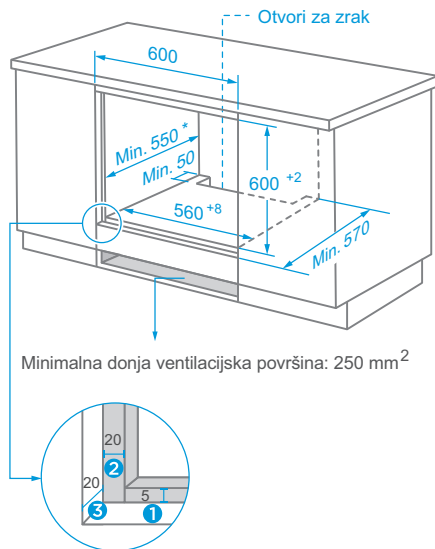

- 1 Ostavite 5 mm za gornju i donju ploču vrata.
- 2 Ostavite 20 mm za ploču vrata s lijeve i desne strane.
- 3 Rezervirajte 20 mm za debljinu ploče vrata.

Ako je uređaj postavljen ispod ploče za kuhanje, minimalna debljina radne ploče A prikazana je u nastavku:

Vrsta ploče za kuhanje	Radna ploča A
Indukcijska ploča za kuhanje	37 mm
Indukcijska ploča za kuhanje pune površine	47 mm
Ploča za kuhanje na plin	30 mm
Električna ploča za kuhanje	27 mm

1. Debljina daske ormara je 20 mm.
2. Ako je utičnica instalirana na stražnjoj strani uređaja, dubina otvora ormarića mora se povećati s minimalno 590 mm na 620 mm.
3. Dimenzije na slikama su u mm.

❗ Sadržaj koji znači [obavezno]

1. Siguran rad ovog uređaja može se jamčiti samo ako je instaliran prema profesionalnim standardima u skladu s ovim uputama za montažu. Instalater je odgovoran za bilo kakvu štetu nastalu neispravnom ugradnjom.
2. Cijeli proces instalacije zahtijeva dva profesionalna instalatera. Nosite suhe zaštitne rukavice tijekom postavljanja kako biste izbjegli ogrebotine ili strujni udar.
3. Ugrađene jedinice moraju biti otporne na toplinu do 90°C, a prednje strane susjednih jedinica do 70°C.
4. Molimo koristite utičnicu od 16A.

⊘ Sadržaj koji znači [zabranjeno]


1. Ne postavljajte uređaj iza ukrasnih vrata ili vrata kuhinjskog elementa, jer to može uzrokovati pregrijavanje uređaja.
2. Provjerite je li uređaj oštećen nakon raspakiranja. Ne priključujte uređaj ako je oštećen u transportu.
3. Nemojte blokirati ventilacijski otvor uređaja i razmak između ormarića i uređaja.
4. Budite iznimno oprezni prilikom premještanja ili postavljanja uređaja. Uređaj je vrlo težak, nemojte podizati uređaj za ručku na vratima.
5. Ako je kabel za napajanje ili utikač oštećen, odmah prestanite koristiti uređaj kako biste izbjegli požar, električni udar ili druge ozljede.

⚠ Sadržaj koji znači [napomena]



1. Budite vrlo oprezni kada premještate ili postavljate uređaj kako biste izbjegli oštećenje uređaja ili oštećenja ormarića.
2. Prije pokretanja uređaja uklonite sav materijal za pakiranje i pribor iz šupljine.
3. Utičnice moraju biti dostupne korisnicima (kao što je pored ormarića) za jednostavno uključivanje.
4. Nakon završetka instalacije, provjerite je li utikač čvrsto umetnut u utičnicu.
5. Molimo pogledajte "Dijagram elementa" za zahtjeve neto dubine ormarića. Razmak između donje ploče ormara i stražnje ploče (ili zida) ne smije biti manji od 50 mm.

Koraci za instalaciju




1. Molimo prilagodite ormarić prema "Dijagramu elementa".
2. Prije postavljanja provjerite postoji li normalna strujna utičnica i odgovarajuće uzemljenje te provjerite zadovoljava li dimenzija ormarića zahtjeve za postavljanje.
3. Aparat postavite na za to predviđena mjesta u kuhinji, ugradite ga u vertikalni ormarić i spojite na struju.
4. Kako biste pronašli otvore za pričvršćivanje, otvorite vrata uređaja i pogledajte bočni okvir uređaja (položaj prikazan gore).
5. Pričvrstite uređaj na ormar s dva gumena čepa A i vijka B koji ste dobili uz uređaj.

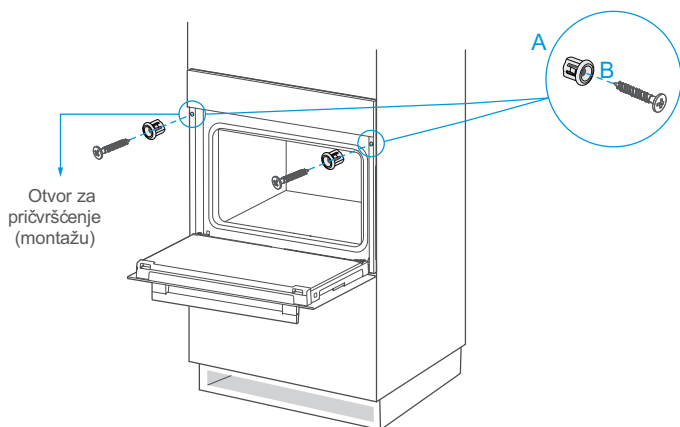

Montaža pribora

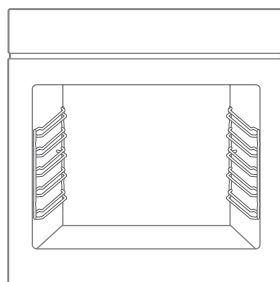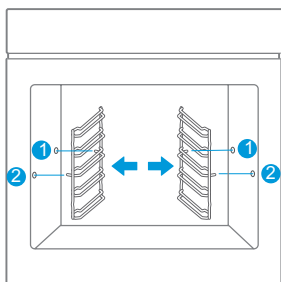


Ugradnja dodatne opreme (Samo za neke modele)

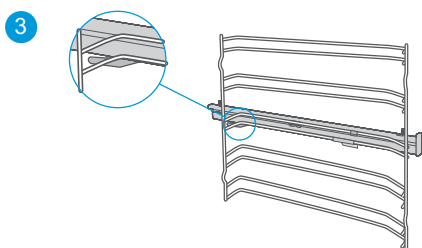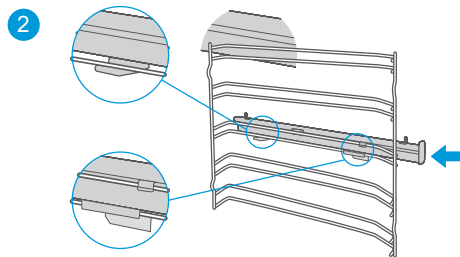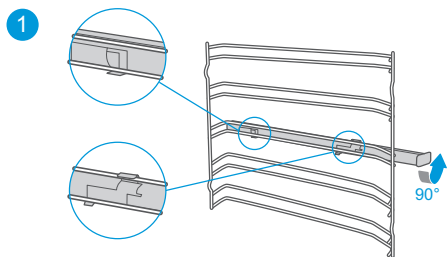

UPUTE ZA RAD




Prva uporaba


1. Prije prve uporabe, očistite pećnicu i pribor do određene mjere. Uklonite zaštitne dijelove pakiranja pećnice. Uklonite sav pribor (npr: posude za pečenje, rešetke, pjenu itd.) iz udubljenja.
2. Temeljito očistite dodatak sapunicom i krpom ili mekom četkom.
3. Obrišite šupljinu i površine pećnice mekom vlažnom krpom.
4. Kako biste izbjegli požar, provjerite je li šupljina čista od preostalih materijala za pakiranje i pribora kada ga koristite po prvi put.
5. Kada ga koristite prvi put, neka kuhinja bude dobro prozračena (otvorite poklopac i prozore). Za to vrijeme djecu i kućne ljubimce držite izvan kuhinje i držite zatvorena vrata susjednih prostorija.
6. Kako biste uklonili miris novih proizvoda, pokrenite sljedeće:

Način rada pećnice	Temperatura	Vrijeme
 Konvencionalno	250°C	30 min

Podešavanje sata


Prije korištenja pećnice namjestite sat.
Ako želite ponovno promijeniti sat, slijedite korake 1.

1. U stanju pripravnosti pritisnite tipku "".
2. Pritisnite tipku **K1** za podešavanje znamenke sata.
3. Pritisnite tipku "" za potvrdu.
4. Pritisnite tipku **K2** za podešavanje znamenki minuta.
5. Pritisnite tipku "" za završetak postavki sata.

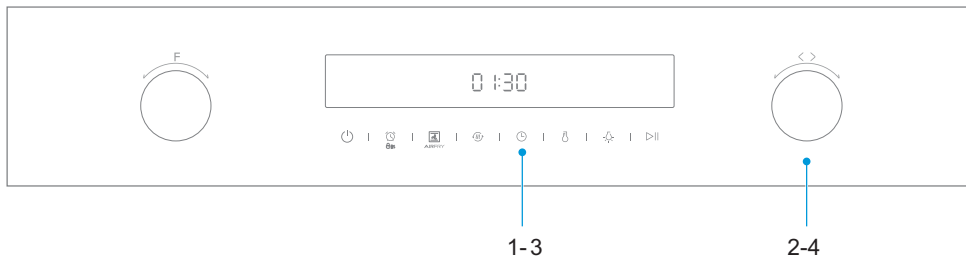

Funkcija podsjetnika

1. U stanju pripravnosti i tijekom kuhanja pritisnite "🕒" za unos podsjetnikapostavku.
2. Okrenite gumb **K2** za podešavanje znamenke sata.
3. Pritisnite tipku "🕒" za potvrdu.
4. Okrenite gumb **K2** za podešavanje znamenki za minute.
5. Pritisnite tipku "🕒" za dovršetak podešavanja.

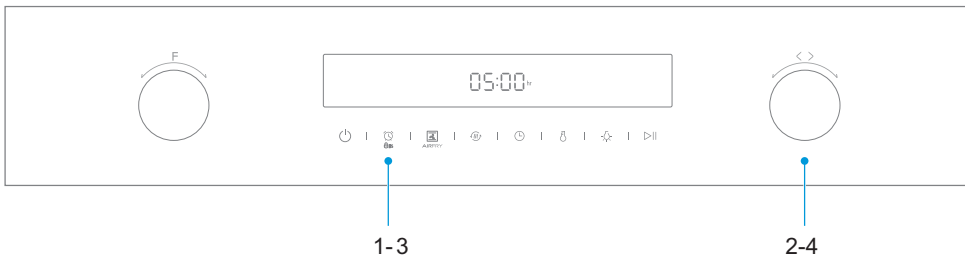


BILJEŠKA

1. Tijekom kuhanja, pritisnite tipku "🕒" za pregled vremena podsjetnika.
2. Podsjetnik je postavljen. Tijekom kuhanja dvaput pritisnite tipku "🕒" za promjenu vremena podsjetnika.

Funkcija za roštilj



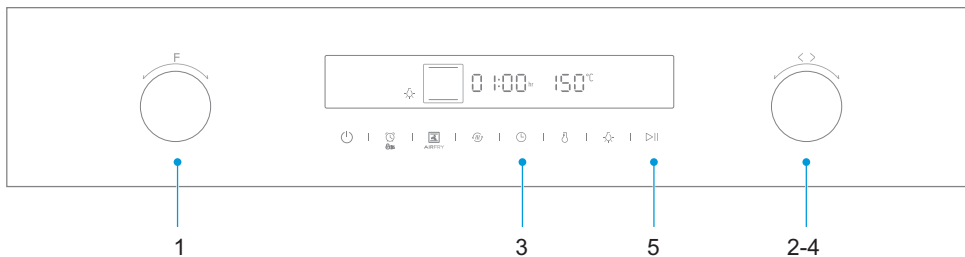









1. U stanju pripravnosti ili podsjetnika, okrenite gumb **K1** za odabir funkcije.
2. Okrenite gumb **K2** za podešavanje temperature
3. Pritisnite "🕒" za ulazak u postavku vremena.
4. Okrenite gumb **K2** za podešavanje vremena.
5. Pritisnite tipku ">||" za poetak kuhanja.



BILJEŠKA


1. Tijekom kuhanja pritisnite tipku "🕒" za promjenu temperature; Pritisnite tipku "🕒" za promjenu vremena.
2. Tijekom kuhanja funkcija se može mijenjati okretanjem gumba K1, a vrijeme ostaje nepromijenjeno. Temperatura je zadana temperatura trenutne funkcije i početi će raditi 6 sekundi nakon promjene.

Tablica funkcije pečenja

Broj	Ikona	Funkcija	Vrijeme	Temperatura	Predgrijanje
01		Konvencionalno	0-9 sati	30-250°	Opcija
02		Kružni grijač	0-9 sati	50-280°	Opcija
03	 eco	Ušteda energije (ECO)	0-9 sati	140-240°	Ne
04		Konvenciono+ventilator	0-9 sati	50-250°	Opcija
05		Pojedinačni roštilj	0-9 sati	150-250°	Opcija
06		Dupli roštilj + ventilator	0-9 sati	50-250°	Opcija
07		Dupli roštilj	0-9 sati	150-250°	Opcija
08		Pizza	0-9 sati	50-250°	Opcija
09		Grijanje donjeg dijela (donji grijač)	0-9 sati	30-220°	Opcija
10	 *	Odmrzavanje	0-9 sati	50°	Ne
11		Fermentacija	0-9 sati	30-45°	Ne
12		Piroliza	2 sata	450°	Ne

Brzo predgrijavanje

1. U stanju pripravnosti ili podsjetnika, okrenite gumb **K1** za odabir funkcije.
2. Okrenite gumb **K2** za podešavanje temperature.
3. Pritisnite "🕒" za ulazak u postavku vremena.
4. Okrenite gumb **K2** za podešavanje vremena.
5. Pritisnite tipku "🔊"

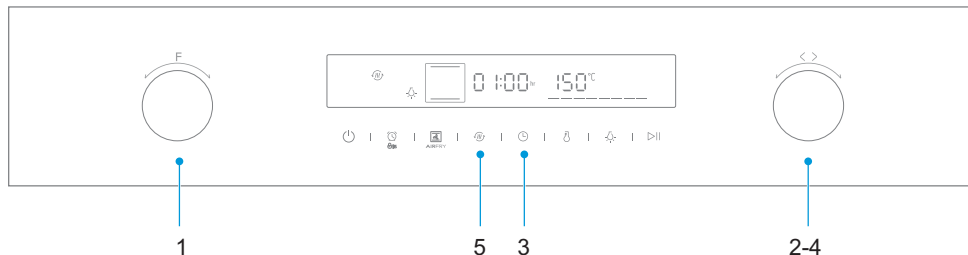

BILJEŠKA

1. Prethodno zagrijavanje može skratiti vrijeme kuhanja i poboljšati okus hrane.
2. Nakon zagrijavanja, stavite sastojke u pećnicu za kuhanje.
3. Kada se postigne temperatura predgrijanja, oglasi se zvučni signal i traka napretka je uvijek uključena.

Funkcija sonde (Samo za neke modele)

U stanju mirovanja, rastavite kraći kraj sonde u otvor u gornjem desnom kutu pećnice. Umetnite dugi kraj sonde u sredinu hrane (izbjegavajte masnoću i kosti).

Okrenite gumb **K1** za odabir funkcije. (👉👉👉👉)

Okrenite gumb **K2** za podešavanje temperature.

Pritisnite tipku "▶||" za početak kuhanja

Pirolitička funkcija


1. Otvorite kuhinjski prozor da se ventilira.
2. Izvadite sav pribor iz unutrašnjosti pećnice.
3. Okrenite gumb **K1** za odabir funkcije pirolize.
4. Pritisnite tipku "▶||" za početak.

Funkcija zaključavanja za djecu (sigurnost za djecu)

1. Pritisnite "🕒" tipku 3 sekunde za ulazak ili otpuštanje stanja zaključavanja za djecu.

Funkcija prženja na zraku

1. U stanju čekanja ili podsjetnika pritisnite tipku "AIRFRY".
2. Okrenite gumb **K2** za podešavanje temperature.
3. Pritisnite "⌚" za ulazak u postavku vremena.
4. Okrenite gumb **K2** za podešavanje vremena.
5. Pritisnite tipku ">||" za početak kuhanja.

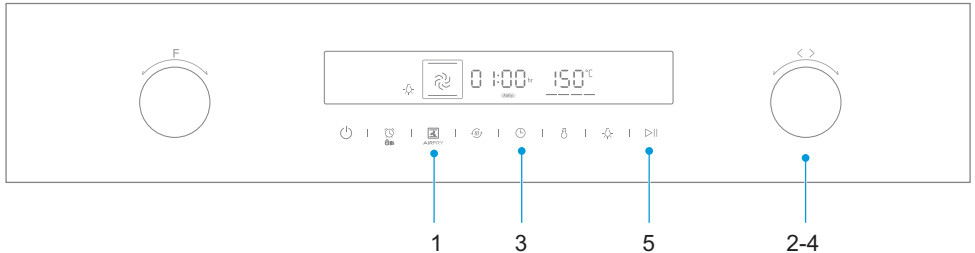


BILJEŠKA

1. Tijekom kuhanja pritisnite tipku "⌚" za promjenu temperature; Pritisnite tipku "⌚" za promjenu vremena.




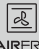

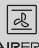

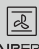


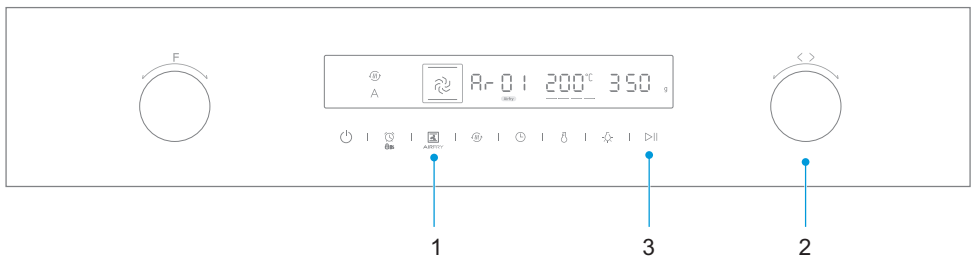Automatski izbornik

1. U stanju pripravnosti pritisnite i držite tipku "AIRFRY" 3 sekunde za ulazak u postavke automatskog izbornika.
2. Okrenite gumb **K2** za odabir izbornika.
3. Pritisnite tipku ">||" za početak kuhanja.








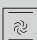





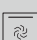






















BILJEŠKA

1. Za izbornik bez programa predgrijanja, odbrojavanje počinje odmah nakon pokretanja.
2. Za izbornik s programom predgrijavanja morate pričekati predgrijavanje prije stavljanja sastojaka u pećnicu.

Kod	Ime izbornika	Težina	Način	Vrijeme	Temperatura	Predgrijanje
Ar 01	Pomfrit	350 g	 AIRFRYER	19min	200 °C	Da
Ar 02	Pomfrit	750 g	 AIRFRYER	23mi n	230 °C	Da
Ar 03	Pileći bataci	500 g	 AIRFRYER	20+10 min	250 °C	Ne
Ar 04	Pileći bataci	1000g	 AIRFRYER	20+12min	250 °C	Ne
Ar 05	Pileći medaljon	200 g	 AIRFRYER	17 mi n	250 °C	Da
Ar 06	Medaljoni od povrća	180g	 AIRFRYER	11.5min	250 °C	Da
Ar 07	Mozzarella krumpirići	120 g	 AIRFRYER	10min	250 °C	Da
Ar 08	Kolutiči luka debelo rezani	160 g	 AIRFRYER	11.5min	220 °C	Da
Ar 09	Pohane gljive	125g	 AIRFRYER	13min	230 °C	Da
Ar 10	Pohane gljive	250 g	 AIRFRYER	13min	230 °C	Da

Predložena tablica izbornika

Ime izbornika	Oblik	Način	Vrijeme	Temperatura	Razina
Biskvit (jednostavni) u obliku kutije	Kutija		50min	170°C	2
Biskvit (jednostavni) u obliku kutije	Kutija		70min	140°C	1
Biskvit s voćem u okruglom obliku	Okrugli kalup		50min	150°C	1
Biskvit s voćem na tavi	Tava		70min	140°C	1
Brioche muffini s grožđicama (kolač s kvascem)	Forma za muffine		Predgrijanje 19min Pečenje: 11min	220°C	2
Kuglof (s kvascem)	Tava		Predgrijanje 11min Pečenje: 60min	150°C	1
Muffini	Forma za muffine		Predgrijanje 8,5min Pečenje: 30min	160°C	1
Muffini	Forma za muffine		Predgrijanje 8,5min Pečenje: 30min	150°C	1
Dizani kolač od jabuka na pladnju	Tava		Predgrijanje 10min Pečenje: 42,5min	160°C	1
Vodeni biskvit (6 jaja)	Opružni kalup		Predgrijanje 9,5min Pečenje: 41min	160°C	1
Vodeni biskvit (4 jaja)	Opružni kalup		Predgrijanje: 9min Pečenje: 26min	160°C	1
Vodeni biskvit	Opružni kalup		Predgrijanje: 9,5min Pečenje: 41min	160°C	1
Dizani kolač od jabuka na tavi	Tava		Predgrijanje: 8min Pečenje: 42min	150°C	2
Hefezopf (Callah)	Tava		40min	150°C	2
Sitni kolači 20	Tava		36min	150°C	2
Sitni kolači 40	Tava		Predgrijanje: 10min Pečenje: 34min	150°C	2+4
Kolač s kvascem od maslaca	Tava		Predgrijanje: 8min Pečenje: 30min	150°C	2
Prhko tijesto	Tava		Predgrijanje: 8min Pečenje: 13min	170°C	2
Prhko tijesto 2 tave	Tava		Predgrijanje: 8,3min Pečenje: 12min	160°C	2+4
Kolačić od vanilije	Tava		Predgrijanje: 8min Pečenje: 10min	160°C	2

Ime izbornika	Oblik	Način	Vrijeme	Temperatura	Razina
Kola čiči od vanilije	Tava		Predgrijanje: 8min Pečenje: 14min	150°C	2+4
Bijeli kruh (1 kg brašna) čvrtasti oblik	Kutija		Predgrijanje: 9min Pečenje: 50min	170°C	1
Bijeli kruh (1 kg brašna) čvrtasti oblik	Kutija		Predgrijanje: 12min Pečenje: 45min	170°C	1
Sviježa pizza (tanka)	Tava		Predgrijanje: 9.5min Pečenje: 21min	170°C	2
Sviježa pizza (debela)	Tava		Predgrijanje: 10min Pečenje: 45min	170°C	2
Sviježa pizza (debela)	Tava		Predgrijanje: 8min Pečenje: 41min	170°C	2
Kruh	Tava		Predgrijanje: 9min Pečenje: 30min	190°C	1
Goveđi hrbat 1,6kg	Tava		55min	180°C	2
Mesna štruca 1 kg mesa	Tava		75min	180°C	1
Piletina 1 kg	Tava		50min	180°C	Stalak:2 Tava:1
Riba 2,5 kg	Tava		70 min	170°C	2
Rebra kuhana B.T.	Tava		85mi n	120°C	3
Svinjsko pečenje od vrata 1,2 kg	Tava		82mi n	160°C	1
Piletina 1,7 kg	Tava		78min	180°C	Stalak:2 Tava:1

ČIŠĆENJE I ODRŽAVANJE

Čišćenje

Isključite napajanje prije čišćenja i održavanja.

Kako bi se osigurao vijek trajanja pećnice, potrebno ju je često i temeljito čistiti.

Koraci čišćenja su sljedeći:

1. Nakon kuhanja pričekajte da se pećnica potpuno ohladi.
2. Uklonite pribor iz pećnice, isperite toplom vodom i osušite.
3. Očistite ostatke hrane iz komore pećnice.
4. Obrišite pećnicu mekom krpom umrljanom deterdžentom, a zatim je osušite mekom suhom krpom.


BILJEŠKA

1. Ne koristite oštre alate za čišćenje, tvrdu četku i korozivna sredstva za čišćenje kako ne biste oštetili pećnicu i njen pribor.
2. Za čišćenje stakla na vratima nemojte koristiti grubo sredstvo za ribanje ili oštru metalnu lopaticu.


Zamjena žarulje (osvjetljenje)

OVU RADNJU PROVODI SAMO STRUČNO SERVISNO OSOBLJE !

1. Kako biste spriječili oštećenje lampe, stavite ručnik u udubljenje.
2. Okrenite u smjeru suprotnom od kazaljke na satu kako biste uklonili stakleni poklopac (kutna svjetiljka);
Nježno otvorite stakleni poklopac alatom s ravnom glavom (bočno svjetlo).
3. Izvucite žarulju i stavite novu (nemojte ju okretati).
4. Vratite stakleni poklopac i izvadite ručnik.

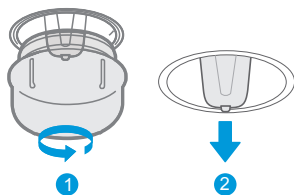

Kutna svjetiljka

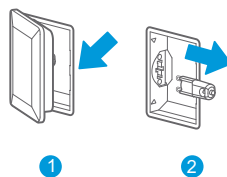

Bočno svjetlo

Samo za neke modele

Upozorenje

Kako biste izbjegli strujni udar - provjerite je li dovod električne energije u uređaj isključen, te potpuno hladan prije skidanja leće svjetiljke.

Čišćenje vrata

Uz dobru njegu i čišćenje, vaš će uređaj još dugo zadržati svoj izgled i biti potpuno funkcionalan.

U svrhu čišćenja i skidanja panela vrata, možete odvojiti vrata uređaja.

Na lijevom i desnom šarniru vrata uređaja nalazi se poluga za zaključavanje.

Kada su poluge za zaključavanje zatvorene, vrata uređaja su pričvršćena na mjestu.


Ne mogu se odvojiti.

Upozorenje

1. Šarniri na vratima uređaja pomiču se prilikom otvaranja i zatvaranja vrata i možete se priklještit. Držite ruke podalje od šarnira.
2. Ako šarniri nisu zaključani, mogu se zatvoriti velikom snagom. Osigurajte da su poluge za zaključavanje uvijek potpuno zatvorene ili, kada skidate vrata uređaja, potpuno otvorene.

Demontaža i montaža vrata pećnice

1. Otvorite vrata uređaja do kraja.
2. Otvorite dvije poluge za zaključavanje s lijeve i desne strane.
3. Zatvorite vrata uređaja skoro do kraja.
4. S obje ruke uhvatite vrata s lijeve i desne strane i izvucite ih prema gore.
5. Plastični umetak u poklopcu vrata može izgubiti boju. Za temeljito čišćenje možete skinuti poklopac. Pritisnite lijevu i desnu kopču poklopcu.
6. Nakon skidanja poklopcu vrata, ostali dijelovi vrata uređaja se mogu jednostavno skinuti kako biste mogli nastaviti s čišćenjem. Kada je čišćenje vrata uređaja završeno, vratite poklopac na mjesto i pritisnite ga dok ne škljocne na svoje mjesto.

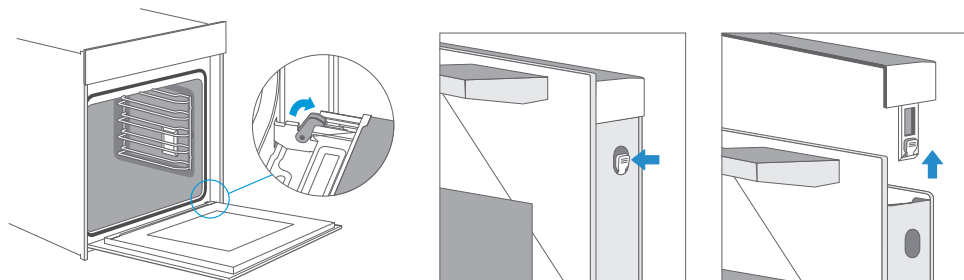

BILJEŠKA

Ponovno pričvrstite vrata uređaja redoslijedom obrnutim od skidanja.

RJEŠAVANJE PROBLEMA

Ako se problem ne može riješiti ili se pojave neki drugi problemi, obratite se post prodajnoj službi (servisu).

Problem	Mogući razlog	Riješenje
Pokretanje nije moguće	• Napajanje nije priključeno	• Priključite napajanje
	• Glavni prekidač za napajanje nije uključen	• Uključite prekidač za napajanje
	• Vrata pećnice nisu zatvorena	• Zatvorite vrata pećnice
Osvjetljenje se ne uključuje	• Neispravna žarulja	• Kontaktirajte servis za usluge nakon prodaje
Postoji oštar miris ili dim	• Prva uporaba	• Obratite se servisu za usluge posle prodaje
Hrana nije skuhana	• Temperatura je suviše niska	• Koristite višu temperaturu
	• Porcija hrane je suviše velika	• Kuhajte hranu u manjim porcijama ili produljite vrijeme kuhanja.
Zagorjela ili neravnomjerno kuhana hrana	• Temperatura je previsoka ili je vrijeme zagrijavanja suviše dugo	• Podesite temperature kuhanja ili vrijeme
	• Hrana je suviše blizu grijača	• Odaberite drugu vodilicu
Ventilator nije prestao raditi nakon prestanka grijanja	• Ventilator odgađa puhanje radi odvođenja topline	• Normalna pojava

ODLAGANJE I RECIKLIRANJE

Važne upute za okoliš

Sukladnost s Direktivom WEEE i zbrinjavanje otpadnog proizvoda:

Ovaj proizvod sukladan je s EU WEEE direktive (2012/19/EU).

Proizvod nosi simbol klasifikacije - Otpadna električna i elektronička oprema (WEEE).

Simbol pokazuje da se proizvod ne smije odlagati s drugim kućnim otpadom na kraju svog životnog vijeka. Iskorišteni uređaj se mora vratiti na službeno mjesto sakupljanja radi recikliranja električnih i elektroničkih uređaja.

Kako biste pronašli ove sustave sakupljanja molimo kontaktirajte lokalne vlasti ili prodavača kod kojeg ste kupili proizvod.

Svako kućanstvo igra važnu ulogu u oporavku i recikliranju starog uređaja.

Odgovarajuće bacanje iskorištenog uređaja će pomoći da se spriječe potencijalne negativne posljedice po okolinu i ljudsko zdravlje.



Sukladnost s Direktivom RoHS

Proizvod kojeg ste kupili sukladan je s EU RoHS direktive (2011/65/EU).

Ne sadrži štetne i zabranjene materijale navedene u Direktivi.

Informacije o pakiranju

Materijali za pakiranje proizvoda proizvedeni su od materijala koji se mogu reciklirati sukladno s našim Državnim uredbama za okoliš.

Nemojte odlagati materijale za pakiranje zajedno s kućanskim ili drugim otpadom. Odnosite ih na mjesta za sakupljanje materijala za pakiranje koja određuju lokalne vlasti.



CONTENTS

SAFETY INSTRUCTIONS	02
SPECIFICATIONS	06
PRODUCT OVERVIEW	07
QUICK START GUIDE	09
PRODUCT INSTALLATION	10
OPERATION INSTRUCTIONS	15
CLEANING AND MAINTENANCE	23
TROUBLESHOOTING	25
DISPOSAL AND RECYCLING	26

SAFETY INSTRUCTIONS

Intended use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

WARNING

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

PROHIBIT

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- When the door or drawer of oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.

CAUTION

- Please use the product under an open environment.
- During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ATTENTION

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run the new empty product with the conventional cooking function, 250°C, 30 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal that there will be slight smoke. If it does occur, you should wait for the smell to be cleared before putting food into the oven.
- Only use the temperature probe recommended for this oven.
- Oven door should not be opened often during the cooking period.
- The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- When the door or drawer of oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
- If you will not use the appliance for a long time, it is advised to plug it off.


SPECIFICATIONS

Model	UPP7214TM
Power Supply	220-240V~ , 50Hz-60Hz
Electric Power	3.2kW
Lamp Power	25*2W
Product Size	72L

PRODUCT OVERVIEW

Oven

When taking out food, please wear heat-insulating gloves to prevent burns!
Pay attention to the hot air when opening the oven door.

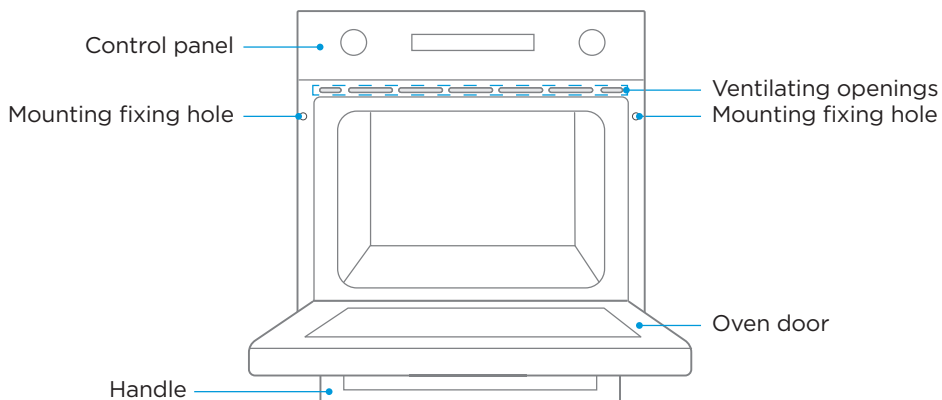


Accessories




Grill rack x1

 Grill food or place heat-resistant cooking containers




Grill tray x1

 Cooking food or receiving food scraps



Slide rail x2

 Only for some models




Air fry basket x1

Air fry function specific



Probe x1

 Only for some models




Small grill rack x1

Cook smaller portions of food

Only for some models

Accessories

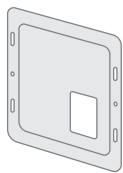

Baffle plate

Block food debris

 
Only for some models



Pizza knife

Cut pizza


Only for some models



Pizza tray

Special accessories for pizza function

Only for some models

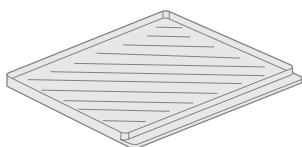

Frying tray

Heated meat food
(Both the front and the back can be used)

 
Only for some models



Grill stick

String meat and vegetables

Only for some models






Rotating grill rack

Barbecue, such as chicken and turkey.

Only for some models

Accessories Use


For the oven to work properly, the grill rack and grill tray should only be placed between the first and fifth levels. When used together, place the grill tray under the grill rack.

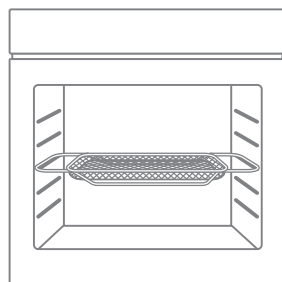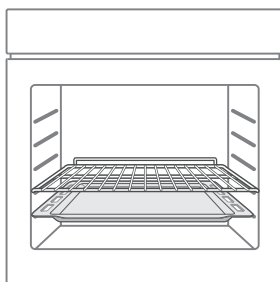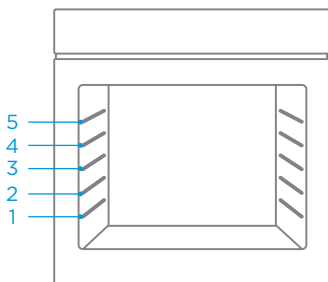







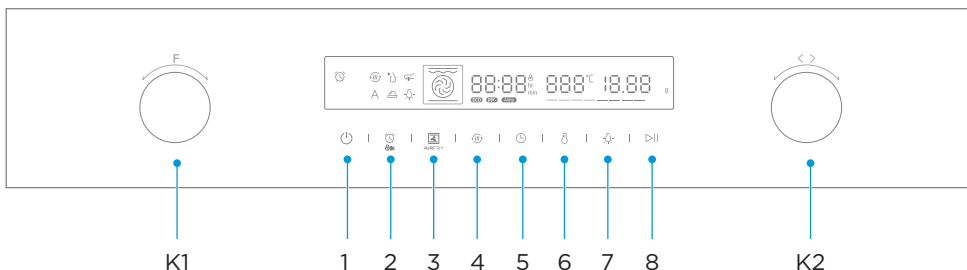

Only for some models

QUICK START GUIDE




Oven Control Panel



icon	Introduction
1 	Cancel the current setting and return to the standby state.
2 	Press briefly to enter the reminder function setting. Press and hold for 3 seconds to enter or exit the child lock state.
3 	Provide fast and even heat distribution, the hot air also takes away the moisture on the surface of the food, generating crunchy and crispy frying.
4 	Preheat the cavity to ensure the taste of food.
5 	Enter the time setting state.
6 	Enter the temperature setting state.
7 	Press this key to turn on or off the lamp.
8 	Start or pause cooking.
K1	Select the cooking function.
K2	Adjust the time or temperature.

PRODUCT INSTALLATION



Cupboard Diagram (Standing Cupboard)

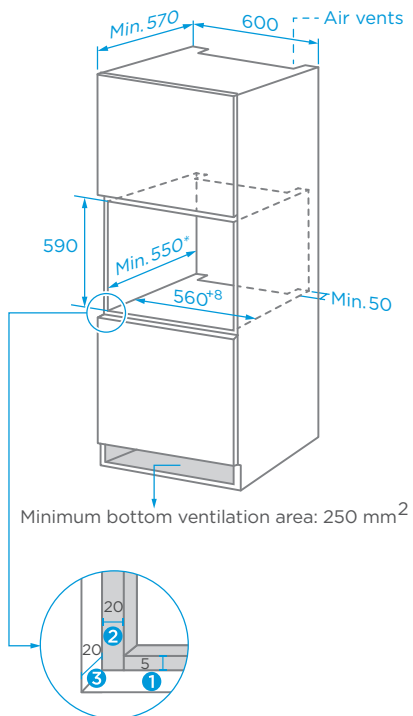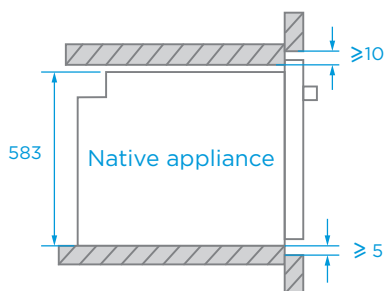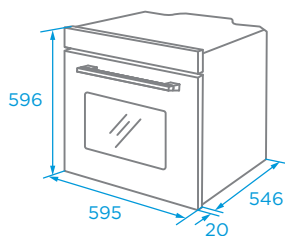


- ❶ Reserve 5 mm for the door panel at the top and bottom respectively.
- ❷ Reserve 20 mm for the door panel on the left and right respectively.
- ❸ Reserve 20 mm for the door panel in thickness.

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.


Cupboard Diagram (Ground Cupboard)

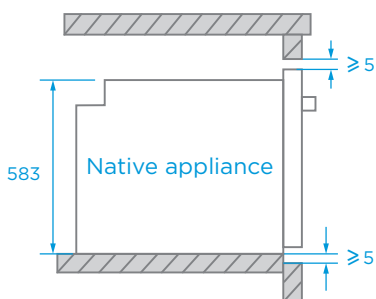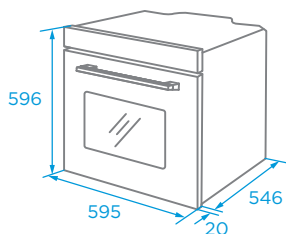


Without hob

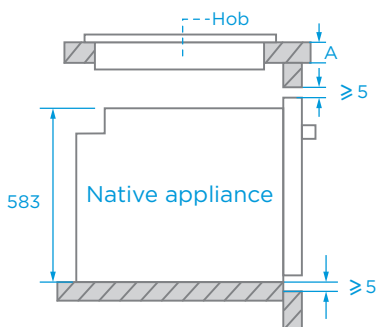

With hob

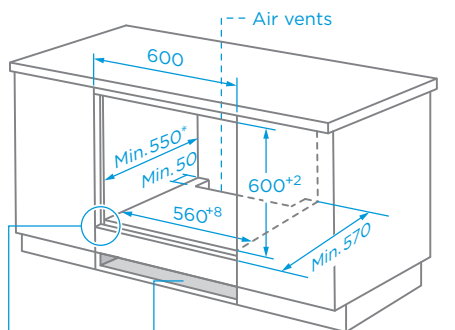

Minimum bottom ventilation area: 250 mm²

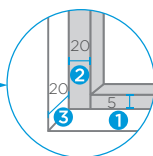

- ① Reserve 5 mm for the door panel at the top and bottom respectively.
- ② Reserve 20 mm for the door panel on the left and right respectively.
- ③ Reserve 20 mm for the door panel in thickness.

If the appliance is installed under the hob, the minimum thickness of worktop A is shown below:

Hob type	worktop A
Induction hob	37 mm
Full-surface induction hob	47 mm
Gas hob	30 mm
Electric hob	27 mm

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.

Installation Important Instructions

Content that means [mandatory]

1. The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for any damage resulting from incorrect installation.
2. The entire installation process requires two professional installers. Wear dry protective gloves during installation to avoid scratch or electric shock.
3. Fitted units must be heat-resistant up to 90°C, and adjacent unit fronts up to 70°C.
4. Please use a 16A socket.

Content that means [prohibit]


1. Do not install the appliance behind a decorative door or the door of a kitchen unit, as this may cause the appliance to overheat.
2. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
3. Do not block the vent of the appliance and the gap between the cupboard and the appliance.
4. Use extreme caution when moving or installing the appliance. It is very heavy, do not lift the appliance by the door handle.
5. If the power cord or power plug is damaged, stop using the appliance immediately, to avoid fire, electric shock or other injuries.

Content that means [note]



1. Be very careful when moving or installing the appliance to avoid damage to the appliance or damage to the cupboards.
2. Before starting up the appliance, remove all packaging materials and accessories from the cavity.
3. The power socket shall be accessible to users (such as next to the cupboard) for easy power-off.
4. After installation is complete, make sure that the power plug is firmly inserted into the socket.
5. Please refer to the "Cupboard Diagram" for the requirements of net depth of the cupboard. The clearance between the cupboard bottom board and the rear board (or wall) shall not be less than 50 mm.

Installation steps


1. Please customize the cupboard according to the "Cupboard Diagram".
2. Before installation, please check for normal power socket and appropriate grounding, and check whether the cupboard dimension meets the installation requirements.
3. Place the appliance in designated locations in the kitchen, install it in a vertical cupboard, and connect the power supply.
4. To locate the mounting fixing holes, open the appliance door and look at the side frame of the appliance (position shown above).
5. Fix the appliance to the cupboard with two rubber plugs A and screws B provided with the appliance.

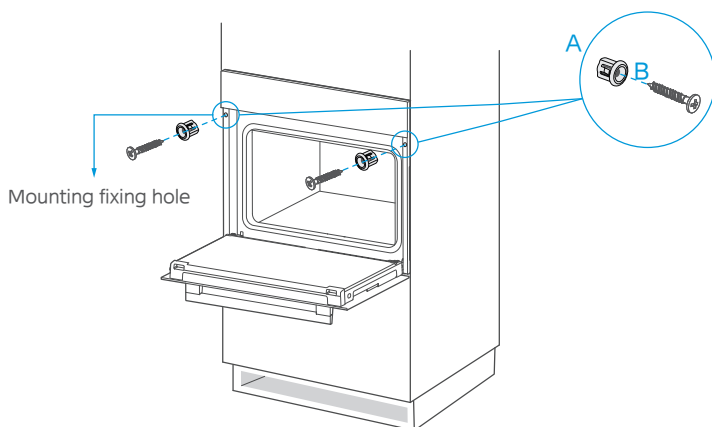

Accessory installation

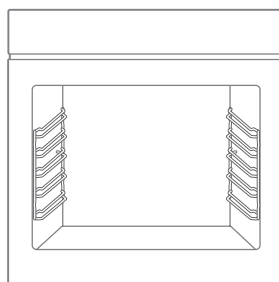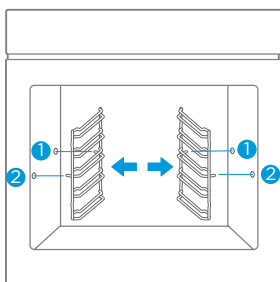


Accessory installation (Only for some models)

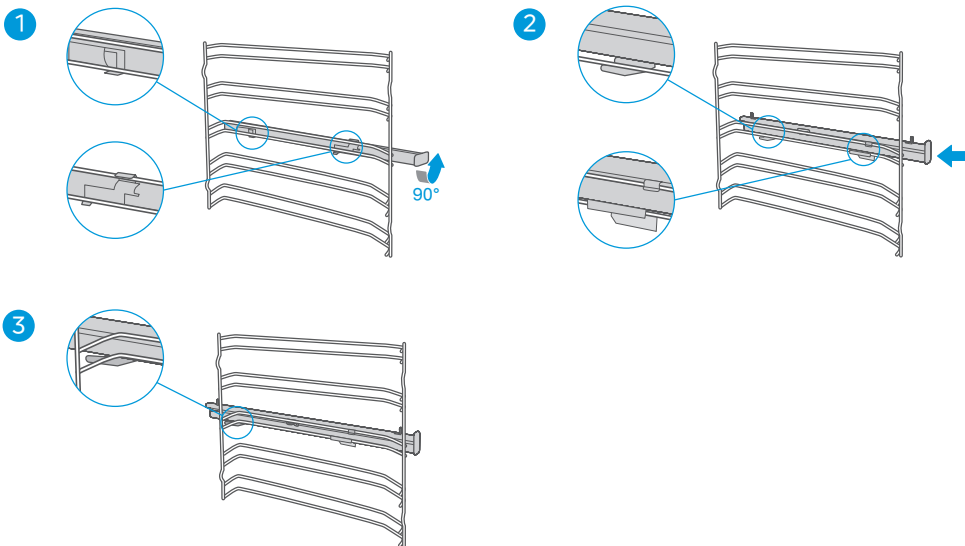

OPERATION INSTRUCTIONS

First Use

1. Before using it for the first time, please clean the oven and accessories to a certain extent. Remove the oven packaging shipping protection parts. Remove all accessories (eg: baking trays, grills, foam, etc.) from the cavity.
2. Thoroughly clean the attachment with soapy water and a rag or soft brush.
3. Wipe cavity and oven surfaces with a soft damp cloth.
4. To avoid fire, please make sure that the cavity is free of any remaining packing materials and accessories when using it for the first time.
5. When using it for the first time, keep the kitchen highly ventilated (open the hood and windows). During this time, keep children and pets out of the kitchen and keep the doors of adjacent rooms closed.
6. In order to remove the smell of new products, run the following:


Oven Mode	Temperature	Time
 Conventional	250°C	0.5 Hour

Setting the clock

Before using your oven, set the clock.


If you want to modify the clock again, please follow steps 1.

1. In the standby state, Press the "🕒" key.
2. Turn knob **K2** to adjust the hour digit.
3. Press the "🕒" key to confirm.
4. Turn knob **K2** to adjust the minute digits.
5. Press the "🕒" key to complete the clock setting.

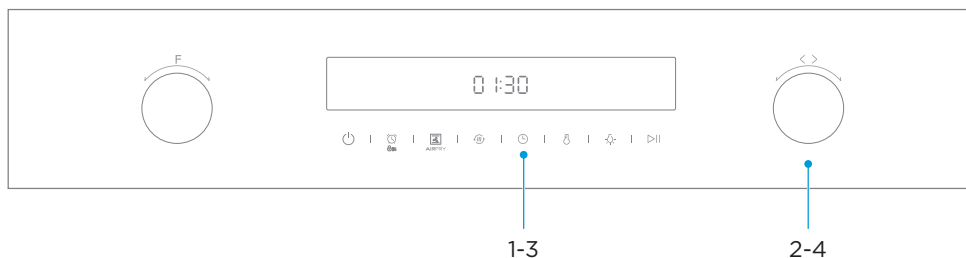

Reminder function

1. In the standby state and during cooking, press "🕒" key to enter the reminder setting.
2. Turn knob **K2** to adjust the hour digit.
3. Press the "🕒" key to confirm.
4. Turn knob **K2** to adjust the minute digits.
5. Press the "🕒" key to complete the setting.

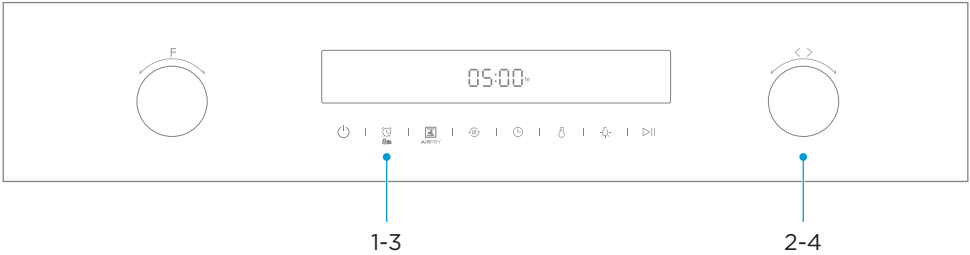


NOTE

1. During cooking, press the "🕒" key to view the reminder time.
2. Reminder has been set. During cooking, press the "🕒" key twice to modify the reminder time.

Barbecues function



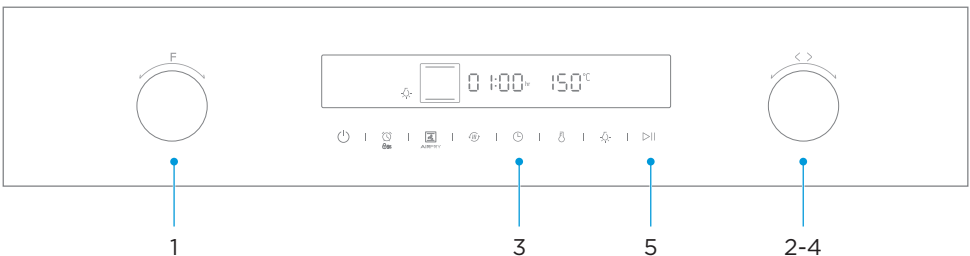









1. In standby state or reminder state, turn knob **K1** to select the function.
2. Turn knob **K2** to adjust the temperature.
3. Press "🕒" to enter the time setting.
4. Turn knob **K2** to adjust the time.
5. Press the "▶||" key to start cooking.



NOTE


1. During cooking, press the "🕒" key to modify the temperature; Press the "🕒" key to modify the time.
2. During cooking, the function can be changed by turning the knob K1, and the time remains unchanged. The temperature is the default temperature of the current function, and it will start running 6 seconds after the change.

Function table

Number	Icon	Function	Time	Temperature	Preheat
01		Conventional	0-9 hour	30-250°C	Optional
02		Convection	0-9 hour	50-280°C	Optional
03	 ECO	Energy saving	0-9 hour	140-240°C	No
04		Conventional+fan	0-9 hour	50-250°C	Optional
05		Single grill	0-9 hour	150-250°C	Optional
06		Double grill+fan	0-9 hour	50-250°C	Optional
07		Double grill	0-9 hour	150-250°C	Optional
08		Pizza	0-9 hour	50-250°C	Optional
09		Bottom heating	0-9 hour	30-220°C	Optional
10		Defrost	0-9 hour	50°C	No
11		Fermentation	0-9 hour	30-45°C	No
12		Pyrolytic	2 hour	450°C	No

Quick preheating



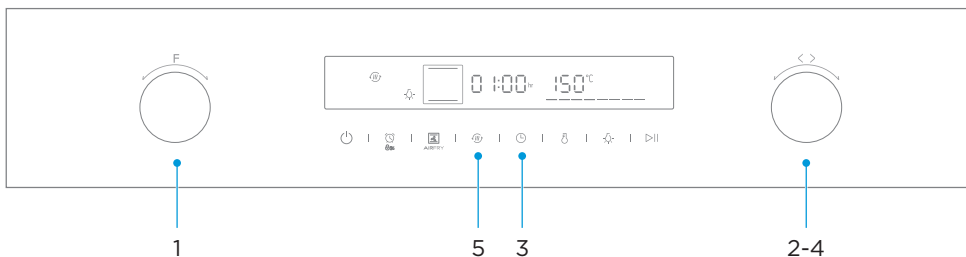

1. In standby state or reminder state, turn knob **K1** to select the function.
2. Turn knob **K2** to adjust the temperature.
3. Press "**⌚**" to enter the time setting.
4. Turn knob **K2** to adjust the time.
5. Press the "**⌚**" key.



NOTE

1. Preheating can shorten the cooking time and improve the taste of food.
2. After preheating, put the ingredients in the oven for cooking.
3. When the preheating temperature is reached, the buzzer sounds and the progress bar is always on.

Probe function (Only for some models)

1. In the standby state, disassemble the short end of the probe into the hole in the upper right corner of the oven cavity.
2. Insert the long end of the probe into the center of the food (avoid fat and bones).
3. Turn the knob **K1** to select the function. (   )
4. Turn knob **K2** to adjust the temperature.
5. Press the "**>||**" key to start cooking.




Pyrolytic function


1. Open the kitchen window to keep it ventilated.
2. Remove all accessories from the oven cavity.
3. Turn the knob **K1** to select the pyrolytic function.
4. Press the "**>||**" key to start.

Child lock function



1. Press the "**⌚**" key for 3 seconds to enter or release the child lock state.

Air fry function

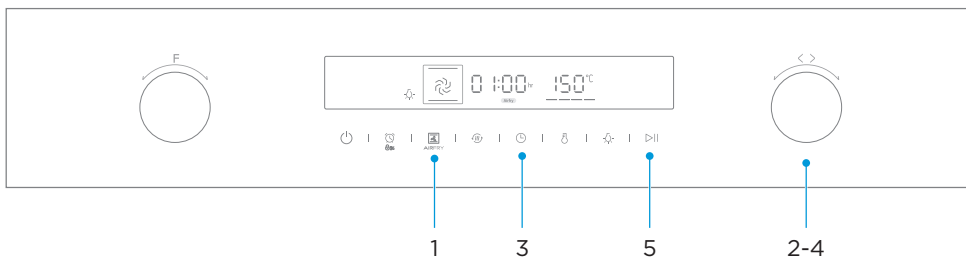

1. In standby or reminder state, press "  " key.
2. Turn knob **K2** to adjust the temperature.
3. Press "  " to enter the time setting.
4. Turn knob **K2** to adjust the time.
5. Press the "  " key to start cooking.




NOTE

1. During cooking, press the "  " key to modify the temperature; Press the "  " key to modify the time.





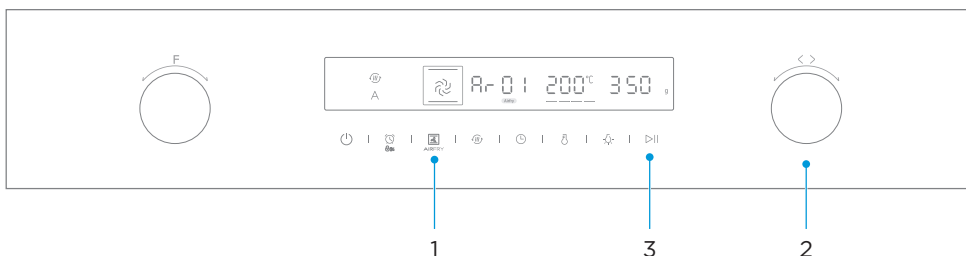





Automatic menu

1. In standby state, press and hold the "  " key for 3 seconds to enter the automatic menu setting.
2. Turn knob **K2** to select the menu.
3. Press the "  " key to start cooking.


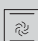






NOTE

1. For the menu without preheating program, the countdown starts directly after it is started.
2. For the menu with preheating program, you need to wait for preheating before putting the ingredients in the oven.

Code	Menu name	Weight	Mode	Time	Temperature	Preheat
Ar01	French Fries	350g	 AIRFRY	19min	200°C	Yes
Ar02	French Fries	750g	 AIRFRY	23min	230°C	Yes
Ar03	Chicken drumsticks	500g	 AIRFRY	20+10min	250°C	No
Ar04	Chicken drumsticks	1000g	 AIRFRY	20+12min	250°C	No
Ar05	Chicken Nugget	200g	 AIRFRY	17min	250°C	Yes
Ar06	Vegetable Nuggets	180g	 AIRFRY	11.5min	250°C	Yes
Ar07	Mozzarella Fries	120g	 AIRFRY	10min	250°C	Yes
Ar08	Onion Rings thick cut	160g	 AIRFRY	11.5min	220°C	Yes
Ar09	Breaded Mushrooms	125g	 AIRFRY	13min	230°C	Yes
Ar10	Breaded Mushrooms	250g	 AIRFRY	13min	230°C	Yes

Suggested menu table

Menu name	Form	Mode	Time	Temperature	Level
Sponge cake (simple) in a box shape	Box		50min	170°C	2
Sponge cake (simple) in a box shape	Box		70min	140°C	1
Sponge cake with fruits in a round form	Round form		50min	150°C	1
Sponge cake with fruits on a tray	Tray		70min	140°C	1
Raisins brioche muffins (yeast cake)	Muffin form		Preheat: 19min Baking: 11min	220°C	2
Gugelhupf (with yeast)	Tray		Preheat: 11min Baking: 60min	150°C	1
Muffins	Muffin form		Preheat: 8.5min Baking: 30min	160°C	1
Muffins	Muffin form		Preheat: 8.5min Baking: 30min	150°C	1
Apple yeast cake on a tray	Tray		Preheat: 10min Baking: 42.5min	160°C	1
Water sponge cake (6 eggs)	Spring form		Preheat: 9.5min Baking: 41min	160°C	1
Water sponge cake (4 eggs)	Spring form		Preheat: 9min Baking: 26min	160°C	1
Water sponge cake	Spring form		Preheat: 9.5min Baking: 41min	160°C	1
Apple Yeast cake on a tray	Tray		Preheat: 8min Baking: 42min	150°C	2
Hefezopf (Callah)	Tray		40min	150°C	2
Small cakes 20	Tray		36min	150°C	2
Small cakes 40	Tray		Preheat: 10min Baking: 34min	150°C	2+4
Butter yeast cake	Tray		Preheat: 8min Baking: 30min	150°C	2
Shortbread	Tray		Preheat: 8min Baking: 13min	170°C	2
Shortbread 2 trays	Tray		Preheat: 8.3min Baking: 12min	160°C	2+4
Vanilla cookies	Tray		Preheat: 8min Baking: 10min	160°C	2

Menu name	Form	Mode	Time	Temperature	Level
Vanilla cookies	Tray		Preheat: 8min Baking: 14min	150°C	2+4
White bread (1 kg flour) box shape	Box		Preheat: 9min Baking: 50min	170°C	1
White bread (1 kg flour) box shape	Box		Preheat: 12min Baking: 45min	170°C	1
Fresh Pizza (thin)	Tray		Preheat: 9.5min Baking: 21min	170°C	2
Fresh Pizza (thick)	Tray		Preheat: 10min Baking: 45min	170°C	2
Fresh Pizza (thick)	Tray		Preheat: 8min Baking: 41min	170°C	2
Bread	Tray		Preheat: 9min Baking: 30min	190°C	1
Beef tender loin 1.6 kg	Tray		55min	180°C	2
Meatloaf 1 kg meat	Tray		75min	180°C	1
Chicken 1 kg	Tray		50min	180°C	Rack:2 Tray:1
Fish 2.5 kg	Tray		70min	170°C	2
Ribs tomahawk cooked B.T.	Tray		85min	120°C	3
Pork Roast of the neck 1.2 kg	Tray		82min	160°C	1
Chicken 1.7 kg	Tray		78min	180°C	Rack:2 Tray:1

CLEANING AND MAINTENANCE

Cleaning

Disconnect the power supply before cleaning and maintenance.

In order to ensure the life of the oven, it should be thoroughly cleaned frequently.

Cleaning steps are as follows:


1. After cooking, wait for the oven to cool completely.
2. Remove oven accessories, rinse with warm water and dry.
3. Clean up food debris from the oven chamber. You can clean up the residue manually or through the Pyrolytic function.
4. Wipe the oven with a soft cloth stained with detergent, then dry with a dry soft cloth.

NOTE


1. Do not use sharp cleaning tools, hard brush and corrosive cleaning products, so as not to damage the oven and its accessories.
2. Do not use rough scrubbing agent or sharp metal spatula to clean the door glass.

Lamp Replacement

1. To prevent the lamp from being damaged, put a towel in the cavity.
2. Turn counterclockwise to remove the glass cover (corner lamp);
Gently pry open the glass cover with a flat-head tool (side lamp).
3. Pull out the wick and replace it (don't turn it).
4. Install the glass cover back and take out the towel.

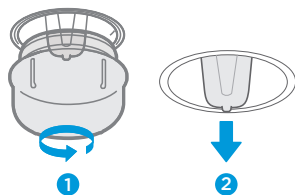

Corner lamp

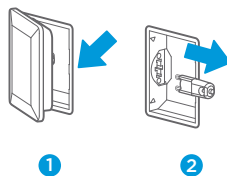

side lamp

Only for some models

Warning

To avoid electric shocks-please ensure that the electricity supply to the appliance is switched off and the appliance is fully cold. before removing the lamp lens.

Door Cleaning

With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come.


For cleaning purposes and to remove the door panels, you can detach the appliance door. There is a lock lever on the left and right hinges of the appliance door. When the locking levers are closed, the appliance door is secured in place. It cannot be detached. When the locking levers are open in order to detach the appliance door, the hinges are locked. They cannot snap shut.

Warning

1. The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges.
2. If the hinges are not locked, they can snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the appliance door, fully open.

Removal and installation of oven door

1. Open the appliance door fully.
2. Fold open the two locking levers on the left and right.
3. Close the appliance door as far as the limit stop.
4. With both hands, grip the door on the left- and right-hand side, and pull it out upwards.
5. The plastic inlay in the door cover may become discolored. To carry out thorough cleaning, you can remove the cover. Press the left and right switches of the cover.
6. After removing the door cover, that rest parts of the appliance door can be easily taken off so that you can go on with the cleaning. When the cleaning of the appliance door has finished, put the cover back in place and press on it until it clicks audibly into place

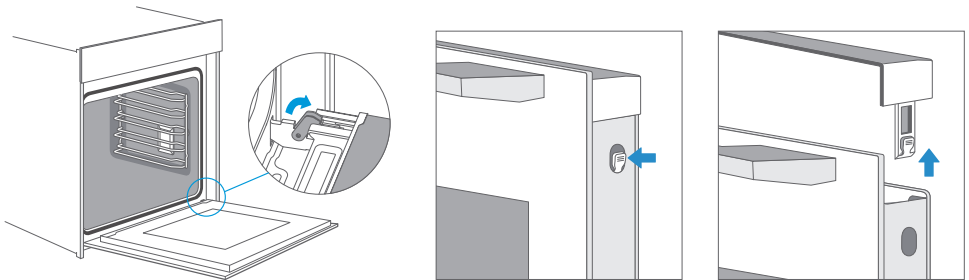

NOTE

Reattach the appliance door in the opposite sequence to removal.

TROUBLESHOOTING

If the problem cannot be solved or other problems occur, please contact the after-sales service.

Problem	Possible reason	Solution
Unable to start	<ul style="list-style-type: none">• Power is not connected	<ul style="list-style-type: none">• connect power supply
	<ul style="list-style-type: none">• The main power switch is not turned on	<ul style="list-style-type: none">• Turn on the power switch
	<ul style="list-style-type: none">• Oven door not closed	<ul style="list-style-type: none">• Close the oven door
lamp does not come on	<ul style="list-style-type: none">• It's broken	<ul style="list-style-type: none">• Contact after-sales service
Has a pungent odor or smoke	<ul style="list-style-type: none">• first use	<ul style="list-style-type: none">• No processing required
Food is not cooked	<ul style="list-style-type: none">• Temperature is too low	<ul style="list-style-type: none">• Use a higher temperature
	<ul style="list-style-type: none">• Food portion is too large	<ul style="list-style-type: none">• Cook food in smaller pieces or extend the cooking time.
Burnt or uneven food	<ul style="list-style-type: none">• The temperature is set too high or the heating time is too long	<ul style="list-style-type: none">• Adjust the cooking temperature or time
	<ul style="list-style-type: none">• The food is too close to the heating tube	<ul style="list-style-type: none">• Adjust the placement layers of accessories
The fan did not stop working after stopping the heating	<ul style="list-style-type: none">• Fan delays blowing for heat dissipation	<ul style="list-style-type: none">• No processing required

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.





KONČAR - KUĆANSKI APARATI d.d.

Slavonska avenija 16 , 10001 Zagreb , Hrvatska

tel : ++ 385 1/2484 555

fax : ++ 385 1/2404 102

www.koncar-ka.hr