

K O N Č A R

HR

UPUTE ZA UPORABU

EN

OWNER'S MANUAL

**UGRADBENA PEĆNICA
BUILT-IN OVEN**

UPV729TM

KONČAR - KUĆANSKI APARATI d.d.

Karlovačka ulica 23, 10451 Pisarovina, Hrvatska, EU

T: + (385) 1 2484 555

F: + (385) 1 2404 102

kucanski@koncar-ka.hr

www.koncar-ka.hr



CONTENTS

SAFETY INSTRUCTIONS	2
SPECIFICATIONS	6
PRODUCT OVERVIEW	7
QUICK START GUIDE	8
PRODUCT INSTALLATION	10
OPERATION INSTRUCTIONS	14
CLEANING AND MAINTENANCE	17
TROUBLESHOOTING	19
DISPOSAL AND RECYCLING	20

SAFETY INSTRUCTIONS

Intended use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concerns. Unintended use may cause hazards and loss of warranty claims.

Explanation of symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commis-
sioning the unit and keep them in the immediate vicinity of the installation site or
unit for later use!

WARNING

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- The instructions for pyrolytic self-cleaning ovens shall state that excess spillage must be removed before cleaning and shall specify which utensils can be left in the oven during cleaning. If, for cleaning, the manufacturer instructs the user to set the controls to a position higher than for normal cooking purposes, the instructions shall state that under such conditions the surfaces may get hotter than usual and children should be kept away.
- Keep the appliance and its cord out of reach of children less than 8 years.

PROHIBIT

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in the shattering of the glass.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- When the door or drawer of the oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.

CAUTION

- Don't use under the worksurface and it must not be subject to spillage from containers onto surfaces under which the appliance is installed.
- Please use the product in an open environment.
- During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ATTENTION

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run the new empty product with the conventional cooking function, 250°C, for 30 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal that there will be slight smoke and door. If it does occur, you should wait for the smell to be cleared before putting food into the oven.
- Only use the temperature probe recommended for this oven.
- The oven door should not be opened often during the cooking period.
- The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- When the door or drawer of the oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Some parts of the appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
- If you will not use the appliance for a long time, it is advised to plug it off.

SPECIFICATIONS

ENERGY EFFICIENCY

Product Information and Product Information Sheet according to EU and UK Ecodesign and Energy Labelling Regulations

Model identification	UPV729TM
Energy Efficiency Index	95.7
Energy efficiency class	A
Energy consumption with a standard load, conventional mode	0.81kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.81kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72L
Type of oven	Built-in Oven
Power Supply	220-240V~ , 50Hz-60Hz
Electric Power	2.3kW

ENERGY CONSUMPTION


Product information for power consumption and maximum time to reach applicable low power mode.

Standby mode	0.8 W
The maximum time needed for the oven to automatically reach the applicable low power mode or condition	20 minutes


PRODUCT OVERVIEW

Oven

When taking out food, please wear heat-insulating gloves to prevent burns!
Pay attention to the hot air when opening the oven door.

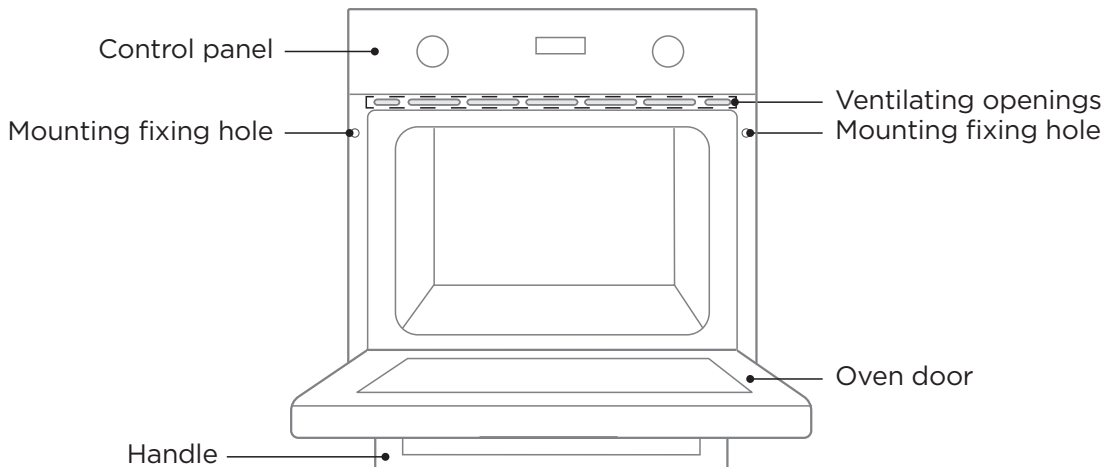


Accessories

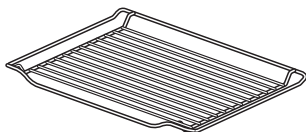

Grill rack

Grill food or place heat-resistant cooking containers

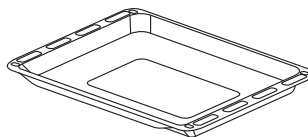


Deep grill tray

Cooking food or receiving food scraps


Accessories Use

For the oven to work properly, the grill rack and grill tray should only be placed between the first and fifth levels. When used together, place the grill tray under the grill rack.

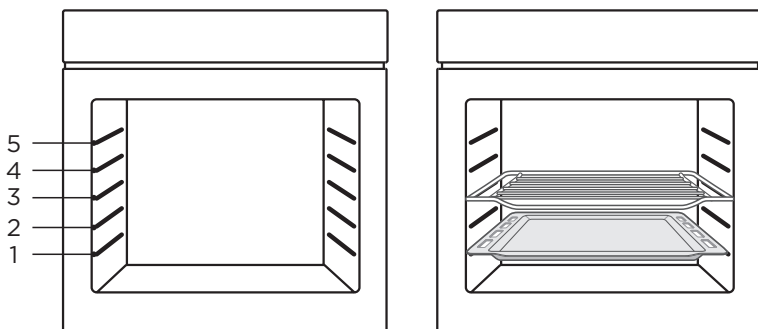





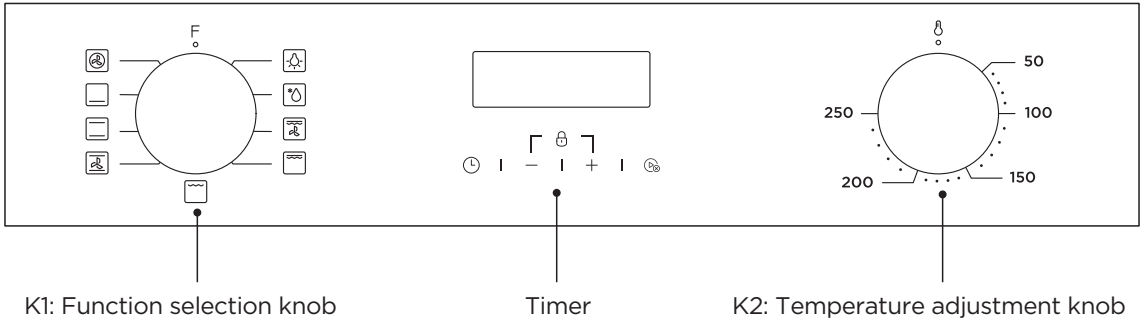




QUICK START GUIDE

Oven Control Panel



NOTES

1. The oven lamp is a main function, which is used by users to observe the cooking state of food and to check the oil stains and residues in the cavity when cleaning. After turning on the oven lamp function, you need to turn it off actively before the oven can return to the standby state.
2. After cooking, the cooling fan of the whole machine will continue to work to dissipate heat until the cavity is below the safe temperature.
3. When cooking is finished, please turn the knob to the closed position.

Function	Introduction
 Lamp	The cooking process can be observed under illuminated conditions.
 Defrost	The circulation of air at room temperature enables quicker thawing of frozen food (without the use of any heat).
 Convection	In convection mode, the fan turns on automatically to provide even heat for single or multi-layer baking. This is particularly suitable for baking foods that require even colouring.
 Bottom heat	Heating is provided by heating pipes at the bottom of the oven. Mainly used for keeping warm and colouring the food.
 Conventional	The top and bottom heating elements work together to provide convectional cooking.
 Conventional+fan	The combination of the fan and the top and bottom heating elements provides more even heat penetration and colouration, primarily for cooking meat.
 Double grill	The radiant heating element and top heating element are working.
 Double grill+fan	The radiant heating element and top heating element are working with a fan.
 Radiant heat	The inner grill element switches on and off to maintain temperature. Can be used to grill You can use it to cook a small amount of food.




NOTES

1. Do not put food into the cavity when preheating.
2. After preheating, put the food into the cavity and start the baking function.






PRODUCT INSTALLATION

Cupboard Diagram (Standing Cupboard)

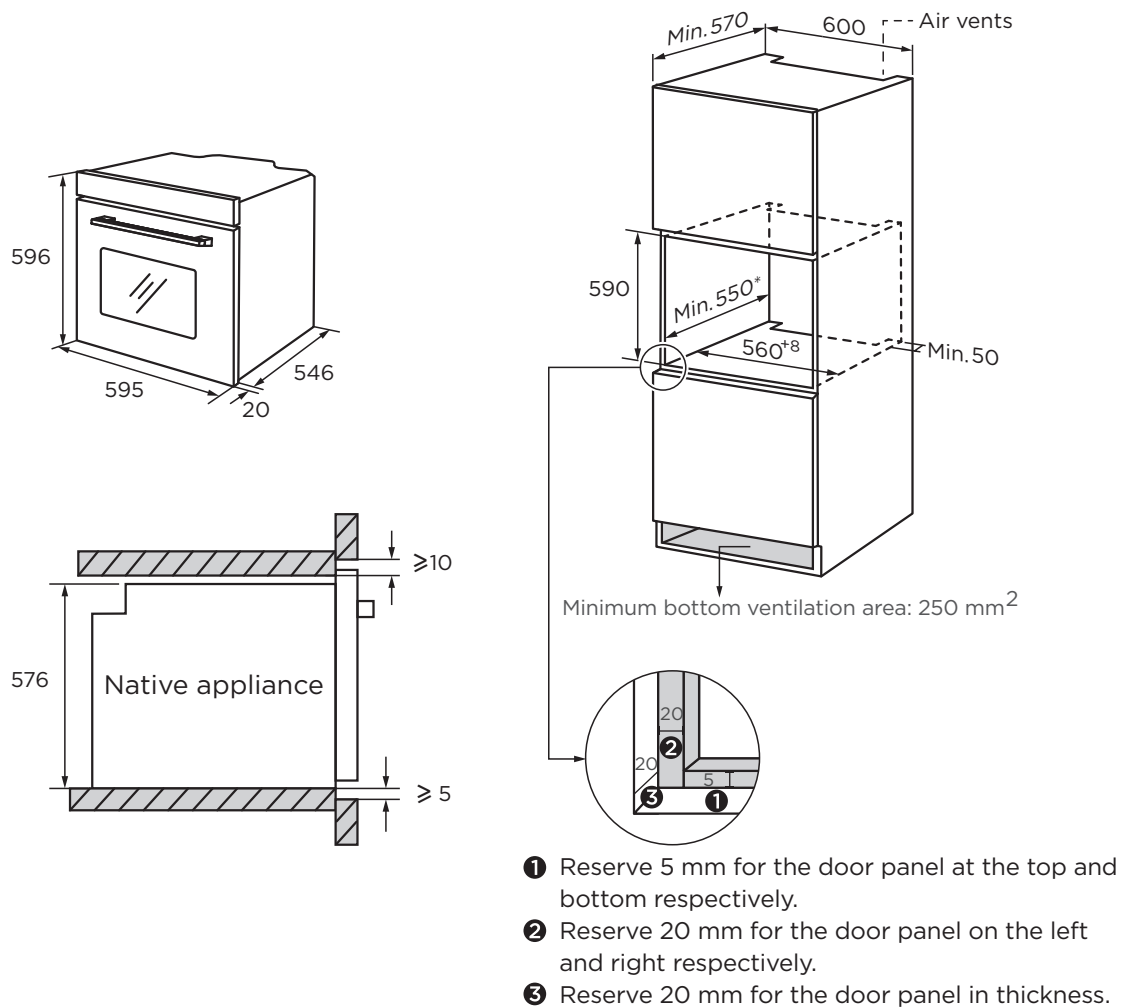

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.

Cupboard Diagram (Ground Cupboard)

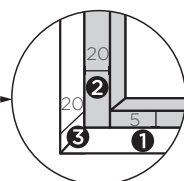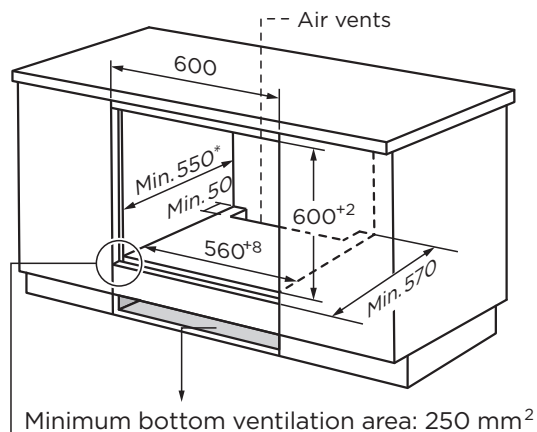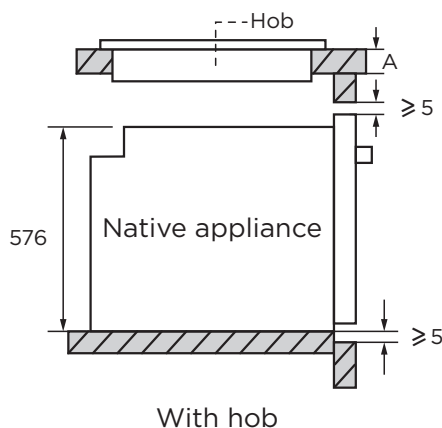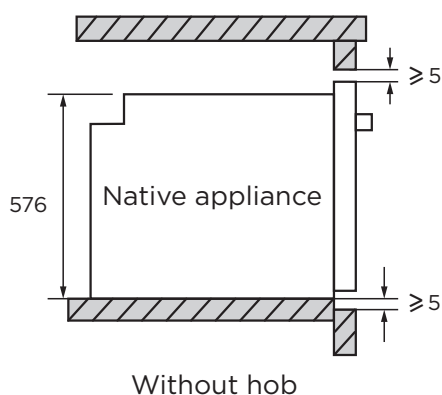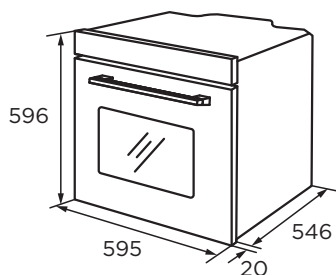

- ❶ Reserve 5 mm for the door panel at the top and bottom respectively.
- ❷ Reserve 20 mm for the door panel on the left and right respectively.
- ❸ Reserve 20 mm for the door panel in thickness.

If the appliance is installed under the hob, the minimum thickness of worktop A is shown below:

Hob type	worktop A
Induction hob	37 mm
Full-surface induction hob	47 mm
Gas hob	30 mm
Electric hob	27 mm

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.

Installation Important Instructions

Rules must follow

1. The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard by these installation instructions. The installer shall be liable for any damage resulting from incorrect installation.
2. The entire installation process requires two professional installers. Wear dry protective gloves during installation to avoid scratches or electric shock.
3. Fitted units must be heat-resistant up to 90°C, and adjacent unit fronts up to 70°C.

Rules must prohibit


1. Do not install the appliance behind a decorative door or the door of a kitchen unit, as this may cause the appliance to overheat.
2. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
3. Do not block the vent of the appliance and the gap between the cupboard and the appliance.
4. Use extreme caution when moving or installing the appliance. It is very heavy, do not lift the appliance by the door handle.
5. If the power cord or power plug is damaged, stop using the appliance immediately, to avoid fire, electric shock or other injuries.

Rules acknowledged

1. Be very careful when moving or installing the appliance to avoid damage to the appliance or damage to the cupboards.
2. Before starting up the appliance, remove all packaging materials and accessories from the cavity.
3. The power socket shall be accessible to users (such as next to the cupboard) for easy power-off.
4. After installation is complete, make sure that the power plug is firmly inserted into the socket.
5. Please refer to the "Cupboard Diagram" for the requirements of net depth of the cupboard. The clearance between the cupboard bottom board and the rear board (or wall) shall not be less than 50 mm.

Installation steps


1. Please customize the cupboard according to the "Cupboard Diagram".
2. Before installation, please check for normal power sockets and appropriate grounding, and check whether the cupboard dimension meets the installation requirements.
3. Place the appliance in designated locations in the kitchen, install it in a vertical cupboard, and connect the power supply.
4. To locate the mounting fixing holes, open the appliance door and look at the side frame of the appliance (position shown above).
5. Fix the appliance to the cabinet with the screws and rubbers provided with the appliances.

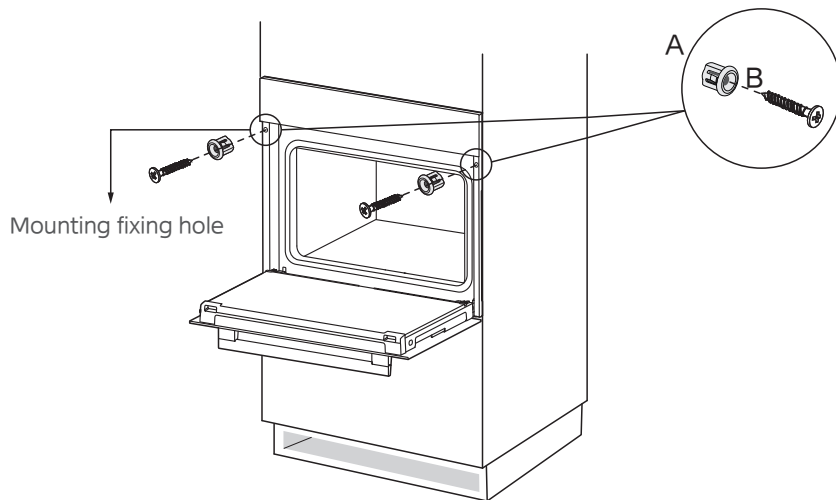

OPERATION INSTRUCTIONS

First Use

1. Before using it for the first time, please clean the oven and accessories to a certain extent. Remove the oven packaging shipping protection parts. Remove all accessories (e.g. foam, cardboard, grill tray, grill rack, etc.) from the cavity.
2. Thoroughly clean the attachment with soapy water and a rag or soft brush.
3. Wipe the cavity and oven surfaces with a soft damp cloth.
4. To avoid fire, please make sure that the cavity is free of any remaining packing materials and accessories when using it for the first time.
5. When using it for the first time, keep the kitchen highly ventilated (open the hood and windows). During this time, keep children and pets out of the kitchen and keep the doors of adjacent rooms closed.
6. To remove the smell of new products, run the following:

Oven Mode	Temperature	Time
 Conventional	250°C	0.5 Hour


Regular operation

1. Turn knob K1 to select the oven functions.
2. Turn knob K2 to adjust the temperature.
3. Mode setting.(You can skip this step)
4. When cooking is finished, turn all knobs to the "off" position.

NOTE

1. When the oven control knob is not in the "off" position, and the cooking time and end time are not set, the oven will always work.

Mode setting

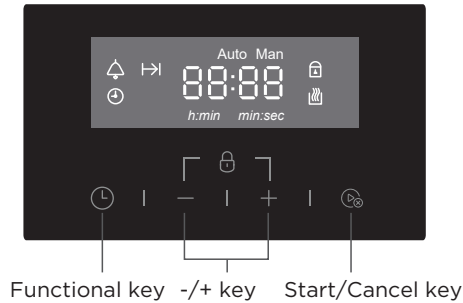

- Ⓒ Press this key to select the mode.
- /+ Adjusting time.
- Ⓒ After the parameters are confirmed, press Start once and Cancel twice.
During the setting process, press once to return to the clock display interface.
- Ⓒ Press the " + " and " - " keys at the same time for 3 seconds to enter or exit the child lock state.
- ⇒ Cooking time icon
- Ⓒ Alarm clock icon
- Ⓒ Current time icon
- Ⓒ Firepower icon
- Ⓒ Child lock icon

The timer can only control the lower cavity of the oven.

Press and hold the " +/- " key to quickly adjust the time.

When the power supply is connected, "0:00" is displayed, "Ⓒ" flashes, and press any key to exit.

In standby mode, press the "Ⓒ" key continuously to select functions:

clock → Alarm clock setting → duration setting → clock setting → clock (*: For default).

When cooking is finished, please turn the knob to the closed position.

Clock setting

Before using the oven, please complete the clock setting.

1. Press the "Ⓒ" key to select the "Ⓒ".
2. Press the " +/- " key to adjust the time, wait for 5 seconds to complete the confirmation and display the current time.

Manual mode

In standby or alarm state, press the "⏸" key once, the icon "🔔" will light up, and it will work for 10 hours by default.

If the icon "🔔" flashes, press any key, it will stay on and re-time for 10 hours.

When cooking is finished, turn the knob to the off position and press the "⏸" key to return to the standby state.

Alarm clock setting

1. Press the "⌚" key to select the "🔔".
2. Press the "+/-" key to adjust the alarm clock time. Wait for 5 seconds and start the countdown.

NOTES

1. When the countdown shows "0:00", the prompt sounds. Press any key to exit the alarm clock function.
2. During work, press the "+/-" key to adjust the alarm clock time.

Duration time setting

1. In standby or alarm clock state or manual mode, press the "⌚" key to select "⏸".
2. Press the "+/-" key to adjust the time, wait for 5 seconds to complete the confirmation, and the icons "🔔" and "⏸" are always on to start the countdown.

NOTES

1. After the countdown is over, the prompt sounds. Press any key to cancel the prompt.
2. During cooking, press the "⌚" key to query and change the cooking time.

CLEANING AND MAINTENANCE

Clean

Disconnect the power supply before cleaning and maintenance.
To ensure the life of the oven, it should be thoroughly cleaned frequently.
The cleaning steps are as follows:


1. After cooking, wait for the oven to cool completely.
2. Remove oven accessories, rinse with warm water and dry.
3. Clean up food debris from the oven chamber.
4. Wipe the oven with a soft cloth stained with detergent, then dry with a soft cloth.

NOTE

1. Do not use sharp cleaning tools, hard brush and corrosive cleaning products, so as not to damage the oven and its accessories.
2. Do not use a rough scrubbing agent or sharp metal spatula to clean the door glass.

Lamp Replacement

1. To prevent the lamp from being damaged, put a towel in the cavity.
2. Turn counterclockwise to remove the glass cover (corner lamp);
3. Pull out the wick and replace it (don't turn it).
4. Install the glass cover back and take out the towel.
5. The product contains a light source of energy efficiency class: G

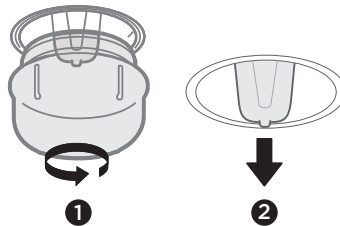

Warning

To avoid electric shocks-please ensure that the electricity supply to the appliance is switched off and the appliance is fully cold. before removing the lamp lens.

Door Cleaning

With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come.


For cleaning purposes and to remove the door panels, you can detach the appliance door. There is a lock lever on the left and right hinges of the appliance door. When the locking levers are closed, the appliance door is secured in place. It cannot be detached. When the locking levers are open in order to detach the appliance door, the hinges are locked. They cannot snap shut.

Warning

1. The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges.
2. If the hinges are not locked, they can snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the appliance door, fully open.

Removal and installation of oven door

1. Open the appliance door fully.
2. Fold open the two locking levers on the left and right.
3. Close the appliance door as far as the limit stop.
4. With both hands, grip the door on the left- and right-hand side, and pull it out upwards.
5. The plastic inlay in the door cover may become discoloured. To carry out a thorough cleaning, you can remove the cover. Press the left and right switches the cover.
6. After removing the door cover, gently lift the door glass, and then pull it out in the direction of the arrow to continue cleaning. After cleaning the door body, complete the door body assembly in reverse steps.

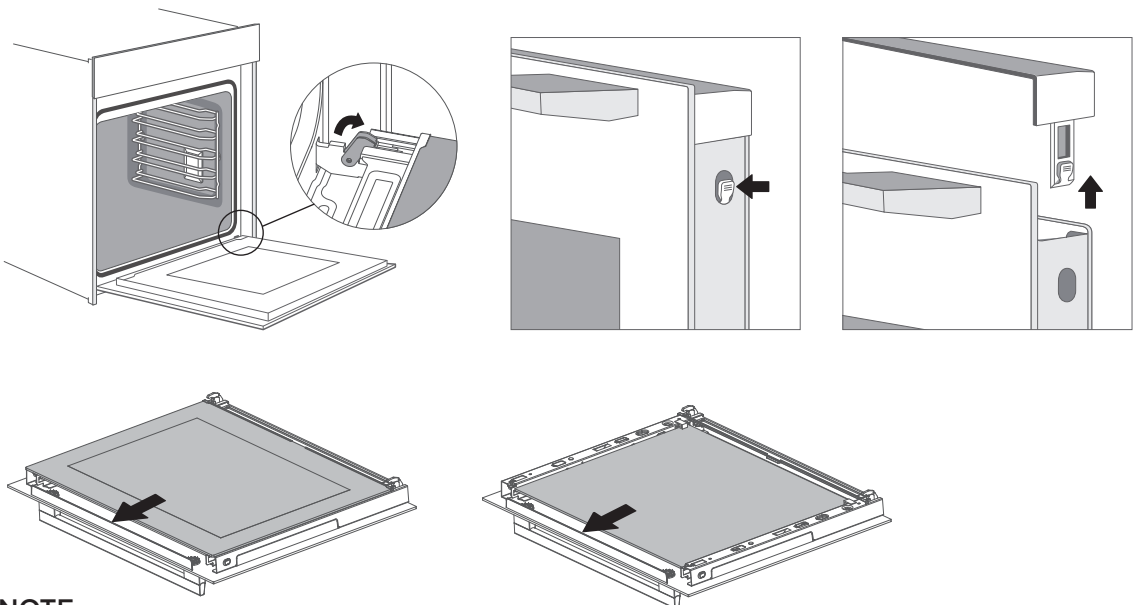

NOTE

Reattach the appliance door in the opposite sequence to remove.

TROUBLESHOOTING

If the problem cannot be solved or other problems occur, please contact the after-sales service.

Problem	Possible reason	Solution
Unable to start	<ul style="list-style-type: none"> • Power is not connected 	<ul style="list-style-type: none"> • connect power supply
	<ul style="list-style-type: none"> • The main power switch is not turned on 	<ul style="list-style-type: none"> • Turn on the power switch
	<ul style="list-style-type: none"> • The oven door is not closed 	<ul style="list-style-type: none"> • Close the oven door
The lamp does not come on	<ul style="list-style-type: none"> • It's broken 	<ul style="list-style-type: none"> • Contact after-sales service
Has a pungent odour or smoke	<ul style="list-style-type: none"> • first use 	<ul style="list-style-type: none"> • No processing required
The food is not cooked	<ul style="list-style-type: none"> • Temperature is too low 	<ul style="list-style-type: none"> • Use a higher temperature
	<ul style="list-style-type: none"> • Food portion is too large 	<ul style="list-style-type: none"> • Cook food in smaller pieces or extend the cooking time.
Burnt or uneven food	<ul style="list-style-type: none"> • The temperature is set too high or the heating time is too long 	<ul style="list-style-type: none"> • Adjust the cooking temperature or time
	<ul style="list-style-type: none"> • The food is too close to the heating tube 	<ul style="list-style-type: none"> • Adjust the placement layers of accessories
The fan did not stop working after stopping the heating	<ul style="list-style-type: none"> • Fan delays blowing for heat dissipation 	<ul style="list-style-type: none"> • No processing required

DISPOSAL AND RECYCLING

Important instructions for the environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with the EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used devices must be returned to the official collection point for the recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs an important role in recovering and recycling old appliances. Appropriate disposal of used appliances helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with the EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

The packaging materials of the product are manufactured from recyclable materials by our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



Sadržaj

Sigurnosne upute	2
Specifikacije	6
Pregled proizvoda	7
Vodič za brzi početak	8
Upute za instalaciju proizvoda	10
Upute za uporabu	14
Čišćenje i održavanje	17
Otklanjanje poteškoća	19
Odlaganje i recikliranje	20

UPUTE O SIGURNOSTI

Predviđena uporaba

Sljedeće smjernice sigurnosti namijenjene su sprječavanju nepredviđenih rizika ili oštećenja zbog neispravnog ili nepravilnog rukovanja uređajem. Molimo provjerite ambalažu i uređaj po dolasku kako biste bili sigurni da je sve netaknuto kako biste osigurali siguran rad. Ako primijetite bilo kakvo oštećenje, molimo kontaktirajte prodavača ili trgovca. Napomena: preinake ili izmjene na uređaju nisu dopuštene zbog vaše sigurnosti. Nepravilna uporaba može uzrokovati opasnosti i gubitak prava na jamstvo

Objašnjenje simbola



Opasnost

Ovaj simbol ukazuje na opasnosti po život i zdravlje osoba zbog izuzetno zapaljivog plina.



Upozorenje na električni napon

Ovaj simbol ukazuje na opasnost po život i zdravlje osoba zbog napona.



Upozorenje

Signalna riječ ukazuje na opasnost s srednjim stupnjem rizika koja, ako se ne izbjegne, može rezultirati smrću ili ozbiljnom ozljedom.



Pazite

Signalna riječ ukazuje na opasnost s niskim stupnjem rizika koja, ako se ne izbjegne, može rezultirati manjom ili umjerenom ozljedom.



Pažnja

Signalna riječ označava važne informacije (npr. oštećenje imovine), ali ne opasnost.



Promatrajte upute

Ovaj simbol označava da servisni tehničar smije upravljati i održavati ovaj uređaj samo prema uputama za uporabu.

Pažljivo i pozorno pročitajte ove upute za uporabu prije korištenja/ puštanja u pogon uređaja te ih čuvajte u neposrednoj blizini mjesta postavljanja ili uređaja za kasniju uporabu!

⚠ UPOZORENJE

- Uređaj i njegovi dostupni dijelovi zagrijevaju se tijekom uporabe. Treba paziti da se ne dodiruju grijaći elementi. Djeca mlađa od 8 godina moraju biti udaljena osim ako su neprekidno pod nadzorom.
- Ovaj uređaj mogu koristiti djeca stara 8 godina i starije osobe s smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja ako su dobili nadzor ili upute o sigurnoj uporabi uređaja i razumiju opasnosti uključene. Djeca se ne smiju igrati s uređajem. Čišćenje i održavanje koje obavlja korisnik ne smiju obavljati djeca bez nadzora.
- Ako je površina puknuta, isključite uređaj kako biste izbjegli mogućnost električnog udara.
- Upute za pećnice s pirolitičkim samočišćenjem moraju navesti da višak prolivenog mora biti uklonjen prije čišćenja i moraju specificirati koje posuđe može ostati u pećnici tijekom čišćenja. Ako proizvođač za čišćenje uputi korisnika da postavi kontrole na poziciju višu od uobičajene za kuhanje, upute moraju navesti da se pod takvim uvjetima površine mogu zagrijati više nego obično i djeca trebaju biti udaljena.
- Držite uređaj i njegov kabel izvan dohvata djece mlađe od 8 godina.

⊘ ZABRANA

- Ne koristite oštre abrazivne čistače ili oštre metalne strugače za čišćenje stakla na vratima pećnice jer mogu ogrebat površinu, što može rezultirati pucanjem stakla.
- Paromop nije za upotrebu.
- Uređaj nije namijenjen za rad putem vanjskog tajmera ili zasebnog sustava daljinskog upravljanja.
- Ne koristite pećnicu ako nemate ništa na nogama. Ne dodirujte pećnicu mokrim ili vlažnim rukama ili nogama.
- Kada je vrata ili ladica pećnice otvorena, ne ostavljajte ništa na njima, jer možete neuravnotežiti uređaj ili slomiti vrata.
- Ne dopustite djeci da idu blizu pećnice kada je uključena, posebno kada je uključen roštilj.

OPREZ

- Ne koristite ispod radne površine i ne smije biti izložen proljevanju tekućine iz posuda na površine ispod kojih je uređaj instaliran
- Molimo koristite proizvod na otvorenom.
- Tijekom uporabe, uređaj postaje vrlo vruć. Treba paziti da se ne dodiruju grijaći elementi unutar pećnice.
- Provjerite je li uređaj isključen prije zamjene žarulje pećnice kako biste izbjegli mogućnost električnog udara.
- Sredstvo za isključenje mora biti ugrađeno u fiksnu instalaciju prema specifikacijama instalacije.
- Djeca trebaju biti pod nadzorom kako bi se osiguralo da se ne igraju s uređajem.
- Ovaj uređaj nije namijenjen za upotrebu od strane osoba (uključujući djecu) s smanjenim fizičkim, senzornim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja osim ako im nije pružen nadzor ili upute o korištenju uređaja od strane osobe odgovorne za njihovu sigurnost.
- Pristupačni dijelovi mogu postati vrući tijekom upotrebe. Male djece treba držati podalje.
- Sredstvo za isključenje svih polova mora biti ugrađeno u fiksnu instalaciju sukladno pravilima o žičanju.
- Ako je priključni kabel oštećen, mora ga zamijeniti proizvođač, njegov servisni agent ili slično kvalificirane osobe kako bi se izbjegla opasnost.

POZOR

- Kada se pećnica prvi put uključi, može otpustiti neugodan miris. To je zbog veziva koje se koristi za izolacijske panele unutar pećnice. Molimo pokrenite novi prazan proizvod s konvencionalnom funkcijom kuhanja, 250°C, tijekom 30 minuta kako biste očistili uljne nečistoće unutar šupljine.
- Tijekom prvog korištenja, potpuno je normalno da će biti lagano dima i vrata. Ako se to dogodi, trebate pričekati da se miris očisti prije nego što stavite hranu u pećnicu.
- Koristite samo temperaturnu sondicu preporučenu za ovu pećnicu.
- Vrata pećnice ne bi trebala često biti otvarana tijekom perioda kuhanja.
- Aparat mora biti instaliran od strane ovlaštenog tehničara i staviti u upotrebu. Proizvođač nije odgovoran za bilo kakvu štetu koja bi mogla biti uzrokovana neispravnim postavljanjem i instalacijom od strane neovlaštenog osoblja.
- Kada je vrata ili ladica pećnice otvorena, ne ostavljajte ništa na njima, jer možete neuravnotežiti uređaj ili slomiti vrata.
- Neke dijelove aparata mogu zadržati toplinu dugo vremena; potrebno je pričekati da se ohlade prije dodirivanja na mjesta koja su izložena izravnoj toplini.
- Ako nećete koristiti aparat dugo vremena, preporučuje se da ga isključite iz struje.

SPECIFIKACIJE

ENERGETSKA UČINKOVITOST

Informacije o proizvodu i list s informacijama o proizvodu prema propisima o ekodizajnu i energetske označavanju EU i UK

Identifikacija modela	UPV729TM
Indeks energetske učinkovitosti	95.7
Klasa energetske učinkovitosti	A
Potrošnja energije s standardnim opterećenjem, konvencionalni način rada	0,81 kWh/ciklus
Potrošnja energije s standardnim opterećenjem, način rada s ventilatorom	0,81 kWh/ciklus
Broj šupljina	1
Izvor topline	Električna energija
Volume	72L
Vrsta pećnice	Ugradbena pećnica
Napajanje	220-240V~ , 50Hz-60Hz
Električna snaga	2.3kW

POTROŠNJA ENERGIJE


Informacije o proizvodu za potrošnju energije i maksimalno vrijeme do dostizanja primjenjivog načina rada s niskom potrošnjom energije.

Način pripravnosti	0.8 W
Maksimalno potrebno vrijeme za pećnica da automatski dosegne odgovarajući način rada ili stanje niske snage	20 minuta


PREGLED PROIZVODA

Pećnica

Kada izvlačite hranu, molimo nosite toplinski izolirane rukavice kako biste spriječili opekline! Pazite na vrući zrak prilikom otvaranja vrata pećnice.

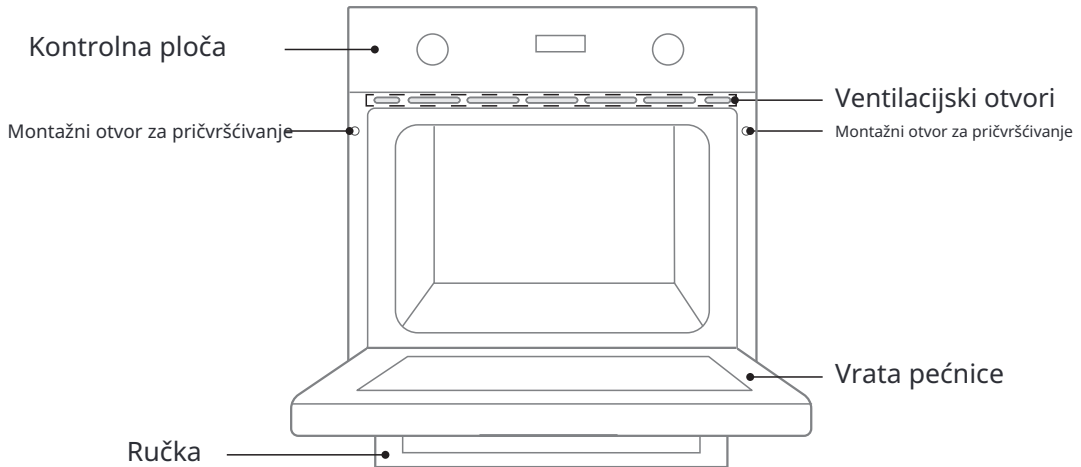


Dodaci

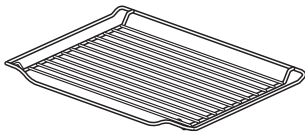

Rešetka za roštilj

Roštiljajte hranu ili stavite otporne na toplinu posude za kuhanje

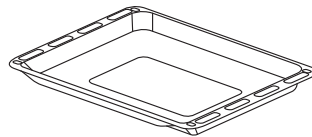


Duboki pladanj za roštilj

Kuhanje hrane ili prihvaćanje ostataka hrane


Upotreba dodataka

Da bi pećnica pravilno radila, rešetka za roštilj i pladanj za roštilj trebaju biti postavljeni samo između prvog i petog nivoa. Kada se koriste zajedno, stavite pladanj za roštilj ispod rešetke za roštilj.

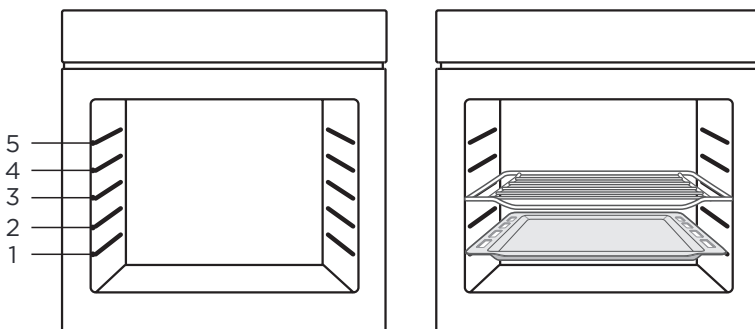





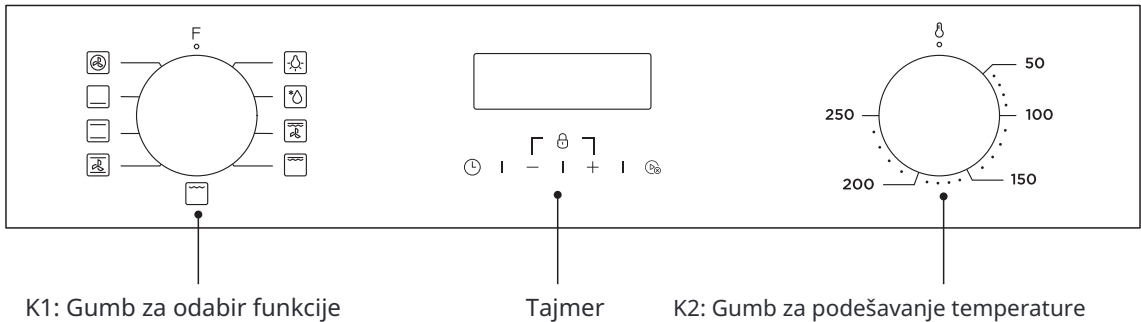




BRZI VODIČ ZA POČETAK

Upravljačka ploča pećnice



BILJEŠKE

1. Svjetiljka pećnice je glavna funkcija koju korisnici koriste kako bi promatrali stanje kuhanja hrane i provjerili mrlje od ulja i ostatke u šupljini prilikom čišćenja. Nakon uključivanja funkcije svjetiljke pećnice, morate je aktivno isključiti prije nego što se pećnica može vratiti u stanje pripravnosti.
2. Nakon kuhanja, hlađenje cijelog uređaja će nastaviti raditi kako bi raspršilo toplinu dok šupljina ne bude ispod sigurne temperature.
3. Kada je kuhanje završeno, molimo okrenite gumb u zatvoreni položaj.


Funkcija	Uvod
 Osvjetljenje	Postupak kuhanja može se promatrati pod osvjetljenim uvjetima.
 Odmrzavanje	Cirkulacija zraka na sobnoj temperaturi omogućuje brže odmrzavanje smrznute hrane (bez korištenja topline).
 Konvekcija	U konvekcijskom načinu rada, ventilator se automatski uključuje kako bi osigurao ravnomjernu toplinu za pečenje na jednom ili više slojeva. To je posebno pogodno za pečenje hrane koja zahtijeva ravnomjerno bojanje.
 Donje grijanje	Grijanje osiguravaju grijaće cijevi na dnu pećnice. Glavno se koristi za održavanje topline i bojanje hrane.
 Konvencionalno	Gornji i donji grijači rade zajedno kako bi pružili konvekcijsko kuhanje.
 Konvencionalno+ ventilator	Kombinacija ventilatora i gornjih i donjih grijača pruža ravnomjerniju penetraciju topline i bojenje, prvenstveno za kuhanje mesa.
 Dvostruki roštilj	Radijantni grijaći element i gornji grijaći element rade.
 Dvostruki roštilj+ ventilator	Radijantni grijaći element i gornji grijaći element rade s ventilatorom.
 Zračna toplina	Unutarnji grijaći element se uključuje i isključuje kako bi održavao temperaturu. Može se koristiti za roštiljanje. Možete ga koristiti za kuhanje male količine hrane.

BILJEŠKE

1. Ne stavljajte hranu u šupljinu tijekom zagrijavanja.
2. Nakon zagrijavanja, stavite hranu u šupljinu i pokrenite funkciju pečenja.

INSTALACIJA PROIZVODA






Dijagram ormara (Stojeći ormar)

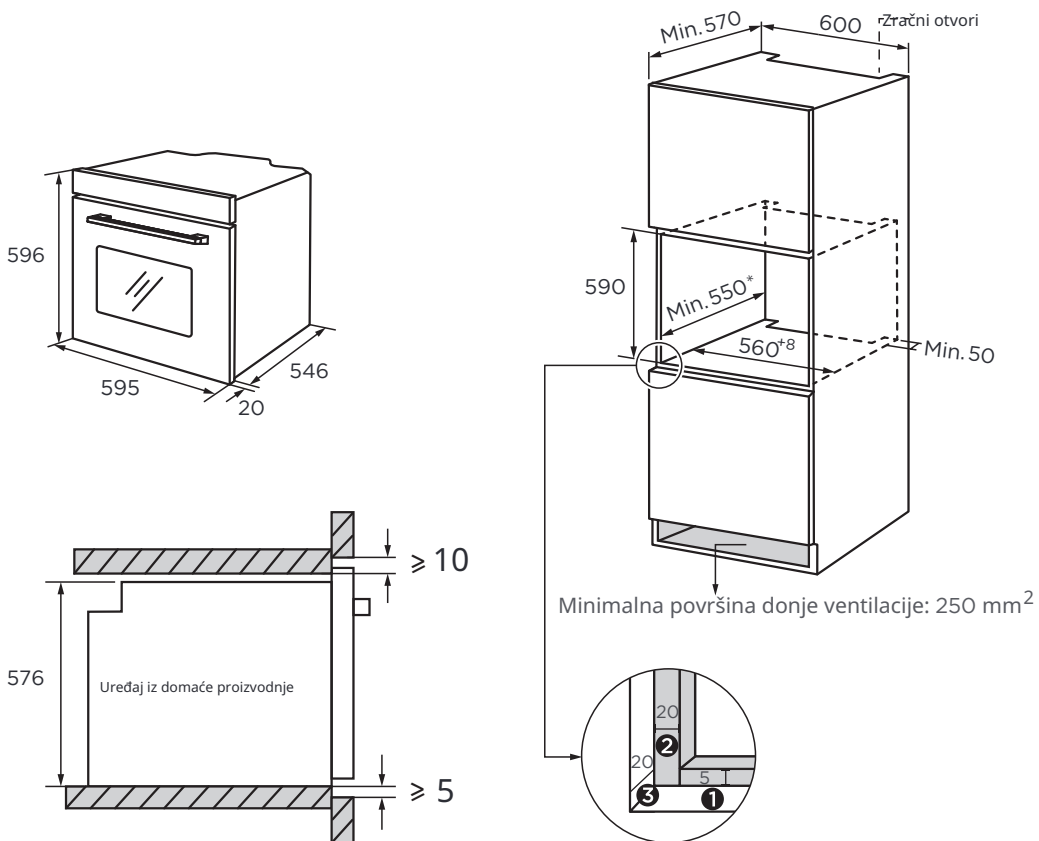

- ❶ Rezervirajte 5 mm za ploču vrata na vrhu i dnu, redom.
- ❷ Rezervirajte 20 mm za ploču vrata s lijeve i desne strane, redom.
- ❸ Rezervirajte 20 mm za debljinu ploče vrata.

1. Debljina ploče ormara je 20 mm.
2. Ako je utičnica postavljena na stražnjoj strani uređaja, dubina otvora ormara mora biti povećana s minimalnih 590 mm na 620 mm. Dimenzije na slikama su u mm.
3. u mm.

Dijagram ormara (Podni ormar)

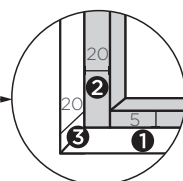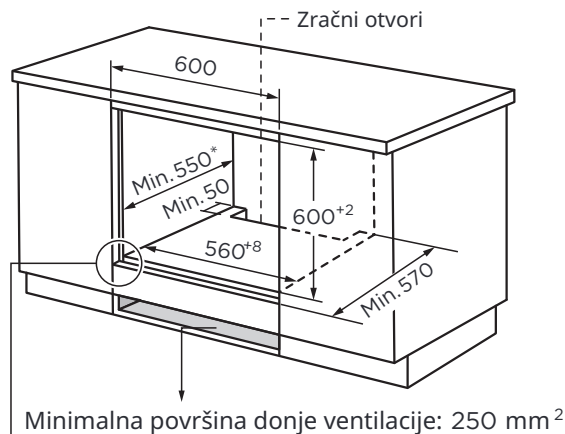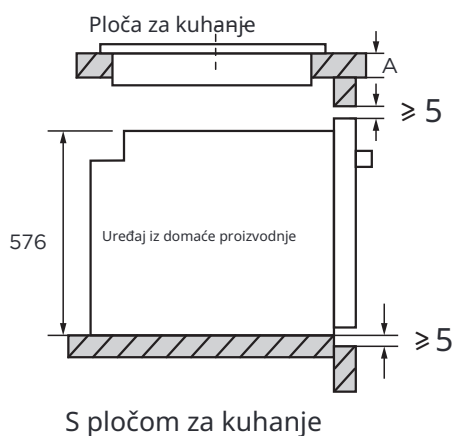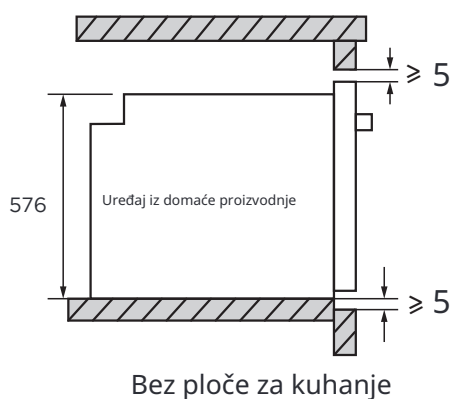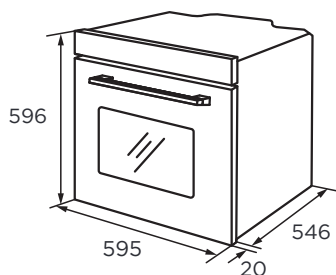

- ❶ Rezervirajte 5 mm za ploču vrata na vrhu i dnu, redom.
- ❷ Rezervirajte 20 mm za ploču vrata s lijeve i desne strane, redom.
- ❸ Rezervirajte 20 mm za debljinu ploče vrata.

Ako je uređaj postavljen ispod ploče za kuhanje, minimalna debljina radne ploče A prikazana je u nastavku:

Vrsta ploče za kuhanje	Radna ploča A
Indukcijska ploča za kuhanje	37 mm
Indukcijska ploča za kuhanje cijele površine	47 mm
Plinska ploča za kuhanje	30 mm
Električna ploča za kuhanje	27 mm

1. Debljina ploče ormara je 20 mm.
2. Ako je utičnica postavljena na stražnjoj strani uređaja, dubina otvora ormara mora biti povećana s minimalnih 590 mm na 620 mm. Dimenzije na slikama su u mm.
3. u mm.

Važne upute za instalaciju

Pravila moraju biti poštovana

1. Siguran rad ovog uređaja može se jamčiti samo ako je instaliran prema profesionalnim standardima ovih instalacijskih uputa. Instalater će biti odgovoran za bilo kakvu štetu nastalu zbog neispravne instalacije.
2. Cijeli proces instalacije zahtijeva dva profesionalna instalatera. Tijekom instalacije nosite suhe zaštitne rukavice kako biste izbjegli ogrebotine ili električni udar.
3. Ugrađene jedinice moraju biti otporne na toplinu do 90°C, a prednje strane susjednih jedinica do 70°C.

Pravila moraju zabraniti


1. Ne postavljajte uređaj iza ukrasnih vrata ili vrata kuhinjske jedinice, jer to može uzrokovati pregrijavanje uređaja.
2. Provjerite uređaj na oštećenja nakon otpakiranja. Ne spajajte uređaj ako je oštećen tijekom prijevoza.
3. Ne blokirajte otvor za ventilaciju uređaja i razmak između ormara i uređaja.
4. Budite izuzetno oprezni prilikom premještanja ili instaliranja uređaja. Vrlo je težak, nemojte dizati uređaj za ručku vrata.
5. Ako je kabel za napajanje ili utikač oštećen, odmah prestanite koristiti uređaj, kako biste izbjegli požar, električni udar ili druge ozljede.

Pravila priznata

1. Budite vrlo oprezni prilikom premještanja ili instaliranja uređaja kako biste izbjegli oštećenje uređaja ili oštećenje ormara.
2. Prije pokretanja uređaja, uklonite sav pakirni materijal i pribor iz šupljine.
3. Utikač za napajanje mora biti dostupan korisnicima (npr. pored ormara) radi jednostavnog isključivanja napajanja.
4. Nakon što je instalacija završena, provjerite je li utikač čvrsto umetnut u utičnicu.
5. Molimo pogledajte "Dijagram ormara" za zahtjeve za neto dubinu ormara. Prostor između donje ploče ormara i stražnje ploče (ili zida) ne smije biti manji od 50 mm.

Koraci instalacije

1. Molimo prilagodite ormarić prema "Dijagramu ormara". Prije instalacije,
2. provjerite normalne utičnice i odgovarajuće uzemljenje te provjerite odgovaraju li dimenzija ormara zahtjevima instalacije.
3. Postavite uređaj na određena mjesta u kuhinji, instalirajte ga u uspravni ormar i spojite napajanje.
4. Kako biste pronašli rupe za pričvršćivanje, otvorite vrata uređaja i pogledajte bočni okvir uređaja (prikazana pozicija iznad).
5. Pričvrstite uređaj za ormar vijcima i gumama koje dolaze s uređajem.

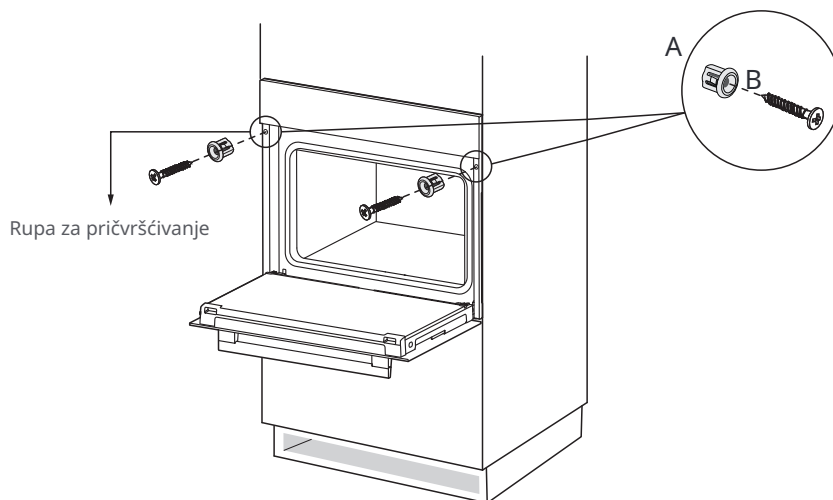

UPUTE ZA RAD

Prva upotreba

1. Prije prve upotrebe, molimo očistite pećnicu i pribor do određene mjere. Uklonite zaštitne dijelove za pakiranje pećnice. Izvadite sav pribor (npr. pjenu, karton, rešetku za pečenje, stalak za rešetku, itd.) iz šupljine.
2. Pažljivo očistite pribor sapunom i krpom ili mekom četkom.
3. Obrišite šupljinu i površine pećnice mekom vlažnom krpom.
4. Kako biste izbjegli požar, pobrinite se da je šupljina prazna od preostalih pakirnih materijala i pribora prilikom prve upotrebe.
5. Kada ga koristite prvi put, držite kuhinju visoko prozračenom (otvorite napu i prozore). Tijekom tog vremena, držite djecu i kućne ljubimce izvan kuhinje i vrata susjednih soba zatvorena.
6. Za uklanjanje mirisa novih proizvoda, pokrenite sljedeće:

Način pečenja	Temperatura	Vrijeme
 Konvencionalno	250 °C	0.5 Sat

Redovni rad

1. Okrenite gumb K1 za odabir funkcija pećnice.
2. Okrenite gumb K2 za podešavanje temperature.
3. Postavljanje načina rada. (Možete preskočiti ovaj korak)
4. Kada je kuhanje završeno, okrenite sve gumbe na položaj "isključeno".

NAPOMENA

1. Kada gumb za upravljanje pećnicom nije u položaju "isključeno" i vrijeme kuhanja i krajnje vrijeme nisu postavljani, pećnica će uvijek raditi.

Postavljanje načina rada



- ⌚ Pritisnite ovaj gumb za odabir načina.
- /+ Podešavanje vremena.
- ⌚ Nakon što se potvrde parametri, pritisnite Start jednom i Cancel dva puta.
Tijekom postupka postavljanja, pritisnite jednom za povratak na sučelje s prikazom sata.
- 🔒 Pritisnite tipke " + " i " - " istovremeno 3 sekunde kako biste ušli ili izašli iz stanja dječje brave.
- ⌚ Ikona vremena kuhanja
- 🔔 Ikona alarma
- ⌚ Trenutna ikona vremena
- 🔥 Ikona snage vatre
- 🔒 Ikona dječje brave

Timer može kontrolirati samo donju šupljinu pećnice.

Pritisnite i držite tipku " +/- " za brzo podešavanje vremena.

Kada je napajanje spojeno, prikazuje se "0:00", "⌚" trepće, i pritisnite bilo koju tipku za izlaz.

U stanju pripravnosti, kontinuirano pritisnite tipku "⌚" za odabir funkcija:

sata → alarma postavljanje → trajanja postavljanje → sata postavljanje → sata (*: Za zadano).

Kada je kuhanje završeno, molimo okrenite gumb u zatvoreni položaj.

Postavljanje sata

Prije korištenja pećnice, molimo završite postavljanje sata.

1. Pritisnite tipku "⌚" za odabir "⌚".
2. Pritisnite tipku " +/- " za podešavanje vremena, pričekajte 5 sekundi za završetak potvrde i prikaz trenutnog vremena.

Ručni način rada

U stanju pripravnosti ili alarmu, pritisnite tipku "⏸" jednom, ikona "🔥" će se upaliti, i radit će 10 sati prema zadanim postavkama.

Ako ikona "🔥" trepće, pritisnite bilo koju tipku, ostati će upaljena i ponovno će se postaviti na 10 sati.

Kada je kuhanje završeno, okrenite gumb na položaj isključeno i pritisnite tipku "⏸" za povratak u stanje pripravnosti.

Postavljanje alarma

1. Pritisnite tipku "⌚" za odabir "🔔".
2. Pritisnite tipku " +/- " za podešavanje vremena alarma. Pričekajte 5 sekundi i započnite odbrojavanje.

BIJJEŠKE

1. Kada odbrojavanje pokaže "0:00", čuje se upozorenje. Pritisnite bilo koju tipku za izlazak iz funkcije alarma.
2. Tijekom rada, pritisnite tipku " +/- " za podešavanje vremena alarma.

Postavljanje trajanja vremena

1. U stanju pripravnosti ili stanju alarma ili ručnom načinu rada, pritisnite tipku "⌚" za odabir "⏸".
2. Pritisnite tipku " +/- " za podešavanje vremena, pričekajte 5 sekundi za potvrdu, a ikone "🔥" i "⏸" uvijek su uključene za početak odbrojavanja.

NAPOMENA

1. Nakon što odbrojavanje završi, čuje se upozorenje. Pritisnite bilo koju tipku za otkazivanje upozorenja.
2. Tijekom kuhanja, pritisnite tipku "⌚" za upit i promjenu vremena kuhanja.

ČIŠĆENJE I ODRŽAVANJE

Čisto

Isključite napajanje prije čišćenja i održavanja.

Da biste osigurali život pećnice, treba je redovito temeljito čistiti.

Koraci čišćenja su sljedeći:


1. Nakon kuhanja, pričekajte da se pećnica potpuno ohladi.
2. Uklonite pribor za pećnicu, isperite toplom vodom i osušite.
3. Očistite ostatke hrane iz komore pećnice.
4. Obrišite pećnicu mekanom krpom natopljenom deterdžentom, zatim osušite mekanom krpom.

NAPOMENA

1. Ne koristite oštre alate za čišćenje, tvrdu četku i korozivne čistače kako ne biste oštetili pećnicu i njezine dodatke.
2. Ne koristite grubu abrazivnu tvar ili oštru metalnu lopaticu za čišćenje stakla vrata.

Zamjena lampe

1. Kako biste spriječili oštećenje lampe, stavite ručnik u šupljinu.
2. Okrenite u smjeru suprotnom od kazaljke na satu kako biste uklonili stakleni poklopac (kutna lampa); Izvucite fitilj i zamijenite ga (nemojte ga okretati).
3. Vratite stakleni poklopac i izvadite ručnik.
4. Proizvod sadrži izvor svjetlosti energetske učinkovitosti razreda: G

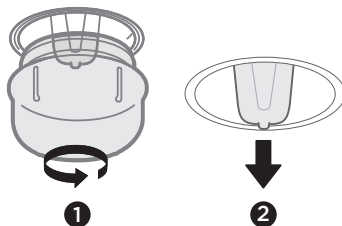

Upozorenje

Kako biste izbjegli električne udare - molimo osigurajte da je napajanje aparata isključeno i da je aparat potpuno hladan prije nego što uklonite staklo lampe.

Čišćenje vrata

Uz dobru njegu i čišćenje, vaš uređaj će zadržati svoj izgled i ostati potpuno funkcionalan još dugo vremena.

Za čišćenje i uklanjanje panela vrata, možete odvojiti vrata uređaja. Na lijevim i desnim šarkama vrata uređaja nalazi se zaključna poluga. Kada su zaključne poluge zatvorene, vrata uređaja su osigurana na mjestu. Ne mogu se odvojiti.


Kada su zaključavajući poluge otvorene radi odvajanja vrata uređaja, šarke su zaključane. Ne mogu se zatvoriti.

Upozorenje

1. Šarke na vratima uređaja se pomiču prilikom otvaranja i zatvaranja vrata, i možete biti zarobljeni. Držite ruke dalje od šarki.
2. Ako šarke nisu zaključane, mogu se snažno zatvoriti. Pazite da su zaključavajuće poluge uvijek potpuno zatvorene ili, prilikom odvajanja vrata uređaja, potpuno otvorene.

Uklanjanje i postavljanje vrata pećnice

1. Potpuno otvorite vrata uređaja.
2. Preklopite dvije zaključavajuće poluge s lijeve i desne strane.
3. Zatvorite vrata uređaja do granice zaustavljanja.
4. Obema rukama uhvatite vrata s lijeve i desne strane, i izvucite ih prema gore.
5. Plastični umetak na poklopcu vrata može postati obojen. Za temeljito čišćenje, možete ukloniti poklopac. Pritisnite lijeve i desne prekidače na poklopcu.
6. Nakon uklanjanja poklopca vrata, nježno podignite staklo vrata, a zatim ga izvucite u smjeru strelice kako biste nastavili s čišćenjem. Nakon čišćenja tijela vrata, završite sastavljanje tijela vrata u obrnutim koracima.

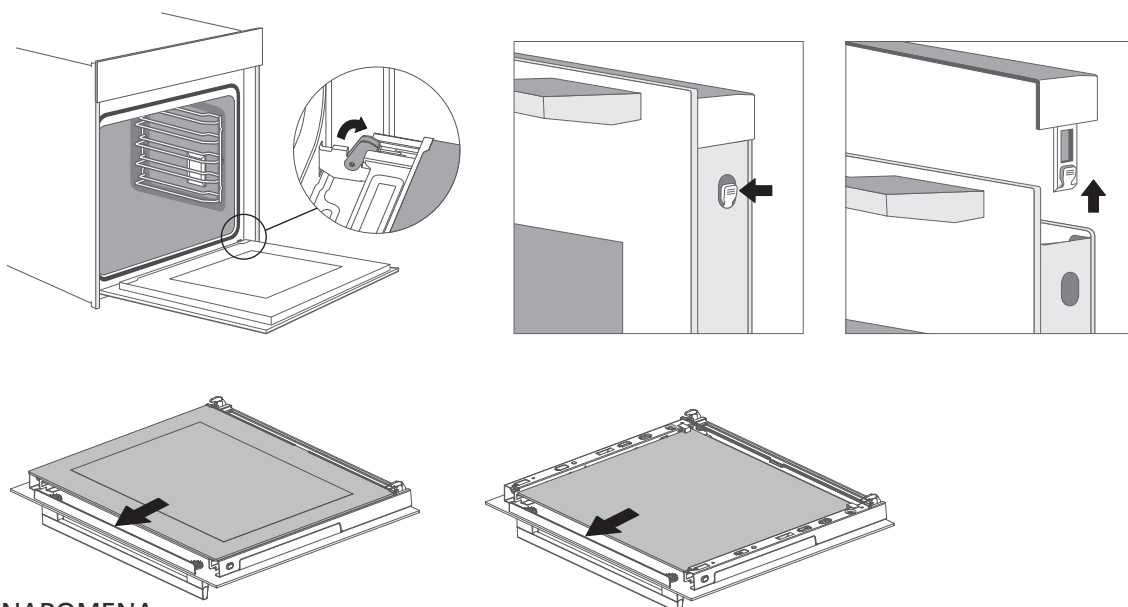

NAPOMENA

Ponovno pričvrstite vrata uređaja u suprotnom slijedu za uklanjanje.

RJEŠAVANJE PROBLEMA

Ako problem ne može biti riješen ili se pojave drugi problemi, molimo kontaktirajte servis nakon prodaje.

Problem	Mogući razlog	Rješenje
Nije moguće pokrenuti	<ul style="list-style-type: none">• Napajanje nije spojeno	<ul style="list-style-type: none">• spojite napajanje
	<ul style="list-style-type: none">• Glavni prekidač napajanja nije uključen	<ul style="list-style-type: none">• Uključite prekidač napajanja
	<ul style="list-style-type: none">• Vrata pećnice nisu zatvorena	<ul style="list-style-type: none">• Zatvorite vrata pećnice
Lampa ne svijetli	<ul style="list-style-type: none">• Pokvarena je	<ul style="list-style-type: none">• Kontaktirajte servis nakon prodaje
Ima oštar miris ili dim	<ul style="list-style-type: none">• prva upotreba	<ul style="list-style-type: none">• Nema potrebne obrade
Hrana nije kuhana	<ul style="list-style-type: none">• Temperatura je preniska	<ul style="list-style-type: none">• Koristite višu temperaturu
	<ul style="list-style-type: none">• Porcija hrane je prevelika	<ul style="list-style-type: none">• Kuhajte hranu u manjim komadima ili produžite vrijeme kuhanja.
Izgorjela ili neujednačena hrana	<ul style="list-style-type: none">• Temperatura je postavljena previsoko ili je vrijeme grijanja predugo	<ul style="list-style-type: none">• Prilagodite temperaturu ili vrijeme kuhanja
	<ul style="list-style-type: none">• Hrana je preblizu grijaćoj cijevi	<ul style="list-style-type: none">• Prilagodite slojeve postavljanja dodatne opreme
Ventilator nije prestao raditi nakon prestanka grijanja	<ul style="list-style-type: none">• Ventilator kasni s puhanjem za raspršivanje topline	<ul style="list-style-type: none">• Nema potrebne obrade

ODLAGANJE I RECIKLIRANJE

Važne upute za okoliš

Usklađenost s WEEE direktivom i odlaganje otpadnog proizvoda:

Ovaj proizvod usklađen je s EU WEEE direktivom (2012/19/EU). Ovaj proizvod nosi simbol klasifikacije za otpadnu električnu i elektroničku opremu (WEEE).

Ovaj simbol označava da se ovaj proizvod ne smije odlagati s drugim kućanskim otpadom na kraju svog vijeka trajanja. Korišteni uređaji moraju se vratiti na službeno mjesto za prikupljanje radi recikliranja električnih elektroničkih uređaja. Kako biste pronašli ove sustave prikupljanja, obratite se lokalnim vlastima ili trgovcu kod kojeg je proizvod kupljen. Svako kućanstvo ima važnu ulogu u vraćanju i recikliranju starih aparata. Prikladno odlaganje korištenih aparata pomaže u sprječavanju potencijalnih negativnih posljedica po okoliš i ljudsko zdravlje.



Usklađenost s RoHS direktivom

Proizvod koji ste kupili usklađen je s EU RoHS direktivom (2011/65/EU).

Ne sadrži štetne i zabranjene materijale navedene u Direktivi.

Informacije o pakiranju

Ambalažni materijali proizvoda izrađeni su od reciklirajućih materijala prema našim Nacionalnim propisima o okolišu. Ne bacajte ambalažne materijale zajedno s kućanskim ili drugim otpadom. Odnosite ih na mjesta za prikupljanje ambalažnih materijala koja su odredila lokalna tijela.



